

12 INPUT, 12 OUTPUT VALVE CONTROLLER WITH CAN, SAE J1939

USER MANUAL

P/N: AX020400(A)

P/N: AX020400-01 – J1939 500kb/s Baud Rate

P/N: AX020400-02 – Custom J1939 Baud Rate, 1Mbits/s

P/N: AX020410(A) – Extended functionality

VERSION HISTORY

| Version | Date | Author | Modification |
|----------------|-------------------|-------------------|---|
| 1.0.0. | Dec 28, 2015 | Ilona Korpelainen | Initial Draft |
| - | January 15, 2016 | Amanda Wilkins | Marketing Review |
| 1.0.1. | March 23, 2016 | Ilona Korpelainen | Updated CAN Transmit and CAN Receive blocks |
| - | July 27, 2016 | Amanda Wilkins | Added CE marking and vibration compliance |
| 1.0.2. | August 22, 2017 | Antti Keränen | AX020410 description added |
| - | November 16, 2017 | Amanda Wilkins | Added pulse counter input to Technical Specification |
| 1.0.3. | November 23, 2018 | Antti Keränen | Document updated to underline the absence of Freq/PWM/Pulse detection modes on Universal Inputs 2, 4 & 6 and PWM/Digital Inputs 2 & 4. PID equations updated. |
| 1.04 | December 21, 2020 | Gustavo Del Valle | Added (A) part numbers |

ACRONYMS

| | |
|----------|---|
| ACK | Positive Acknowledgement (from SAE J1939 standard) |
| BATT +/- | Battery positive (a.k.a. Vps) or Battery Negative (a.k.a. GND) |
| DIN | Digital Input used to measure active high or low signals |
| DM | Diagnostic Message (from SAE J1939 standard) |
| DTC | Diagnostic Trouble Code (from SAE J1939 standard) |
| EA | Electronic Assistant®, p/n AX070502 (A Service Tool for Axiomatic ECUs) |
| ECU | Electronic Control Unit (from SAE J1939 standard) |
| GND | Ground reference (a.k.a. BATT-) |
| I/O | Inputs and Outputs |
| MAP | Memory Access Protocol |
| NAK | Negative Acknowledgement (from SAE J1939 standard) |
| PDU1 | A format for messages that are to be sent to a destination address, either specific or global (from SAE J1939 standard) |
| PDU2 | A format used to send information that has been labeled using the Group Extension technique and does not contain a destination address. |
| PGN | Parameter Group Number (from SAE J1939 standard) |
| PropA | Message that uses the Proprietary A PGN for peer-to-peer communication |
| PropB | Message that uses a Proprietary B PGN for broadcast communication |
| PWM | Pulse Width Modulation |
| RPM | Rotations per Minute |
| SPN | Suspect Parameter Number (from SAE J1939 standard) |
| TP | Transport Protocol |
| UIN | Universal input used to measure voltage, current, frequency or digital inputs |
| Vps | Voltage Power Supply (a.k.a. BATT+) |
| %dc | Percent Duty Cycle (Measured from a PWM input) |

TABLE OF CONTENTS

| | |
|--|-----------|
| 1. OVERVIEW OF CONTROLLER | 9 |
| 1.1. Input Function Blocks | 11 |
| 1.2. Input Filtering | 14 |
| 1.3. Output Function Blocks..... | 15 |
| 1.4. Diagnostic Function Blocks | 19 |
| 1.5. PID Control Function Block | 23 |
| 1.6. Lookup Table Function Block | 24 |
| 1.7. Programmable Logic Function Block..... | 25 |
| 1.8. Math Function Block | 27 |
| 1.9. Control Variable Data Blocks..... | 28 |
| 1.10. Simple Conditional Logic Function Blocks..... | 29 |
| 1.11. Set / Reset Function Block | 30 |
| 1.12. DTC React | 31 |
| 1.13. CAN Transmit Message Function Block..... | 31 |
| 1.13.1. CAN Transmit Message Setpoints | 31 |
| 1.15. CAN Receive Function Block | 32 |
| 1.16. Available Control Sources | 33 |
| 2. INSTALLATION INSTRUCTIONS | 36 |
| 2.1. Dimensions and Pinout..... | 36 |
| 3. OVERVIEW OF J1939 FEATURES | 37 |
| 3.1. Introduction to Supported Messages..... | 37 |
| 3.2. NAME, Address and Software ID | 38 |
| 4. ECU SETPOINTS ACCESSED WITH ELECTRONIC ASSISTANT | 40 |
| 4.1. Accessing the ECU Using EA..... | 40 |
| 4.2. J1939 Network Parameters | 41 |
| 4.3. Output Current Regulator Parameters..... | 42 |
| 4.4. Universal Input Setpoints..... | 43 |
| 4.5. Digital Input Setpoints..... | 44 |
| 4.6. Proportional Output Setpoints | 45 |
| 4.7. Digital Output Setpoints..... | 47 |
| 4.8. Constant Data List | 48 |
| 4.9. Variable Data List Setpoints | 49 |
| 4.10. PID Control | 50 |
| 4.11. Lookup Table | 51 |
| 4.12. Programmable Logic..... | 53 |
| 4.13. Math Function Block | 55 |
| 4.14. CAN Transmit Setpoints | 57 |
| 4.15. CAN Receive Setpoints | 60 |
| 4.16. DTC React | 61 |
| 4.17. General Diagnostics Options..... | 62 |

4.18. Diagnostics Blocks..... 63

5. REFLASHING OVER CAN WITH EA BOOTLOADER..... 66

APPENDIX A - TECHNICAL SPECIFICATION.....A-1

| | |
|--|----|
| Table 1 – Universal Input Sensor Type Options (*AX020410 specific) | 11 |
| Table 2 – Debounce Time Options..... | 12 |
| Table 3 - Software Debounce Filter Times | 12 |
| Table 4 – Pullup/Pulldown Resistor Options | 12 |
| Table 5 – Active High/Low Options | 13 |
| Table 6 – Digital Input Sensor Type versus Input State | 13 |
| Table 7 – AX020410 Pulse Counter Sensor Type versus Input State | 13 |
| Table 8 – Filter Type Options | 14 |
| Table 9 – Output Type Options for Proportional Output..... | 15 |
| Table 10 – Digital Response Options..... | 16 |
| Table 11 – Enable Response Options..... | 18 |
| Table 12 – Override Response Options | 18 |
| Table 13 – Fault Response Options..... | 18 |
| Table 14 – Lamp Set by Event in DM1 Options | 21 |
| Table 15 – FMI for Event Options..... | 22 |
| Table 16 – Low Fault FMIs and corresponding High Fault FMIs | 22 |
| Table 17 – PID Response Options (*AX020410 specific)..... | 23 |
| Table 18 – X-Axis Type Options..... | 25 |
| Table 19 – PointN – Response Options | 25 |
| Table 20 – Table X – Condition Y, Operator Options..... | 26 |
| Table 21 – Table X – Conditions Logical Operator Options..... | 26 |
| Table 22 – Math function X Operator Options (*AX020410 specific) | 28 |
| Table 23 – Available operations for Operator 1 and Operator 2 | 29 |
| Table 24 – Available operations for Operator 3..... | 30 |
| Table 25 – Set-Reset Function block operation | 30 |
| Table 26 – CAN Transmit Data Type Options..... | 32 |
| Table 27 – Available Control Sources and Numbers | 34 |
| Table 28 – AX020400/AX020410 Connector Pinout (** = NO Frequency/PWM/Pulse modes available)..... | 36 |
| Table 29 – J1939 Network Setpoints | 41 |
| Table 30 – Output Current Regulator Setpoints | 42 |
| Table 31 – Universal Input Setpoints..... | 43 |
| Table 32 – Digital Input Setpoints..... | 44 |
| Table 33 – Proportional Output Setpoints | 46 |
| Table 34 – Digital Output Setpoints..... | 47 |
| Table 35 – Variable Data Setpoints..... | 49 |
| Table 36 – PID Control Setpoints | 50 |
| Table 37 – Lookup Table Setpoints..... | 52 |
| Table 38 – Programmable Logic Setpoints | 54 |
| Table 39 – Math Function Setpoints..... | 56 |
| Table 40 – CAN Transmit Message Setpoints | 59 |
| Table 41 – CAN Receive Setpoints..... | 60 |
| Table 42 – DTC React Setpoints..... | 61 |
| Table 43 – General Diagnostics Options Setpoints..... | 62 |
| Table 44 – Diagnostic Block Setpoints..... | 65 |

Figure 1 - AX020400 Block Diagram 9

Figure 2 – Hotshot Digital Profile 16

Figure 3 – Double Minimum and Maximum Error Thresholds 20

Figure 4 - Analog source to Digital input 35

Figure 5 – AX020400/AX020410 Dimensional Drawing 36

Figure 6 - Screen Capture of J1939 Setpoints 41

Figure 7 - Screen Capture of Output Current Regulator Setpoints 42

Figure 8 - Screen Capture of Universal Input Setpoints 43

Figure 9 - Screen Capture of Digital Input Setpoints 44

Figure 10 - Screen Capture of Proportional Output Setpoints 45

Figure 11 - Screen Capture of Digital Output Setpoints 47

Figure 12 - Screen Capture of Constant Data List Setpoints 48

Figure 13 – Screen Capture of Variable Data List Setpoints 49

Figure 14 - Screen Capture of PID Control Setpoints 50

Figure 15 - Screen Capture of Lookup table Setpoints 51

Figure 16 - Screen Capture of Programmable Logic Setpoints 53

Figure 17 - Screen Capture of Math Function Block Setpoints 55

Figure 18 - Screen Capture of CAN Transmit Message Setpoints 57

Figure 19 - Screen Capture of CAN Receive Message Setpoints 60

Figure 20 - Screen Capture of DTC React Setpoints 61

Figure 21 - Screen Capture of General Diagnostics Options Setpoints 62

Figure 22 - Screen Capture of Diagnostic Block Setpoints 63

REFERENCES

| | |
|------------|--|
| J1939 | Recommended Practice for a Serial Control and Communications Vehicle Network, SAE, April 2011 |
| J1939/21 | Data Link Layer, SAE, December 2010 |
| J1939/71 | Vehicle Application Layer, SAE, March 2011 |
| J1939/73 | Application Layer-Diagnostics, SAE, February 2010 |
| J1939/81 | Network Management, SAE, May 2003 |
| TDAX020400 | Technical Datasheet, 12 Input 12 Output Valve Controller with CAN, Axiomatic Technologies 2015 |
| UMAX07050x | User Manual, Electronic Assistant and USB-CAN, Axiomatic Technologies, 2017 |

This document assumes the reader is familiar with the SAE J1939 standard. Terminology from the standard is used, but not described in this document.



NOTE: This product is supported by Electronic Assistant® V5.13.92 and higher.

1. OVERVIEW OF CONTROLLER

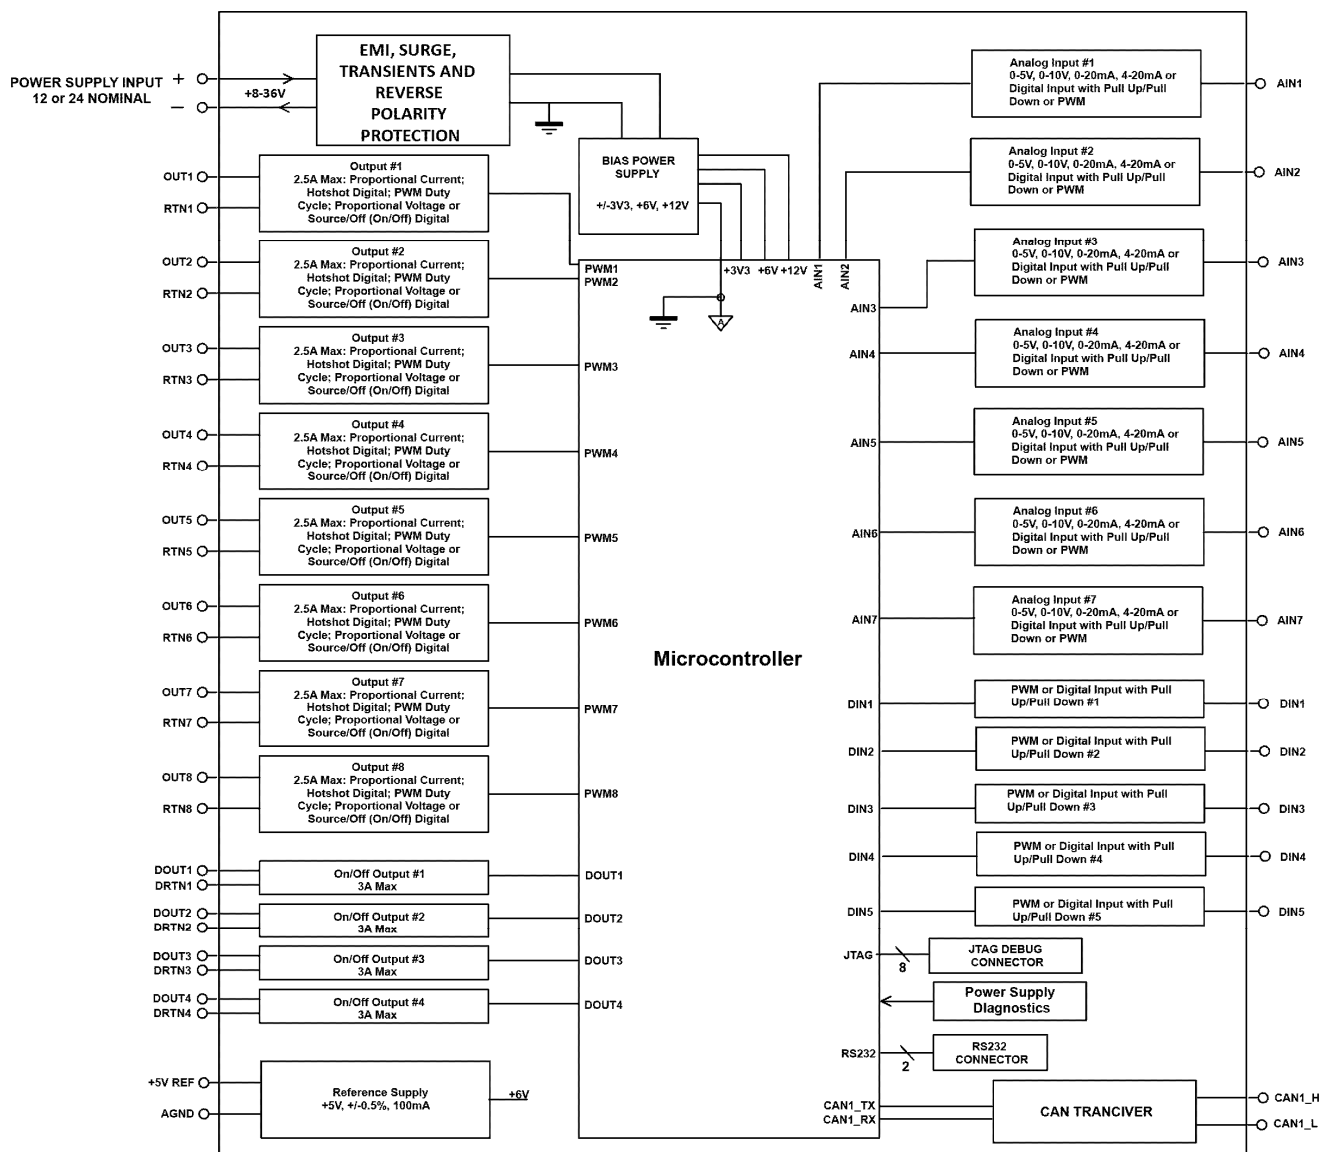


Figure 1 - AX020400 Block Diagram

The 12 Input 12 Output Valve Controller is designed for extremely versatile control of up to eight proportional and four on/off outputs to directly drive solenoids or other loads. Its flexible circuit design gives the user a wide range of configurable input and output types. The sophisticated control algorithms allow the user to program the controller for a wide range of applications without the need for custom software.

The controller has twelve inputs. Of which seven are Universal Inputs that can be configured to measure analog voltage or current or digital signal and five Digital Inputs that can be configured to measure digital signals. In addition, six of the Universal inputs can be configured to measure resistance and four of the Universal Inputs and three of the Digital Inputs accept PWM/frequency signals. Measured input data can be sent to a SAE J1939 CAN Network or used to drive outputs directly or through the configurable control algorithms.

Half-bridge outputs with high side sourcing up to 2.5A produce the output signals. The Proportional Outputs can be configured to drive proportional current (up to 2.5A), hotshot digital current, proportional voltage (up to power supply), proportional PWM or straight on/off digital loads. Any of the outputs can be configured to use any of the on-board inputs as either a control signal or an enable signal as well as SAE J1939 CAN Network data.

A *Windows*-based Axiomatic Electronic Assistant[®] EA (EA) is used to configure the controller via an USB-CAN (AX070501) device. Configurable properties, EA setpoints, are outlined in chapter 4. Setpoint configuration can be saved in a file which can be used to easily program the same configuration into another 12 Input 12 Output Valve Controller. Throughout this document EA setpoint names are referred with bolded text in double-quotes and the setpoint option is referred with italicized text in single-quotes. For example, “**Input Sensor Type**” setpoint set to option ‘*Voltage 0 to 5V*’.

In this document, the configurable properties of the ECU are divided into function blocks, namely Input Function Block, Output Function Block, Diagnostic Function Block, PID Control Function Block, Lookup Table Function Block, Programmable Logic Function Block, Math Function Block, DTC React Function Block, CAN Transmit Message Function Block and CAN Receive Message Function Block. These function blocks are presented in detail in next subchapters.

The 12 Input 12 Output Valve Controller can be ordered using the following part numbers depending on the application.

| | |
|-------------|--|
| AX020400 | Controller with the default J1939 baud rate (250kbits/s). |
| AX020400-01 | Controller with the 500kbits/s J1939 baud rate. |
| AX020400-02 | Controller with a custom 1Mbits/s J1939 baud rate. |
| AX020410 | Controller with extended selection of function blocks (250kbits/s) |

1.1. Input Function Blocks

The controller has altogether twelve inputs, which are divided into Universal and Digital Inputs. Universal Inputs can be configured to measure voltage, current, frequency, pulse width, pulse count or digital on/off signals. Digital Inputs can be configured to measure frequency, pulse width, pulse count and digital on/off signals. In addition, Universal Inputs 1 to 6 can be configured to measure resistance.



Please note, that **Frequency, Signal Pulse Width and Pulse Count** can be measured **only** using **Universal Inputs 1, 3, 5, 7 and Digital Inputs 1, 3, 5**. The other inputs do not have these modes available in the configuration.

Please also see Table 28 for pin-out information.

Universal and Digital Input setpoint groups have the “**Input Sensor Type**” setpoint, which is used to configure input type. Selecting input type effects on other setpoints and how they are interpreted and should thus be selected first on this block. The input sensor types are listed in Table 1. Digital inputs do not have analog (10-21) sensor type options in “**Input Sensor Type**” options.

| | |
|-----|---------------------------------------|
| 0 | <i>Disabled</i> |
| 12 | <i>Voltage 0 to 5 V</i> |
| 13 | <i>Voltage 0 to 10 V</i> |
| 20 | <i>Current 0 to 20 mA</i> |
| 21 | <i>Current 4 to 20 mA</i> |
| 30 | <i>Resistive 20 Ohm to 250 Ohm</i> |
| 40 | <i>Frequency 0.5 to 50 Hz</i> |
| 41 | <i>Frequency 10 Hz to 1 kHz</i> |
| 42 | <i>Frequency 100 Hz to 10 kHz</i> |
| 50 | <i>PWM Low Frequency (<1kHz)</i> |
| 51 | <i>PWM High Frequency (>100Hz)</i> |
| 60 | <i>Digital (normal)</i> |
| 61 | <i>Digital (inverse)</i> |
| 62 | <i>Digital (latched)</i> |
| 70* | <i>Counter</i> |
| 71* | <i>Pulse Counter</i> |
| 72* | <i>Pulse Counter (both edges)</i> |

Table 1 – Universal Input Sensor Type Options (*AX020410 specific)

On Universal Inputs, analog voltage (i.e. 0-5V, 0-10V) or current (0-20mA, 4-20mA) signals go directly to a 12-bit analog-to-digital converter (ADC) on the processor. The voltage input is a high impedance input protected against shorts to GND or Vcc. In current mode, a 250Ω resistor is used to measure the input signal. Analog signals should be connected to the GND reference pins provided on the connector, per Table 28.

Resistive inputs can accurately read a resistive value connected between the input pin and GND A. The 12 Input 12 Output Valve Controller multiplexes a configurable current source (20uA, 200uA, 2mA, 20mA) to the input pin set up as resistive input, and measures voltage created across the input.

Depending on the value of the resistive load, the input will self-calibrate to the appropriate sourcing current.

| | |
|---|----------------|
| 0 | <i>None</i> |
| 1 | <i>111ns</i> |
| 2 | <i>1.78us</i> |
| 3 | <i>14.22us</i> |

Table 2 – Debounce Time Options

An additional software debounce filter can be used with Digital Input types for filtering the inputs using longer time constants than with the default debounce filter. The available software implemented debounce times are listed in Table 3.

| | |
|---|---------------|
| 0 | <i>0ms</i> |
| 1 | <i>10ms</i> |
| 2 | <i>20ms</i> |
| 3 | <i>40ms</i> |
| 4 | <i>100ms</i> |
| 5 | <i>200ms</i> |
| 6 | <i>400ms</i> |
| 7 | <i>1000ms</i> |

Table 3 - Software Debounce Filter Times

Frequency/RPM or Pulse Width Modulated (PWM) “**Input Sensor Type**” options connect an input to 16-bit timer pin on the processor. “**Debounce Time**” setpoint is used to select an input capture filter for the timer pin in question. “**Pulse Per Revolution**” setpoint is only associated with the frequency input type. If the setpoint is set to *True*, then the input data will be reported as in rotations-per-minute (RPM). Otherwise, frequency inputs are measured in Hertz.



Digital Inputs 1 & 2 have a limited input voltage range of 0...5V. Inaccurate and/or out-of-range Frequency/RPM and PWM duty cycle measurements will occur if this range is exceeded.

Universal and Digital Inputs have all available three Digital “**Input Sensor Type**” options: Normal, Inverse and Latched. With digital input sensor types, the input measurement is given, either 1 (ON) or 0 (OFF). The two Digital Inputs measure digital voltage with 1V threshold, whereas Universal inputs measure digital voltage with 3V threshold.

On Frequency, PWM and digital input modes 22kΩ pull-up or pull-down resistors can be enabled or disabled by setting the value of the “**Pullup/Pulldown Resistor**” setpoint. Setpoint options are given in Table 4. By default, pull-down resistors are enabled for all inputs.

| | |
|---|------------------------|
| 0 | <i>Pullup/down Off</i> |
| 1 | <i>22 kΩ Pullup</i> |
| 2 | <i>22 kΩ Pulldown</i> |

Table 4 – Pullup/Pulldown Resistor Options

“**Active High/Active Low**” setpoint is used to configure how signal high and low are interpreted. Setpoint options are given in Table 5. By default, all inputs are selected to be Active High, which means that signal high is interpreted as 1(ON) and signal low as 0(OFF).

| | |
|---|-------------|
| 0 | Active High |
| 1 | Active Low |

Table 5 – Active High/Low Options

Table 6 shows the effect of different digital input types on input signal measurement interpretation with recommended “**Pullup/Pulldown Resistor**” and “**Active High/Low**” combinations. Fault diagnostics are not available for digital input types.

| Input Sensor Type | | Pulldown Active High | Pullup Active Low | Input measured (state) |
|-------------------|--------------------------|-------------------------|----------------------|------------------------|
| 60 | <i>Digital (normal)</i> | High | Low or Open | 1 (ON) |
| | | Low or Open | High | 0 (OFF) |
| 61 | <i>Digital (inverse)</i> | High or Open | Low | 1 (ON) |
| | | Low | High or Open | 0 (OFF) |
| 62 | <i>Digital (latched)</i> | High to Low | Low to High | 0 (no change) |
| | | Low to High | High to Low | 1 (state change) |

Table 6 – Digital Input Sensor Type versus Input State

| Input Sensor Type | Function |
|-------------------|--|
| 70 | <i>Counter</i> Count pulses in the specified time window (defined using Measuring Window setpoint) |
| 71 | <i>Pulse Counter</i> Count pulses (only rising edges). Maximum number before wrapping back to zero can be defined using Max Pulse Count setpoint. |
| 72 | <i>Pulse Counter (both edges)</i> Count pulses (both rising and falling edges). Maximum number before wrapping back to zero can be defined using Max Pulse Count setpoint. |

Table 7 – AX020410 Pulse Counter Sensor Type versus Input State

Table 7 describes the Pulse Counter Input types available in AX020410 firmware. These input types are available only with the inputs capable of detecting frequency (Universal Inputs 1, 3, 5 & 7 and Digital Inputs 1, 3 & 5). The main difference between the ‘*Counter*’ and ‘*Pulse Counter*’ types is that ‘*Counter*’ measures the time (defined using “**Measuring Window**”) which is needed to count the specified number of pulses. The ‘*Pulse Counter*’ modes count pulses (using edge detection), independent of time (max count is defined using “**Max Pulse Count**”).

The “**Minimum Range**” and “**Maximum Range**” setpoints are used to define range of the signal input outputs as a control source. For example, if “**Maximum Range**” is set to 4V for an input, the control signal is saturated at 4V if input signal rises above 4V. The “**Minimum Range**” and “**Maximum Range**” setpoints are interpreted in input types units, thus they should be re-adjusted after editing “**Input Sensor Type**”.

Software filters can be applied to the measured input signal. Setpoints “**Software Filter Type**” and “**Software Filter Constant**” are used to configure the software filter. By default, no filter is applied to the signal. Software filtering is described in detail in section below.

The rest of the setpoints in the Input setpoint group are used to configure input related fault diagnostics and are described in section 1.4.

1.2. Input Filtering

Measured input data from universal inputs can be filtered to form desired CAN message data. Input filters are configured with “**Filter Type**” and “**Filter Constant**” setpoints. Filters are configured for each input individually.

| | |
|---|--------------------------|
| 0 | <i>No Filtering</i> |
| 1 | <i>Moving Average</i> |
| 2 | <i>Repeating Average</i> |

Table 8 – Filter Type Options

“**Filter Type**” setpoint defines the type of software filter used. Setpoint options are ‘*No Filtering*’, ‘*Moving Average*’ and ‘*Repeating Average*’. The ‘*No Filtering*’ option applies no filtering to the measured input data. The ‘*Moving Average*’ option applies the transfer function below to the measured input data, where $Value_N$ is the current value of the CAN message data, $Value_{N-1}$ is the previous CAN message data and Filter Constant is the value of the “**Filter Constant setpoint**”.

Equation 1 - Moving Average Transfer Function:

$$Value_N = Value_{N-1} + \frac{(Input - Value_{N-1})}{Filter\ Constant}$$

Equation 2 - Repeating Average Transfer Function:

$$Value = \frac{\sum_0^N Input_N}{N}$$

The ‘*Repeating Average*’ option applies the transfer function above to the measured input data, where N is value of the “**Filter Constant**” setpoint. At every reading of the input value, the value is added to the sum. At every Nth read, the sum is divided by N, and the result is new CAN message data. The sum is set to zero for the next read and summing is started again.

1.3. Output Function Blocks

The controller has all together twelve outputs, eight Proportional Outputs and four Digital Outputs. The Proportional Outputs are half-bridge drive with high side sourcing up to 2.5A. Outputs 1 to 4 are connected into mutual timer peripheral thus they are operated in common frequency. Outputs 5, 6, 7 and 8 are connected into separate timers and can have an individual, different frequency. Digital Outputs are on/off outputs with sourcing up to 3A.

In Proportional Output group, “**Output Type**” setpoint determines what kind of signal the output produces. Changing this setpoint causes other setpoints in the group to update to match selected type, thus the “**Output Type**” should be selected before configuring other setpoints within the setpoint group. “**Output Type**” setpoint options are listed in Table 9. Digital outputs have only ‘*Digital On/Off*’ type in addition to ‘*Disabled*’ option.

| | |
|---|--------------------------------------|
| 0 | <i>Disabled</i> |
| 1 | <i>Proportional Current (0-2.5A)</i> |
| 2 | <i>Digital Hotshot (0-2.5A)</i> |
| 3 | <i>PWM Duty Cycle (0-100%)</i> |
| 4 | <i>Proportional Voltage (0-Vps)</i> |
| 5 | <i>Digital On/off (0-Vps)</i> |

Table 9 – Output Type Options for Proportional Output

‘*Proportional Current*’ type has associated with it two setpoints not used by other types, which are the “**Dither Frequency**” and “**Dither Amplitude**” values. The output is controlled by high frequency signal (25 kHz), with the low frequency dither superimposed on top. The dither frequency will match exactly what is programmed into the setpoint, but the exact amplitude of the dither will depend on the properties of the load coil. When adjusting the dither amplitude value, select one that is high enough to ensure an immediate response to the coil to small changes in the control inputs, but not so large as to affect the accuracy or stability of the output. Refer to the coil’s datasheet for more information.

The ‘*Proportional Voltage*’ uses the measured value of the power supply and adjusts the duty cycle of the output such that the average value will match the target output voltage. If the output is running at a high frequency (for example 25 kHz), the voltage can be easily averaged using a simple low pass filter.

The ‘*PWM Duty Cycle*’ option allows the user to run the output at fixed frequency configure with “**PWM Output Frequency**” setpoint, while the duty cycle changes depending on the control signal. Outputs 1 to 4 run on same output frequency, thus changing the frequency for one output changes frequency of the others as well. “**PWM Output Frequency**” is editable only if none of the outputs 1 to 4 is set to ‘*Proportional Current*’ or ‘*Hotshot Digital*’ type. Configuring output to ‘*Proportional Current*’ or ‘*Hotshot Digital*’ type changes frequency automatically to 25 kHz. Output 5 is separate and can have an individual frequency.

Instead of proportional output control, there are also two types of digital responses possible as well. With the ‘*Digital On/Off*’ type, should the control require the output to be on, it will be turned on at whatever the system power supply is. The output will source whatever current is required by the load, up to 2,5A with Proportional Output or to 3A with Digital Output.

If a digital “**Output Type**” has been selected the “**Digital Response**” setpoint will be enabled as shown in Table 10.

| | |
|---|-----------------------|
| 0 | <i>Normal On/Off</i> |
| 1 | <i>Inverse Logic</i> |
| 2 | <i>Latched Logic</i> |
| 3 | <i>Blinking Logic</i> |

Table 10 – Digital Response Options

In a ‘*Normal*’ response, when the Control input commands the output ON, then the output will be turned ON. However, in an ‘*Inverse*’ response, the output will be ON unless the input commands the output ON, in which case it turns OFF.

If a ‘*Latched*’ response is selected, when the input commands the state from OFF to ON, the output will change state.

If a ‘*Blinking*’ response is selected, then while the input command the output ON, it will blink at the rate in the “**Digital Blink Rate**” setpoint. When commanded OFF, the output will stay off. A blinking response is only available with a ‘*Digital On/Off*’ type of output (not a Hotshot type.)

The ‘*Hotshot Digital*’ type is different from in simple ‘*Digital On/Off*’ in that it still controls the current through the load. This type of output is used to turn on a coil then reduce the current so that the valve will remain open, as shown in Figure 2. Since less energy is used to keep the output engaged, this type of response is very useful to improve overall system efficiency. With this output type there are associated three setpoints: “**Hold Current**”, “**Hotshot Current**” and “**Hotshot Time**” which are used to configure form of the output signal as shown in Figure 2.

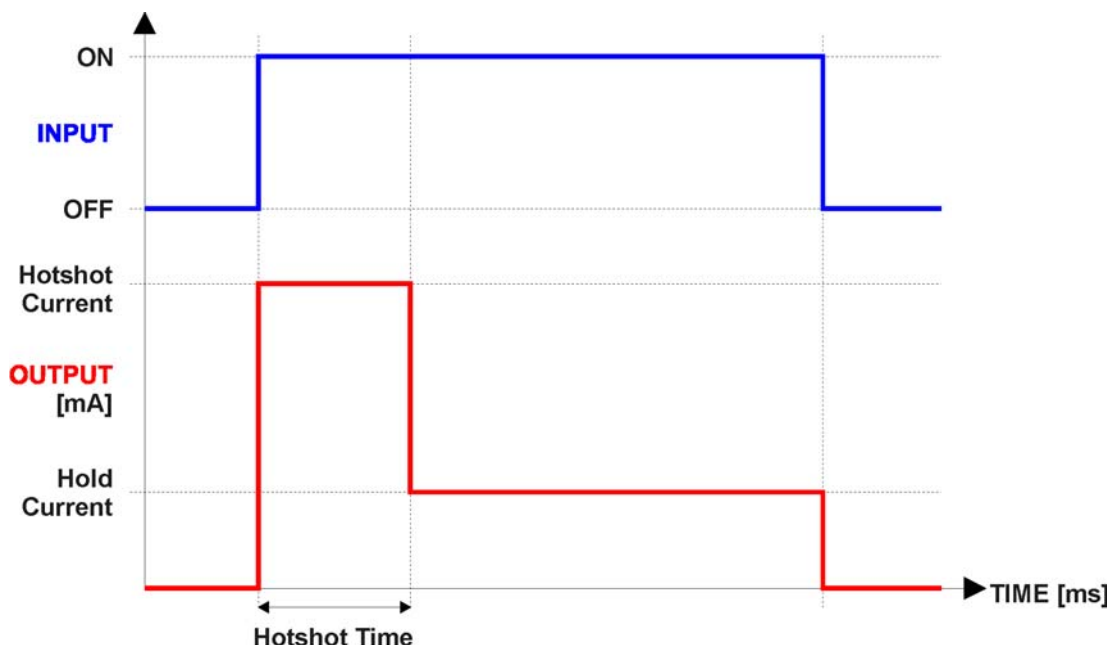


Figure 2 – Hotshot Digital Profile

For Proportional outputs signal minimum and maximum values are configured with “**Output At Minimum Command**” and “**Output At Maximum Command**” setpoints. Value range for both setpoints is limited by selected “**Output Type**”.

Regardless of what type of control input is selected, the output will always respond in a linear fashion to changes in the input per Equation 3.

$$y = mx + a$$

$$m = \frac{Y_{max} - Y_{min}}{X_{max} - X_{min}}$$

$$a = Y_{min} - m * X_{min}$$

Equation 3 - Linear Slope Calculations

In the case of the Output Control Logic function block, X and Y are defined as

Xmin = Control Input Minimum Ymin = “**Output at Minimum Command**”

Xmax = Control Input Maximum Ymax = “**Output at Maximum Command**”

In all cases, while X-axis has the constraint that Xmin < Xmax, there is no such limitation on the Y-axis. Thus configuring “**Output At Minimum Command**” to be greater than “**Output At Maximum Command**” allows output to follow control signal inversely.

In order to prevent abrupt changes at the output due to sudden changes in the command input, the user can choose to use the independent up or down ramps to smooth out the coil’s response. The “**Ramp Up**” and “**Ramp Down**” setpoints are in milliseconds, and the step size of the output change will be determined by taking the absolute value of the output range and dividing it by the ramp time.

The “**Control Source**” setpoint together with “**Control Number**” setpoint determine which signal is used to drive the output. For example, setting “**Control Source**” to ‘*Universal Input Measured*’ and “**Control Number**” to ‘1’, connects signal measured from Universal Input1 to the output in question. The input signal is scaled per input type range between 0 and 1 to form control signal. Outputs respond in a linear fashion to changes in control signal. If a non-digital signal is selected to drive digital output the command state will be 0 (OFF) at or below the “**Output At Minimum Command**”, 1 (ON) at or above “**Output At Maximum Command**” and will not change in between those points.

In addition to the Control input, Proportional Outputs also support Enable and Override inputs.

The “**Enable Source**” setpoint together with “**Enable Number**” setpoint determine the enable signal for the output in question. The “**Enable Response**” setpoint is used to select how output will respond to the selected Enable signal. “**Enable Response**” setpoint options are listed in Table 11. If a non-digital signal is selected as Enable signal the signal is interpreted as shown in Figure 4.

| | |
|---|---|
| 0 | <i>Enable When On, Else Shutoff</i> |
| 1 | <i>Enable When On, Else Rampoff</i> |
| 2 | <i>Enable When Off, Else Shutoff</i> |
| 3 | <i>Enable When Off, Else Rampoff</i> |
| 4 | <i>Enable When On, Else Ramp To Min</i> |
| 5 | <i>Enable When On, Else Ramp To Max</i> |

Table 11 – Enable Response Options

Override input allows the output drive to be configured to go to a default value in the case of the override input being engaged/disengaged, depending on the logic selected in “**Override Response**”, presented on Table 12. When active, the output will be driven to the value in “**Output at Override Command**” regardless of the value of the Control input. The “**Override Source**” and “**Override Number**” together determine the Override input signal.

| | |
|---|--------------------------|
| 0 | <i>Override When On</i> |
| 1 | <i>Override When Off</i> |

Table 12 – Override Response Options

If a fault is detected in any of the active inputs (Control/Enable/Override) the output will respond per “**Control Fault Response**” setpoint as outlined in Table 13. Fault Value is defined by “**Output in Fault Mode**” setpoint value, which is interpreted in selected output units.

| | |
|---|--------------------------|
| 0 | <i>Shutoff Output</i> |
| 1 | <i>Apply Fault Value</i> |
| 2 | <i>Hold Last Value</i> |

Table 13 – Fault Response Options

Another fault response that can be enabled is that a power supply over voltage or under voltage will automatically disable ALL outputs. Note: this setpoint is associated with the **Power Supply Diag** function block. Also, if the **Over Temperature Diag** function block is enabled, then a microprocessor over-temperature reading disables all the outputs until it has cooled back to the operating range.

Fault detection is available for current output types. A current feedback signal is measured and compared to desired output current value. Fault detection and associated setpoints are presented in section 1.4.

The outputs are inherently protected against a short to GND or +Vps by circuitry. In case of a dead short, the hardware will automatically disable the output drive, regardless of what the processor is commanding for the output. When this happens, the processor detects output hardware shutdown and commands off the output in question. It will continue to drive non-shortened outputs normally and periodically (every 5 seconds) try to re-engage the short load, if still commanded to do so. If the fault has gone away since the last time the output was engaged while shorted, the controller will automatically resume normal operation.

In the case of an open circuit, there will be no interruption of the control for any of the outputs. The processor will continue to attempt to drive the open load.

The measured current through the load is available to be broadcasted on a CAN message if desired. It is also used as the input to the diagnostic function block for each output, and an open or shorted output can be broadcasted in a DM1 message on the CAN network.

1.4. Diagnostic Function Blocks

The 12 Input 12 Output Valve Controller supports diagnostic messaging. DM1 message is a message, containing Active Diagnostic Trouble Codes (DTC) that is sent to the J1939 network in case a fault has been detected. A Diagnostic Trouble Code is defined by the J1939 standard as a four-byte value.

In addition to supporting the DM1 message, the following are supported:

| | | |
|-----|--------------------------|--|
| SPN | Suspect Parameter Number | (user defined) |
| FMI | Failure Mode Identifier | (see Table 15 and Table 16) |
| CM | Conversion Method | (always set to 0) |
| OC | Occurrence Count | (number of times the fault has happened) |

| | | |
|------|---|----------------------|
| DM2 | Previously Active Diagnostic Trouble Codes | Sent only on request |
| DM3 | Diagnostic Data Clear/Reset of Previously Active DTCs | Done only on request |
| DM11 | Diagnostic Data Clear/Reset for Active DTCs | Done only on request |

Fault detection and reaction is a standalone functionality that can be configured to monitor and report diagnostics of various controller parameters. The 12 Input 12 Output Valve Controller supports 16 Diagnostics Definitions, each freely configurable by the user.

Note, that the AX020410 controller supports only 12 Diagnostics Definitions while all 16 Diagnostics Definitions are available in AX020400.

By default, the monitoring of operating voltage, CPU temperature and receive message timeouts is configured to diagnostics blocks 1, 2 and 3., In case any of these three diagnostics blocks are needed for some other use, the default settings can be adjusted by the user to suit the application.

There are 4 fault types that can be used, “**Minimum and maximum error**”, “**Absolute value error**”, “**State error**” and “**Double minimum and maximum error**”.

Minimum and maximum error has two thresholds, “MIN Shutdown” and “MAX Shutdown” that have configurable, independent diagnostics parameters (SPN, FMI, Generate DTCs, delay before flagging status). In case the parameter to monitor stays between these two thresholds, the diagnostic is not flagged.

Absolute value error has one configurable threshold with configurable parameters. In case the parameter to monitor stays below this threshold, the diagnostic is not flagged.

State error is similar to the Absolute value error, the only difference is that State error does not allow the user to specify specific threshold values; thresholds '1' and '0' are used instead. This is ideal for monitoring state information, such as received message timeouts.

Double minimum and maximum error lets user to specify four thresholds, each with independent diagnostic parameters. The diagnostic status and threshold values is determined and expected as show in Figure 3 below.

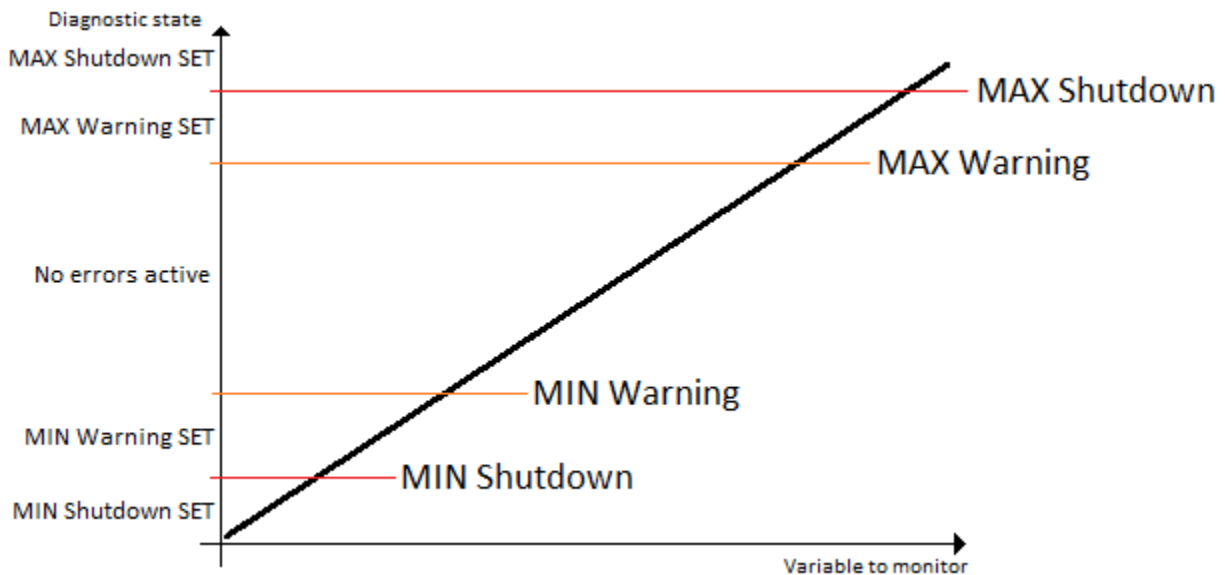


Figure 3 – Double Minimum and Maximum Error Thresholds

In case any of the Diagnostics blocks is configured to monitor Output Current Feedback, there is an internal error status flag maintained automatically for that particular output. This internal flag can be used for driving the particular output to a specified state in case of diagnostic event using Proportional Current Output setpoints “Control Fault Response”, “Output in Fault Mode” and “Fault Detection Enabled”.

There is also built in error status flags for power supply and CPU temperature monitoring. In case any of the diagnostics blocks is measuring these two parameters, the corresponding internal error status flags can be used for shutting down the unit in case of failure. The setpoints “**Power Fault Disables Outputs**” and “**Over Temperature Shutdown**” can be used for enabling the shutdown of the unit (shutdown == output driving is turned off).

While there are no active DTCs, the 12 Input 12 Output Valve Controller will send “No Active Faults” message. If a previously inactive DTC becomes active, a DM1 will be sent immediately to reflect this. As soon as the last active DTC goes inactive, a DM1 indicating that there are no more active DTCs will be sent.

If there is more than one active DTC at any given time, the regular DM1 message will be sent using a multipacket message to the Requester Address using the Transport Protocol (TP).



At power up, the DM1 message will not be broadcasted until after 5 second delay. This is done to prevent any power up or initialization conditions from being flagged as an active error on the network.

When the fault is linked to a DTC, a non-volatile log of the occurrence count (OC) is kept. As soon as the controller detects a new (previously inactive) fault, it will start decrementing the “**Delay before Event is flagged**” timer for that Diagnostic function block. If the fault has remained present during the delay time, then the controller will set the DTC to active, and will increment the OC in the log. A DM1 will immediately be generated that includes the new DTC. The timer is provided so that intermittent faults do not overwhelm the network as the fault comes and goes, since a DM1 message would be sent every time the fault shows up or goes away.

By default, the fault flag is cleared when error condition that has caused it goes away. The DTC is made Previously Active and is it is no longer included in the DM1 message. To identify a fault having happened, even if the condition that has caused is one away, the “**Event Cleared only by DM11**” setpoint can be set to ‘*True*’. This configuration enables DTC to stay Active, even after the fault flag has been cleared, and be included in DM1 message until a Diagnostic Data Clear/Reset for Active DTCs (DM11) has been requested.

As defined by J1939 Standard the first byte of the DM1 message reflects the Lamp status. “**Lamp Set by Event**” setpoint determines the lamp type set in this byte of DTC. “**Lamp Set by Event**” setpoint options are listed in Table 14. By default, the ‘*Amber, Warning*’ lamp is typically the one set be any active fault.

| | |
|---|----------------------|
| 0 | <i>Protect</i> |
| 1 | <i>Amber Warning</i> |
| 2 | <i>Red Stop</i> |
| 3 | <i>Malfunction</i> |

Table 14 – Lamp Set by Event in DM1 Options

“**SPN for Event**” defines suspect parameter number used as part of DTC. The default value zero is not allowed by the standard, thus no DM will be sent unless “**SPN for Event**” in is configured to be different from zero. **It is user’s responsibility to select SPN that will not violate J1939 standard.** When the “**SPN for Event**” is changed, the OC of the associated error log is automatically reset to zero.

| | |
|----|--|
| 0 | <i>Data Valid But Above Normal Operational Range - Most Severe Level</i> |
| 1 | <i>Data Valid But Below Normal Operational Range - Most Severe Level</i> |
| 2 | <i>Data Intermittent</i> |
| 3 | <i>Voltage Above Normal, Or Shorted To High Source</i> |
| 4 | <i>Voltage Below Normal, Or Shorted To Low Source</i> |
| 5 | <i>Current Below Normal Or Open Circuit</i> |
| 6 | <i>Current Above Normal Or Grounded Circuit</i> |
| 7 | <i>Mechanical Error</i> |
| 8 | <i>Abnormal Frequency Or Pulse Width Or Period</i> |
| 9 | <i>Abnormal Update Rate</i> |
| 10 | <i>Abnormal Rate Of Change</i> |
| 11 | <i>Root Cause Not Known</i> |
| 12 | <i>Bad Component</i> |
| 13 | <i>Out Of Calibration</i> |
| 14 | <i>Special Instructions</i> |
| 15 | <i>Data Valid But Above Normal Operating Range – Least Severe Level</i> |
| 16 | <i>Data Valid But Above Normal Operating Range – Moderately Severe Level</i> |
| 17 | <i>Data Valid But Below Normal Operating Range – Least Severe Level</i> |
| 18 | <i>Data Valid But Below Normal Operating Range – Moderately Severe Level</i> |
| 19 | <i>Network Error</i> |
| 20 | <i>Data Drifted High</i> |
| 21 | <i>Data Drifted Low</i> |
| 31 | <i>Condition Exists</i> |

Table 15 – FMI for Event Options

Every fault has associated a default FMI with them. The used FMI can be configured with “**FMI for Event**” setpoint, presented in Table 15. When an FMI is selected from Low Fault FMIs in Table 16 for a fault that can be flagged either high or low occurrence, it is recommended that the user would select the high occurrence FMI from the right column of Table 16. There is no automatic setting of High and Low FMIs in the firmware, the user can configure these freely.

| Low Fault FMIs | High Fault FMIs |
|--|--|
| <i>FMI=1, Data Valid But Below Normal Operation Range – Most Severe Level</i> | <i>FMI=0, Data Valid But Above Normal Operational Range – Most Severe Level</i> |
| <i>FMI=4, Voltage Below Normal, Or Shorted to Low Source</i> | <i>FMI=3, Voltage Above Normal, Or Shorted To High Source</i> |
| <i>FMI=5, Current Below Normal Or Open Circuit</i> | <i>FMI=6, Current Above Normal Or Grounded Circuit</i> |
| <i>FMI=17, Data Valid But Below Normal Operating Range – Least Severe Level</i> | <i>FMI=15, Data Valid But Above Normal Operating Range – Least Severe Level</i> |
| <i>FMI=18, Data Valid But Below Normal Operating Level – Moderately Severe Level</i> | <i>FMI=16, Data Valid But Above Normal Operating Range – Moderately Severe Level</i> |
| <i>FMI=21, Data Drifted Low</i> | <i>FMI=20, Data Drifted High</i> |

Table 16 – Low Fault FMIs and corresponding High Fault FMIs

1.5. PID Control Function Block

The PID Control function block is an independent logic block, but it is normally intended to be associated with proportional output control blocks described earlier. When the “**Control Source**” for an output has been setup as a ‘*PID Function Block*’, the command from the selected PID block drives the physical output on the 48 Pin I/O Controller.

The “**PID Target Command Source**” and “**PID Target Command Number**” setpoints determine control input and the “**PID Feedback Input Source**” and “**PID Feedback Input Number**” setpoints determine the established the feedback signal to the PID function block. The “**PID Response Profile**” will use the selected inputs as per the options listed in Table 17. When active, the PID algorithm will be called every “**PID Loop Update Rate**” in milliseconds.

| | |
|----|----------------------------------|
| 0 | <i>Single Output</i> |
| 1 | <i>Setpoint Control</i> |
| 2 | <i>On When Over Target</i> |
| 3 | <i>On When Below Target</i> |
| 4* | <i>Off When Within Tolerance</i> |

Table 17 – PID Response Options (*AX020410 specific)

When a ‘*Single Output*’ response is selected, the Target and Feedback inputs do not have to share the same units. In both cases, the signals are converted to a percentage values based on the minimum and maximum values associated with the source function block.

For example, a CAN command could be used to set the target value, in which case it would be converted to a percentage value using “**Receive Data Min**” and “**Receive Data Max**” setpoints in the appropriate ‘*CAN Receive X*’ function block. The closed-loop feedback signal (i.e. a 0-5V input) could be connected to ‘*Universal Input 1*’ and selected as the feedback source. In this case the value of the input would be converted to a percentage based on the “**Minimum Range**” and “**Maximum Range**” setpoints in the input block. The output of the PID function would depend on the difference between the commanded target and the measured feedback as a percentage of each signals range. In this mode, the output of the block would be a value from -100% to 100%.

When a ‘*Setpoint Control*’ response is selected, the “**PID Target Command Source**” automatically gets updated to ‘*Control Constant Data*’ and cannot be changed. The value set in the associated constant in the Constant Data List function block becomes the desired target value. In this case, both the target and the feedback values are assumed to be in same units and range. The minimum and maximum values for the feedback automatically become the constraints on the constant target. In this mode, the output of the block would be a value from 0% to 100%.

For example, if the feedback was setup as a 4-20mA input, a “**Constant Value X**” setpoint set to 14.2 would automatically be converted to 63.75%. The PID function would adjust the output as needed to have the measured feedback to maintain that target value.

The next two response options, ‘*On When Over Target*’ and ‘*On When Under Target*’, are designed to allow the user to combine the two proportional outputs as a push-pull drive for a system. Both outputs must be setup to use the same control input (linear response) and feedback signal to get the expected output response. In this mode, the output would be between 0% to 100%.

The last response option, 'Off When Within Tolerance' is designed to turn off the PID output drive (independent of the current actual drive value) when the Error is within the specified tolerance.

To allow the output to stabilize, the user can select a non-zero value for "PID Delta Tolerance". If the absolute value of $Error_k$ is less than this value, $Error_k$ in the formula below will be set to zero.

The PID algorithm used is shown below, where G , K_i , T_i , K_d , T_d and $Loop_Update_Rate$ are configurable parameters.

$$PIDOutput_k = P_k + I_k + D_k$$

$$P_k = P_Gain * Error_k$$

$$I_k = I_Gain * ErrorSum_k$$

$$D_k = D_Gain * (Error_k - Error_{k-1})$$

$$Error_k = Target - Feedback$$

$$ErrorSum_k = ErrorSum_{k-1} + Error_k$$

$$P_Gain = G$$

$$I_Gain = K_i * T / T_i \text{ (Note: If } T_i \text{ is zero, } I_Gain = 0)$$

$$D_Gain = K_d * T_d / T$$

$$T = Loop_Update_Rate * 0.001$$

Equation 4 - PID Control Algorithm

Each system will have to be turned for the optimum output response. Response times, overshoots and other variables will have to be decided by the customer using an appropriate PID tuning strategy. Axiomatic is not responsible for tuning the control system.

1.6. Lookup Table Function Block

AX020400 Lookup Tables are used to give output response up to 10 slopes per input. If more than 10 slopes are required, A Programmable Logic Block can be used to combine up to three tables to get 30 slopes as described in Section 1.7.

In comparison, AX020410 implements simplified Lookup Tables with only 3 slopes each. These small Lookup Tables are identical from the functionality point view, but the smaller implementation allows more lookup tables to be included to the firmware.

Lookup tables have two differing modes defined by "X-Axis Type" setpoint, given in Table 18. Option '0 – Data Response' is the normal mode where block input signal is selected with the "X-Axis Source" and "X-Axis Number" setpoints and X values present directly input signal values. With option '1 – Time Response' the input signal is time and X values present time in milliseconds. And selected input signal is used as digital enable.

| | |
|---|----------------------|
| 0 | <i>Data Response</i> |
| 1 | <i>Time Response</i> |

Table 18 – X-Axis Type Options

The slopes are defined with (x, y) points and associated point response. X value presents input signal value and Y value corresponding Lookup Table output value. “PointN – Response” setpoint defines type of the slope from preceding point to the point in question. Response options are given in Table 19. ‘Ramp To’ gives a linearized slope between points, whereas ‘Jump to’ gives a point to point response, where any input value between X_{N-1} and X_N will result Lookup Table output being Y_N . “Point0 – Response” is always ‘Jump To’ and cannot be edited. Choosing ‘Ignored’ response causes associated point and all the following points to be ignored.

| | |
|---|----------------|
| 0 | <i>Ignore</i> |
| 1 | <i>Ramp To</i> |
| 2 | <i>Jump To</i> |

Table 19 – PointN – Response Options

In case Time Response is used, the “**Autocycle**” setpoint can be used for generating a repeating, cyclic output while the selected control source enables the time response output of the particular lookup table.

The X values are limited by minimum and maximum range of the selected input source if the source is one of the Input Blocks or a Math Function Block. For the fore mentioned sources X-Axis data will be redefined when ranges are changed, therefore inputs should be adjusted before changing X-Axis values. For other sources Xmin and Xmax are 0 and 1000. The X-Axis is constraint to be in rising order, thus value of the next index is greater than or equal to preceding one. Therefore, when adjusting the X-Axis data, it is recommended that X_{10} is changed first, then lower indexes in descending order.

$$Xmin \leq X_0 \leq X_1 \leq X_2 \leq X_3 \leq X_4 \leq X_5 \leq X_6 \leq X_7 \leq X_8 \leq X_9 \leq X_{10} \leq Xmax$$

The Y-Axis has no constraints on the data it presents, thus inverse, decreasing, increasing or other response can be easily established. The Smallest of the Y-Axis values is used as Lookup Table output min and the largest of the Y-Axis values is used as Lookup Table output max (i.e. used as Xmin and Xmax values in linear calculation, Section 0). Ignored points are not considered for min and max values.

1.7. Programmable Logic Function Block

The Programmable Logic Function Block is very powerful tool. A Programmable Logic can be linked to up to three Lookup Tables, any of which would be selected only under given conditions. Thus output of a Programmable Logic at any given time will be the output of the Lookup Table selected by defined logic. Therefore, up to three different responses to the same input, or three different responses to different inputs, can become the input to another function block.

The AX020410 implements simplified Programmable Logic Function Blocks that can be linked only to two lookup tables. Other than that, the functionality and configuration is identical to the full version available in AX020400.

To enable any one of the Programmable Logic blocks, the “**Programmable Logic Enabled**” setpoint must be set to ‘*True*’. By default all Logic blocks are disabled.

The three associated tables are selected by setting “**Table X – Lookup Table Block Number**” setpoint to desired Lookup Table number, for example selecting 1 would set Lookup Table 1 as TableX.

For each TableX there are three conditions that define the logic to select the associated Lookup Table as Logic output. Each condition implements function *Argument1 Operator Argument2* where Operator is logical operator defined by setpoint “**Table X – Condition Y, Operator**”. Setpoint options are listed in Table 20. Condition arguments are selected with “**Table x – Condition Y, Argument Z Source**” and “**Table x – Condition Y, Argument Z Number**” setpoints. If ‘0 – Control not Used’ option is selected as “**Table x – Condition Y, Argument Z Source**” the argument is interpreted as 0.

| | |
|---|-------------------------------------|
| 0 | <i>=, Equal</i> |
| 1 | <i>!=, Not Equal</i> |
| 2 | <i>>, Greater Than</i> |
| 3 | <i>>=, Greater Than or Equal</i> |
| 4 | <i><, Less Than</i> |
| 5 | <i><=, Less Than or Equal</i> |

Table 20 – Table X – Condition Y, Operator Options

The three conditions are evaluated and if the result satisfies logical operation defined with “**Table X – Conditions Logical Operator**” setpoint, given in Table 21, the associated Lookup Table is selected as output of the Logical block. Option ‘0 – Default Table’ selects associated Lookup Table in all conditions.

| | |
|---|--------------------------------|
| 0 | <i>Default Table (Table1)</i> |
| 1 | <i>Cnd1 And Cnd2 And Cnd3</i> |
| 2 | <i>Cnd1 Or Cnd2 Or Cnd3</i> |
| 3 | <i>(Cnd1 And Cnd2) Or Cnd3</i> |
| 4 | <i>(Cnd1 Or Cnd2) And Cnd3</i> |

Table 21 – Table X – Conditions Logical Operator Options

The three logical operations are evaluated in order and the first to satisfy gets selected, thus if Table1 logical operation is satisfied, the Lookup Table associated with Table1 gets selected regardless of two other logical operations. In addition if none of the logical operations is satisfied the Lookup Table associated with Table1 gets selected.

1.8. Math Function Block

There are four mathematical function blocks that allow the user to define basic algorithms. A math function block can take up to five input signals. Each input is then scaled according to the associated limit and scaling setpoints.

AX020410 implements only two, full sized mathematical function blocks. In addition to these two full blocks, AX020410 has 16 Small Math Function blocks with two inputs and one mathematical function. Other than the simpler implementation, the functionality of the Small Math Function blocks is identical with the full version.

Inputs are converted into percentage value based on the “**Function X Input Y Minimum**” and “**Function X Input Y Maximum**” values selected. For additional control the user can also adjust the “**Function X Input Y Scaler**”. By default, each input has a scaling ‘weight’ of 1.0 However, each input can be scaled from -1.0 to 1.0 as necessary before it is applied in the function.

For example, in the case where the user may want to combine two inputs such that a joystick (Input 1) is the primary control of an output, but the speed can be incremented or decremented based on a potentiometer (Input 2), it may be desired that 75% of the scale is controlled by the joystick position, while the potentiometer can increase or decrease the min/max output by up to 25%. In this case, Input 1 would be scaled with 0.75, while Input 2 uses 0.25. The resulting addition will give a command from 0 to 100% based on the combined positions of both inputs.

A mathematical function block includes four selectable functions, which each implements equation $A \text{ operator } B$, where A and B are function inputs and operator is function selected with setpoint “**Math function X Operator**”. Setpoint options are presented in Table 22. The functions are connected, so that result of the preceding function goes into Input A of the next function. Thus Function 1 has both Input A and Input B selectable with setpoints, where Functions 2 to 4 have only Input B selectable. Input is selected by setting “**Function X Input Y Source**” and “**Function X Input Y Number**”. If “**Function X Input B Source**” is set to 0 ‘*Control not used*’ signal goes through function unchanged.

$$\text{Math Block Output} = (((A1 \text{ op1 } B1) \text{ op2 } B2) \text{ op3 } B3) \text{ op4 } B4$$

| | |
|-----|--|
| 0 | =, True when InA equals InB |
| 1 | !=, True when InA not equal InB |
| 2 | >, True when InA greater than InB |
| 3 | >=, True when InA greater than or equal InB |
| 4 | <, True when InA less than InB |
| 5 | <=, True when InA less than or equal InB |
| 6 | OR, True when InA or InB is True |
| 7 | AND, True when InA and InB are True |
| 8 | XOR, True when either InA or InB is True, but not both |
| 9 | +, Result = InA plus InB |
| 10 | -, Result = InA minus InB |
| 11 | x, Result = InA times InB |
| 12 | /, Result = InA divided by InB |
| 13 | MIN, Result = Smallest of InA and InB |
| 14 | MAX, Result = Largest of InA and InB |
| 15 | MAX-MIN, Result = Absolute value of (InA – InB) |
| 16* | SIN, Result = InA * SIN(InB) |
| 17* | COS, Result = InA * COS(InB) |
| 18* | SQRT, Result = InA * SQRT(InB) |

Table 22 – Math function X Operator Options (*AX020410 specific)

For logic operations (6, 7, 8) scaled input greater or equal to 1 is treated as TRUE. For logic operations (0 to 8), the result of the function will always be 0 (FALSE) or 1 (TRUE). For the arithmetic functions (9 to 14), it is recommended to scale the data such that the resulting operation will not exceed full scale (0 to 100%) and saturate the output result.

When dividing, a zero divider will always result in a 100% output value for the associated function.

Lastly the resulting mathematical calculation, presented as a percentage value, can be scaled into the appropriate physical units using the “**Math Output Minimum Range**” and “**Math Output Maximum Range**” setpoints. These values are also used as the limits when the Math Function I selected as the input source for another function block.

1.9. Control Variable Data Blocks

In case run time settable, non-volatile data is required in the control algorithm, the Control Variable Data Blocks offer one possible solution. These function blocks contain a single variable with rules for updating the value at run time, without the need for the user to trigger the variable update process as it is done with the Control Constant Data Blocks.

The “**Variable Value**” setpoint shows the current value for the variable. This setpoint is user configurable, so it is possible to modify the value using EA.

“**Variable Value Data Source**” and “**Variable Data Data Number**” define the source from which the new Variable Data value is read at update event.

The variable data update process is controlled using the next five setpoints, namely “**Variable Value Update Trigger Source**”, “**Variable Value Update Trigger Number**”, “**Variable Value Update Trigger Threshold Source**”, “**Variable Value Update Trigger Threshold Number**” and “**Variable Value Update Function**”. The trigger number and source define the control signal to be compared with the trigger threshold control signal. The comparison is done using the logical (or mathematical) operator that can be selected using “**Variable Value Update Function**” setpoint.

In case the logical operation evaluates as *True* (for the Math functions, greater than zero) the variable data value is updated from the selected data source and the new value is stored into Flash memory. The save is done only once per evaluating the update function as *True*. Before the next save can happen, the update function must evaluate as *False* (for the Math functions, equal to zero) at least once. Also, the minimum time between two variable data saving events is set to 10 seconds (not user configurable limit).

1.10. Simple Conditional Logic Function Blocks

The Simple Conditional Logic Blocks provide a way of connecting different blocks and comparing them to one another. The output of the Conditional Logic Blocks is either 0 (FALSE) or 1 (TRUE).

There are three operations that take place in the Conditional Logic Blocks which allows the user to make more elaborate comparisons. The first two operations, ‘**Operator 1 (Input 1, Input 2)**’ and ‘**Operator 2 (Input 3, Input4)**’ compare two separate values from different selectable control sources. The operations for these two operators are listed in Table 22.

| Value | Operation | Meaning |
|-------|-----------------|--|
| 0 | <i>Not Used</i> | <i>Result = False</i> |
| 1 | = | <i>True when InA Equals InB</i> |
| 2 | != | <i>True when InA Not Equal InB</i> |
| 3 | > | <i>True when InA Greater Than InB</i> |
| 4 | >= | <i>True when InA Greater Than or Equal InB</i> |
| 5 | < | <i>True when InA Less Than InB</i> |
| 6 | <= | <i>True when InA Less Than or Equal InB</i> |
| 7 | OR | <i>True when InA or InB is True</i> |
| 8 | AND | <i>True when InA and InB are True</i> |
| 9 | XOR | <i>True when InA/InB is True, but not both</i> |

Table 23 – Available operations for Operator 1 and Operator 2

The last operation is used between the results of both Operator 1 and Operator 2 using logic gates operations. The list of available operations for ‘**Operator 3 (Operator 1, Operator 2)**’ are listed in Table 23.

| Value | Operation | Meaning |
|-------|-----------------|--|
| 0 | <i>Not Used</i> | <i>Result = False</i> |
| 1 | <i>OR</i> | <i>True when Op1 or Op2 is True</i> |
| 2 | <i>AND</i> | <i>True when Op1 and Op2 are True</i> |
| 3 | <i>XOR</i> | <i>True when Op1/Op2 is True, but not both</i> |

Table 24 – Available operations for Operator 3



When configuring a Conditional Block and only one comparison is needed, it is necessary that operation selected for '**Operator 3 (Operator 1, Operator 2)**' is set to 1 ('*OR, True When Op1 or Op2 is True*')

1.11. Set / Reset Function Block

Set-Reset Block consists of only 2 control sources: **Reset Source** and **Set Source**. The purpose of these blocks is to simulate a modified latching function in which the 'Reset Signal' has more precedence. The 'latching' function works as per the Table 24 below.

| 'Set Signal' | 'Reset Signal' | 'Set-Reset Block Output' (Initial State: <i>OFF</i>) |
|--------------|----------------|--|
| <i>OFF</i> | <i>OFF</i> | <i>Latched State</i> |
| <i>OFF</i> | <i>ON</i> | <i>OFF</i> |
| <i>ON</i> | <i>OFF</i> | <i>ON</i> |
| <i>ON</i> | <i>ON</i> | <i>OFF</i> |

Table 25 – Set-Reset Function block operation

The **Reset** and **Set** sources have associated with them a minimum and maximum threshold values which determine the ON and OFF state. For the **Reset Source** are **Reset Minimum Threshold** and **Reset Maximum Threshold**. Similarly, for the **Set Source** are **Set Minimum Threshold** and **Set Maximum Threshold**. These setpoints also allow to have a dead band in between ON/OFF states and they are in terms of percentage of input selected.

As seen in Table 24 above, the 'Reset Signal' has more precedence over the 'Set Signal' - if the state of 'Reset Signal' is *ON*, the state of 'Set-Reset Block Output' will be *OFF*. To create an *ON* state in 'Set-Reset Block Output' the state of 'Reset Signal' must be *OFF* while the state of 'Set Signal' is *ON*. In this case, the state of 'Set-Reset Block Output' will remain *ON* even if 'Set Signal' turns *OFF* as long as 'Reset Signal' remains *OFF*. As soon as the 'Reset Signal' turns *ON* the 'Set-Reset Block Output' will turn *OFF* regardless of the state of 'Set Signal'.

1.12. DTC React

The DTC React function block is a very simple function which will allow a received DTC, sent from another ECU on a DM1 message, to disable an output or be used as input to another type of logic block. Up to five SPN/FMI combinations can be selected.

Should a DM1 message be received with the SPN/FMI combination defined, the corresponding DTC State will be set to ON. Once ON, if the same SPN/FMI combination has not been received again after 3 seconds, the DTC State will be reset to OFF.

The DTC could be used as a digital input for any function block as appropriate.

1.13. CAN Transmit Message Function Block

The CAN Transmit function block is used to send any output from another function block (i.e. input, CAN receive) to the J1939 network. The AX020400 ECU has six CAN Transmit Messages and each message has four completely user defined signals.

1.13.1. CAN Transmit Message Setpoints

Each CAN Transmit Message setpoint group includes setpoints that effect the whole message and are thus mutual for all signals of the message. These setpoints are presented in this section. The setpoints that configure an individual signal are presented in next section.

The “**Transmit PGN**” setpoint sets PGN used with the message. **User should be familiar with the SAE J1939 standard and select values for PGN/SPN combinations as appropriate from section J1939/71.**

“**Repetition Rate**” setpoint defines the interval used to send the message to the J1939 network. If the “**Repetition Rate**” is set to zero, the message is disabled unless it shares its PGN with another message. In case of a shared PGN repetition rate of the LOWEST numbered message are used to send the message ‘bundle’.



At power up, transmitted message will not be broadcasted until after a 5 second delay. This is done to prevent any power up or initialization conditions from creating problems on the network.

By default, all messages are sent on Proprietary B PGNs as broadcast messages. Thus “**Transmit Message Priority**” is always initialized to 6 (low priority) and the “**Destination Address**” setpoint is not used. This setpoint is only valid when a PDU1 PGN has been selected, and it can be set either to the Global Address (0xFF) for broadcasts or sent to a specific address as setup by the user.

1.14. CAN Transmit Signal Setpoints

Each CAN transmit message has four associated signals, which define data inside the Transmit message. “**Control Source**” setpoint together with “**Control Number**” setpoint define the signal source of the message. “**Control Source**” and “**Control Number**” options are listed in Table 27. Setting “**Control Source**” to ‘*Control Not Used*’ disables the signal.

“**Transmit Data Type**” setpoint options are listed in Table 26. By default, ‘*CAN signal continuous*’ is selected and signal data is presented continuous form. If ‘*CAN signal discrete*’ the signal data is considered as digital and is interpreted as 0 below “**CAN Transmit Data Maximum**”. When ‘*CAN signal undefined*’ signal data is considered undefined and all signal bits are set to 1.

| | |
|---|------------------------------|
| 0 | <i>CAN signal undefined</i> |
| 1 | <i>CAN signal discrete</i> |
| 2 | <i>CAN signal continuous</i> |

Table 26 – CAN Transmit Data Type Options

“**Transmit Data Width**” setpoint determines how many bits signal reserves from the message. “**Transmit Data Index in Array**” determines in which of 8 bytes of the CAN message LSB of the signal is located. Similarly, “**Transmit Bit Index in Byte**” determines in which of 8 bits of a byte the LSB is located. These setpoints are freely configurable, thus **it is the User’s responsibility to ensure that signals do not overlap and mask each other.**

“**Transmit Data Resolution**” setpoint determines the scaling done on the signal data before it is sent to the bus. “**Transmit Data Offset**” setpoint determines the value that is subtracted from the signal data before it is scaled. Offset and Resolution are interpreted in units of the selected source signal.

1.15. CAN Receive Function Block

The CAN Receive function block is designed to take any SPN from the J1939 network and use it as an input to another function block (i.e. Outputs).

The “**Receive Message Enabled**” is the most important setpoint associated with this function block and it should be selected first. Changing it will result in other setpoints being enabled/disabled as appropriate. By default, ALL receive messages are disabled.

Once a message has been enabled, a Lost Communication fault will be flagged if that message is not received off the bud within the “**Receive Message Timeout**” period. This could trigger a Lost Communication event as described in section 1.4. In order to avoid timeouts on a heavily saturated network, it is recommended to set the period at least three times longer than the expected update rate. To disable the timeout feature, simply set this value to zero, in which case the received message will never trigger a Lost Communication fault.

By default, all control messages are expected to be sent to the 12 Input 12 Output Valve Controller on Proprietary B PGNs. However, should a PDU1 message be selected, the 12 Input 12 Output Valve Controller can be setup to receive it from any ECU by setting the “**Specific Address that sends the PGN**” to the Global Address (0xFF). If a specific address is selected instead, then any other ECU data on the PGN will be ignored.

The “**Receive Data Type**”, “**Receive Data Width**”, “**Receive Data Index in Array (LSB)**”, “**Receive Bit Index in Byte (LSB)**”, “**Receive Resolution**” and “**Receive Offset**” can all be used to map any SPN supported by the J1939 standard to the output data of the Received function block.

As mentioned earlier, a CAN receive function clock can be selected as the source of the control input for the output function blocks. When this is case, the “**Received Data Min (Off Threshold)**” and “**Received Data Max (On Threshold)**” setpoints determine the minimum and maximum values of the control signal. As the names imply, they are also used as the On/Off thresholds for digital output types. These values are in whatever units the data is AFTER the resolution and offset is applied to CAN receive signal.

The 12 Input 12 Output Valve Controller I/O supports up to five unique CAN Receive Messages. Defaults setpoint values are listed in section 0.

1.16. Available Control Sources

Many of the Function Blocks have selectable input signals, which are determined with “[Name] Source” and “[Name] Number” setpoints. Together, these setpoints uniquely select how the I/O of the various function blocks are linked together. “[Name] Source” setpoint determines the type of the source and “[Name] Number” selects the actual source if there is more than one of the same type. Available “[Name] Source” options and associated “[Name] Number” ranges are listed in Table 27. All sources, except “CAN message reception timeout”, are available for all blocks, including output control blocks and CAN Transmit messages. Thought input Sources are freely selectable, not all options would make sense for any input, and it is up to the user to program the controller in a logical and functional manner.

| Sources | Number Range | Notes |
|---|---------------------|---|
| <i>0: Control Not Used</i> | N/A | When this is selected, it disables all other setpoints associated with the signal in question. |
| <i>1: Received CAN Message</i> | 1 to 16 | User must enable the function block, as it is disabled by default. |
| <i>2: Universal Input Measured</i> | 1 to 7 | |
| <i>3: Digital Input Measured</i> | 1 to 5 | |
| <i>4: PID Function Block</i> | 1 to 4 | User must enable the function block, as it is disabled by default. |
| <i>5: Lookup Table</i> | 1 to 20 | |
| <i>6: Programmable Logic Block</i> | 1 to 8 | User must enable the function block, as it is disabled by default. |
| <i>7: Math Function Block</i> | 1 to 18 | User must enable the function block, as it is disabled by default. |
| <i>8: Control Constant Data</i> | 1 to 15 | 1 = FALSE, 2 = TRUE, 3 to 15 = User Selectable |
| <i>9: Conditional Block</i> | 1 to 8 | User must enable the function block, as it is disabled by default. |
| <i>10: Set-Reset State Block</i> | 1 to 8 | User must enable the function block, as it is disabled by default. |
| <i>11: Diagnostic Trouble Code</i> | 1 to 5 | Will only be valid if the corresponding DTC has a non-zero SPN |
| <i>12: Output Target Value</i> | 1 to 12 | Numbers 9 to 10 are Digital Outputs 1 to 4 |
| <i>13: Output Current Feedback</i> | 1 to 12 | Measured Feedback current from the proportional output in mA with a Proportional Output and feedback pin state with Digital Output. Used in Output Diagnostics. |
| <i>14: Power Supply Measured</i> | 0 to 255 | Measured power supply value in Volts. The Parameter sets the threshold in Volts to compare with. |
| <i>15: Processor Temperature Measured</i> | 0 to 255 | Measured processor temperature in °C. The Parameter sets the threshold in Celcius to compare with. |
| <i>16: CAN Reception Timeout</i> | N/A | Only available in Output blocks. |
| <i>17: Control Variable Data</i> | 1 to 6 | |

Table 27 – Available Control Sources and Numbers

If a non-digital signal is selected to drive a digital input, the signal is interpreted to be OFF at or below the minimum of selected source and ON at or above the maximum of the selected source, and it will not change in between those points. Thus, analog to digital interpretation has a built-in hysteresis defined by minimum and maximum of the selected source, as shown in Figure 4. For example, Universal Input signal is interpreted to be ON at or above “Maximum Range” and OFF at or below “Minimum Range”.

Control Constant Data has no unit nor minimum and maximum assigned to it, thus user must assign appropriate constant values according to intended use.

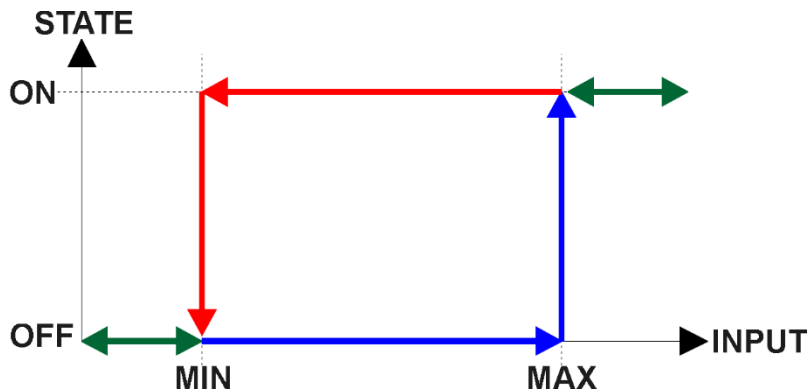


Figure 4 - Analog source to Digital input

2. INSTALLATION INSTRUCTIONS

2.1. Dimensions and Pinout

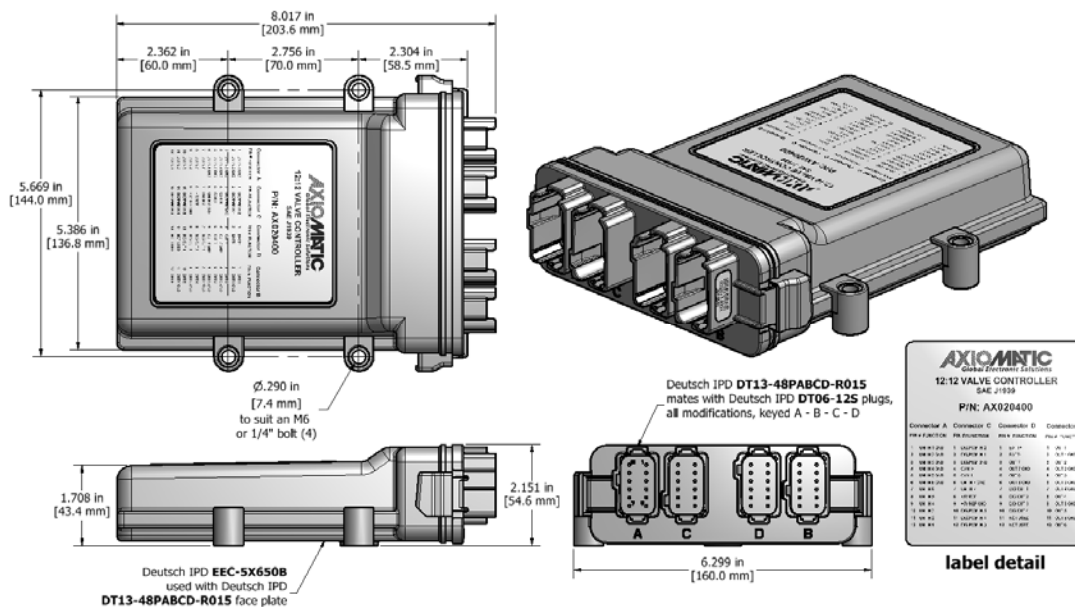


Figure 5 – AX020400/AX020410 Dimensional Drawing

| Connector A | | Connector C | | Connector D | | Connector B | |
|-------------|-------------|-------------|--------------------|-------------|-----------|-------------|-----------|
| Pin # | Function | Pin # | Function | Pin # | Function | Pin # | Function |
| 1 | UN IN 1 GND | 1 | DIG/PWM IN 2** | 1 | BATT + | 1 | OUT 1 |
| 2 | UN IN 2 GND | 2 | DIG/PWM IN 1 | 2 | BATT - | 2 | OUT 1 GND |
| 3 | UN IN 3 GND | 3 | DIG/PWM GND | 3 | OUT 7 | 3 | OUT 2 |
| 4 | UN IN 4 GND | 4 | CAN_H | 4 | OUT 7 GND | 4 | OUT 2 GND |
| 5 | UN IN 5 GND | 5 | CAN_L | 5 | OUT 8 | 5 | OUT 3 |
| 6 | UN IN 6 GND | 6 | UN IN 7 GND | 6 | OUT 8 GND | 6 | OUT 3 GND |
| 7 | UN IN 6** | 7 | INPUT 7 | 7 | DIG OUT 1 | 7 | OUT 4 GND |
| 8 | UN IN 5 | 8 | +5V REF | 8 | DIG OUT 2 | 8 | OUT 4 |
| 9 | UN IN 4** | 9 | +5V REF GND (AGND) | 9 | DIG OUT 3 | 9 | OUT 5 GND |
| 10 | UN IN 3 | 10 | DIG/PWM IN 5 | 10 | DIG OUT 4 | 10 | OUT 5 |
| 11 | UN IN 2** | 11 | DIG/PWM IN 4** | 11 | NOT USED | 11 | OUT 6 GND |
| 12 | UN IN 1 | 12 | DIG/PWM IN 3 | 12 | NOT USED | 12 | OUT 6 |

Table 28 – AX020400/AX020410 Connector Pinout (** = NO Frequency/PWM/Pulse modes available)

3. OVERVIEW OF J1939 FEATURES

The software was designed to provide flexibility to the user with respect to messages sent from the ECU by providing:

- Configurable ECU Instance in the NAME (to allow multiple ECUs on the same network)
- Configurable Input Parameters
- Configurable PGN and Data Parameters
- Configurable Diagnostic Messaging Parameters, as required
- Diagnostic Log, maintained in non-volatile memory

3.1. Introduction to Supported Messages

The ECU is compliant with the standard SAE J1939, and supports following PGNs from the standard.

From J1939-21 – Data Link Layer

- | | | |
|--|------------|----------|
| • Request | 59904 | 0x00EA00 |
| • Acknowledgement | 59392 | 0x00E800 |
| • Transport Protocol – Connection Management | 60416 | 0x00EC00 |
| • Transport Protocol – Data Transfer Message | 60160 | 0x00EB00 |
| • Proprietary B | from 65280 | 0x00FF00 |
| | to 65535 | 0x00FFFF |

From J1939-73 – Diagnostics

- | | | |
|--|-------|----------|
| • DM1 – Active Diagnostic Trouble Codes | 65226 | 0x00FECA |
| • DM2 – Previously Active Diagnostic Trouble Codes | 65227 | 0x00FECB |
| • DM3 – Diagnostic Data Clear/Reset for Previously Active DTCs | 65228 | 0x00FECC |
| • DM11 – Diagnostic Data Clear/Reset for Active DTCs | 65235 | 0x00FED3 |
| • DM14 – Memory Access Request | 55552 | 0x00D900 |
| • DM15 – Memory Access Response | 55296 | 0x00D800 |
| • DM16 – Binary Data Transfer | 55040 | 0x00D700 |

From J1939-81 – Network Management

- | | | |
|--------------------------------|-------|----------|
| • Address Claimed/Cannot Claim | 60928 | 0x00EE00 |
| • Commanded Address | 65240 | 0x00FED8 |

From J1939-71 – Vehicle Application Layer

- | | | |
|---------------------------|-------|----------|
| • Software Identification | 65242 | 0x00FEDA |
|---------------------------|-------|----------|

None of the application layer PGNs are supported as part of the default configurations, but they can be selected as desired for transmit function blocks.

Setpoints are accessed using standard Memory Access Protocol (MAP) with proprietary addresses. The Electronic Assistant[®] (EA) allows for quick and easy configuration of the unit over CAN network.

3.2. NAME, Address and Software ID

The 12 Input 12 Output Valve Controller I/O ECU has the following default for the J1939 NAME. The user should refer to the SAE J1939/81 standard for more information on these parameters and their ranges.

| | |
|---------------------------|---|
| Arbitrary Address Capable | Yes |
| Industry Group | 0, Global |
| Vehicle System Instance | 0 |
| Vehicle System | 0, Non-specific system |
| Function | 125, Axiomatic I/O Controller |
| Function Instance | 14 – Axiomatic AX020400, 25 – Axiomatic AX020410 |
| ECU Instance | 0, First Instance |
| Manufacture Code | 162, Axiomatic Technologies |
| Identity Number | Variable, uniquely assigned during factory programming for each ECU |

The ECU Instance is a configurable setpoint associated with the NAME. Changing this value will allow multiple ECUs of this type to be distinguishable from one another when they are connected on the same network.

The default value of the “ECU Address” setpoint is 128 (0x80), which is the preferred starting address for self-configurable ECUs as set by the SAE in J1939 tables B3 and B7. The EA will allow the selection of any address between 0 and 253. ***It is user’s responsibility to select an address that complies with the standard.*** The user must also be aware that since the unit is arbitrary address capable, if another ECU with a higher priority NAME contends for the selected address, the 12 Input 12 Output Valve Controller I/O will continue select the next highest address until it finds one that it can claim. See J1939/81 for more details about address claiming.

Software Identifier

| | | | |
|-------------------------------|----------|---|--------|
| PGN 65242 | | Software Identification | - SOFT |
| Transmission Repetition Rate: | | On request | |
| Data Length: | | Variable | |
| Extended Data Page: | | 0 | |
| Data Page: | | 0 | |
| PDU Format: | | 254 | |
| PDU Specific: | | 218 PGN Supporting Information: | |
| Default Priority: | | 6 | |
| Parameter Group Number: | | 65242 (0xFEDA) | |
| Start Position | Length | Parameter Name | SPN |
| 1 | 1 Byte | Number of software identification fields | 965 |
| 2-n | Variable | Software identification(s), Delimiter (ASCII “*”) | 234 |

Byte 1 is set to 5, and the identification fields are as follows.

| |
|---|
| (Part Number)*(Version)*(Date)*(Owner)*(Description) |
|---|

The EA shows all this information in “General ECU Information”, as shown below.


Note: The information provided in the Software ID is available for any J1939 service tool which supports the PGN -SOFT.

4. ECU SETPOINTS ACCESSED WITH ELECTRONIC ASSISTANT

This section describes in detail each setpoint, and their default and ranges. Default values presented in tables are values used when setpoint in question is active. Many of the setpoints are dependent on other setpoints and they may not be active by default. Associated Figures show screen capture of initial operation, however some of the setpoints are not in default condition as they are set differently to activate more setpoints for the image. The setpoints are divided into setpoint groups as they are shown in EA. For more information on how each setpoint is used by 12 Input 12 Output Valve Controller, refer to the relevant section in this user manual.

4.1. Accessing the ECU Using EA

ECU with P/N AX020400/AX020410 does not need any specific setup for EA. In order to access the high speed versions, AX020400-01 and/or AX020400-02, the CAN bus Baud Rate needs to be set accordingly. The CAN Interface Setup can be found from “Options” menu in EA.

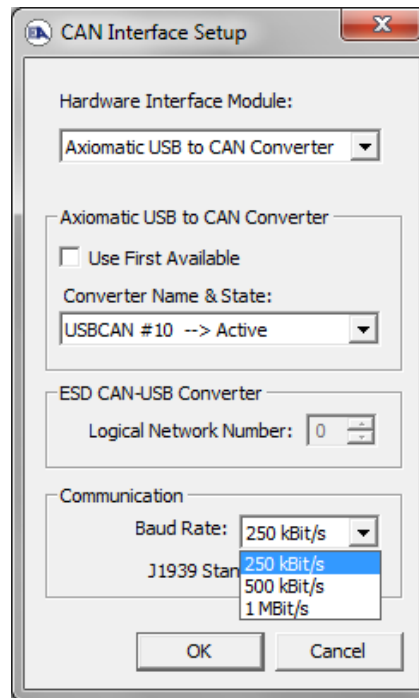

4.2. J1939 Network Parameters

“ECU Instance Number” and “ECU Address” setpoints and their effect are defined in Section 3.2.

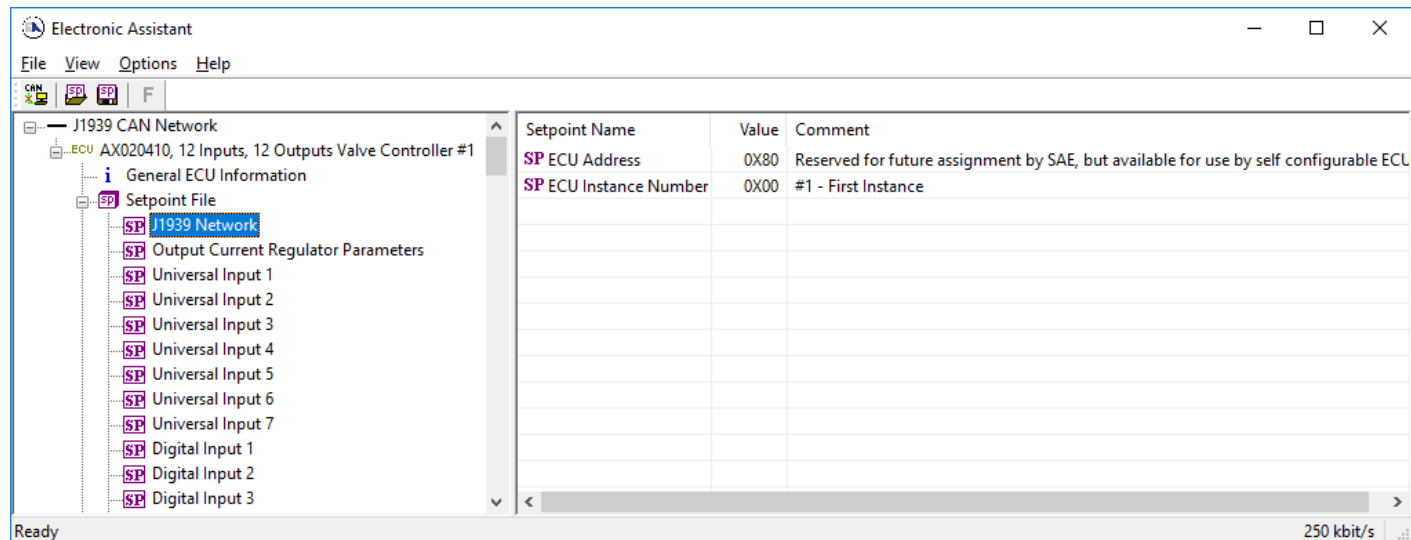


Figure 6 - Screen Capture of J1939 Setpoints

| Name | Range | Default | Notes |
|--------------|-------|---------|---|
| ECU Address | 0x80 | 0-253 | Preferred address for a self-configurable ECU |
| ECU Instance | 0-7 | 0x00 | Per J1939-81 |

Table 29 – J1939 Network Setpoints

If non-default values for the “ECU Instance Number” or “ECU Address” are used, they will be mirrored during a setpoint file flashing, and will only take effect once the entire file has been downloaded to the unit. After the setpoint flashing is complete, the unit will claim the new address and/or re-claim the address with the new NAME. If these setpoints are changing, it is recommended to close and re-open the CAN connection on EA after the file is loaded so that only the new NAME and address are showing in the J1939 CAN Network ECU list.

4.3. Output Current Regulator Parameters

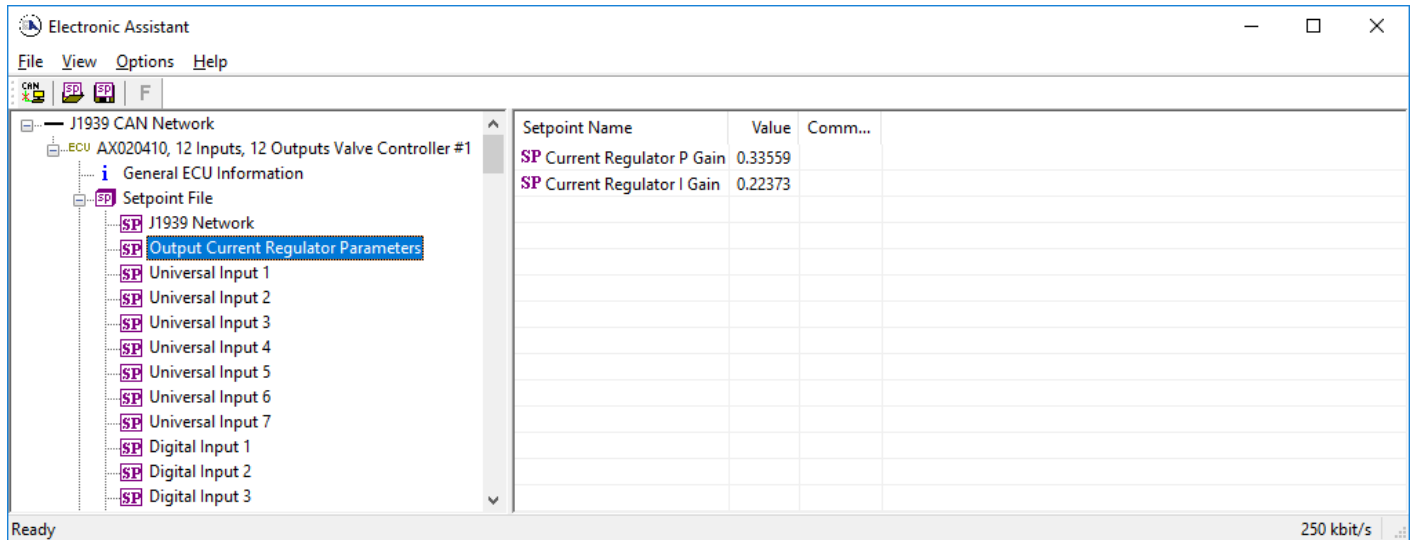


Figure 7 - Screen Capture of Output Current Regulator Setpoints

| Name | Range | Default | Notes |
|--------------------------|-------|---------|-------|
| Current Regulator P Gain | | 0.33559 | |
| Current Regulator I Gain | | 0.22373 | |

Table 30 – Output Current Regulator Setpoints

The proportional current output PI controller gains can be tuned using these two setpoints.

4.4. Universal Input Setpoints

The Universal Inputs are defined in Section 0. The setpoint group includes diagnostic related setpoints, which are presented in Section 0 in detail.

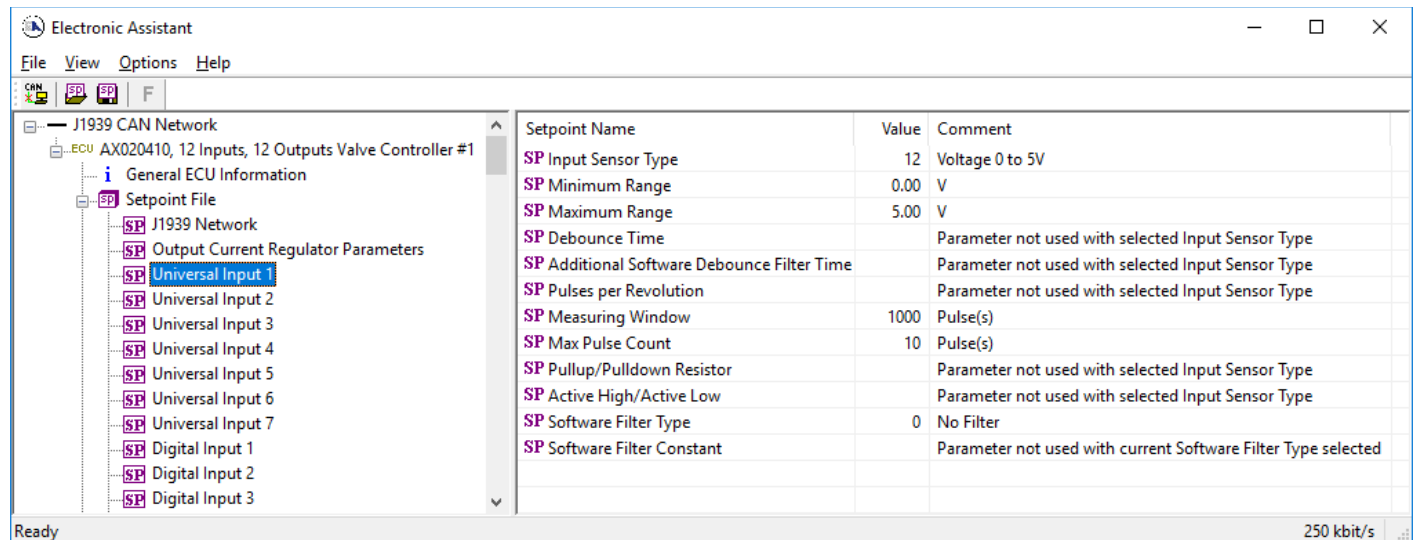


Figure 8 - Screen Capture of Universal Input Setpoints

| Name | Range | Default | Notes |
|--|-------------------------------------|------------------------------|---------------|
| Input Sensor Type | Drop List | VOLTAGE_0_TO_5V | See Table 1 |
| Minimum Range | From Minimum Error to Maximum Range | Depends on Input Sensor Type | |
| Maximum Range | From Minimum Range to Maximum Error | Depends on Input Sensor Type | |
| Debounce Time | Drop List | None | See Table 2 |
| Additional Software Debounce Filter Time | Drop List | 0ms | See Table 3 |
| Measuring Window | 1..65535 | 1000 | |
| Max Pulse Count | 1..65535 | 10 | |
| Pulses per Revolution | Drop List | FALSE | See Section 0 |
| Pullup/Pulldown Resistor | Drop List | 22kΩ Pulldown | See Table 4 |
| Active High/Active Low | Drop List | Active High | See Table 5 |
| Software Filter Type | Drop List | No Filtering | See Table 8 |
| Software Filter Constant | 1..1000 | 1 | |

Table 31 – Universal Input Setpoints

4.5. Digital Input Setpoints

The Digital Inputs are defined in Section 0. The setpoint group includes diagnostic related setpoints, which are presented in Section 0 in detail.

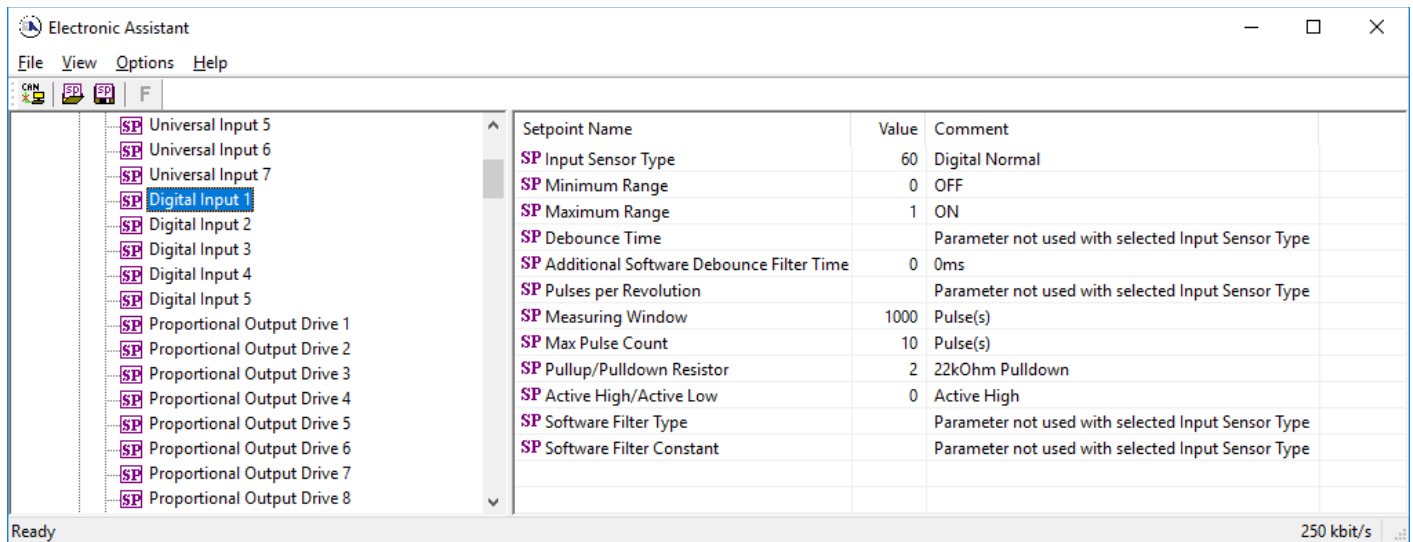


Figure 9 - Screen Capture of Digital Input Setpoints

| Name | Range | Default | Notes |
|--|-------------------------------------|------------------------------|---------------|
| Input Sensor Type | Drop List | Digital Normal Logic | See Table 1 |
| Minimum Range | From Minimum Error to Maximum Range | Depends on Input Sensor Type | |
| Maximum Range | From Minimum Range to Maximum Error | Depends on Input Sensor Type | |
| Debounce Time | Drop List | None | See Table 2 |
| Additional Software Debounce Filter Time | Drop List | 0ms | See Table 3 |
| Measuring Window | 1..65535 | 1000 | |
| Max Pulse Count | 1..65535 | 10 | |
| Pulse per Revolution | Drop List | FALSE | See Section 0 |
| Pullup/Pulldown Resistor | Drop List | 22kΩ Pulldown | See Table 4 |
| Active High/Active Low | Drop List | Active High | See Table 5 |
| Software Filter Type | Drop List | No Filtering | See Table 8 |
| Software Filter Constant | 1..1000 | 1 | |

Table 32 – Digital Input Setpoints

4.6. Proportional Output Setpoints

The Proportional Output function Block is defined in Section 0. Please refer there for detailed information about how these setpoints are used. Outputs are disabled by default. To enable an output “**Output Type**” and “**Control Source**” must be chosen.

| Setpoint Name | Value | Comment |
|-------------------------------|-------|--|
| SP Output Type | 1 | Proportional Current |
| SP Output At Minimum Command | 0 | mA |
| SP Output At Maximum Command | 2500 | mA |
| SP Output At Override Command | 750 | mA |
| SP Dither Frequency | 200 | Hz |
| SP Dither Amplitude | 0 | mA |
| SP Ramp Up (Min to Max) | 1000 | ms |
| SP Ramp Down (Max to Mix) | 1000 | ms |
| SP PWM Output Frequency | 25000 | Hz, (Not configurable - Output in Current mode) |
| SP Hold Current | | Parameter not used with current Output Type selected |
| SP Hotshot Current | | Parameter not used with current Output Type selected |
| SP Hotshot Time | | Parameter not used with current Output Type selected |
| SP Digital Response | | Parameter not used with current Output Type selected |
| SP Digital Override State | | Parameter not used with current Output Type selected |
| SP Digital Blink Rate | | Parameter not used with current Output Type selected |
| SP Control Source | 2 | Universal Input Measured |
| SP Control Number | 1 | Universal Input Measured #1 |
| SP Enable Source | 0 | Control Not Used |
| SP Enable Number | | Parameter not used with current Enable Source selected |
| SP Enable Response | | Parameter not used with current Enable Source selected |
| SP Override Source | 0 | Control Not Used |
| SP Override Number | | Parameter not used with current Override Source selected |
| SP Override Response | | Parameter not used with current Override Source selected |
| SP Fault Detection is Enabled | 1 | True |
| SP Output Fault Response | 0 | Shutoff Output |
| SP Output in Fault Mode | | Parameter not used with current Control Fault Response |

Figure 10 - Screen Capture of Proportional Output Setpoints

| Name | Range | Default | Notes |
|----------------------------|---------------------------|------------------------------|--------------|
| Output Type | Drop List | Disabled | See Table 9 |
| Output At Minimum Command | 0 to Limit | 0mA | |
| Output At Maximum Command | 0 to Limit | 2500mA | |
| Output At Override Command | 0 to Limit | 750mA | |
| Dither Frequency | 50 to 400Hz | 200Hz | |
| Dither Amplitude | 0 to 500 mA | 0 | |
| Ramp Up (Min to Max) | 0 to 10 000ms | 1000ms | |
| Ramp Down (Max to Min) | 0 to 10 000ms | 1000ms | |
| PWM Output Frequency | 1Hz to 25 000Hz | 25000Hz | |
| Hold Current | 0 to 1500mA | 500mA | |
| Hotshot Current | 0 to 1500mA | 1000mA | |
| Hotshot Time | 500 to 10 000 ms | 1000ms | |
| Digital Response | Drop List | Normal On/Off | See Table 10 |
| Digital Override State | | | |
| Digital Blink Rate | 100 to 5000 ms | 1000ms | |
| Control Source | Drop List | Universal Input Measured | See Table 27 |
| Control Number | Depends on control source | 1 | See Table 27 |
| Enable Source | Drop List | Control not used | See Table 27 |
| Enable Number | Depends on enable source | 1 | See Table 27 |
| Enable Response | Drop List | Enable When On, else Shutoff | See Table 11 |
| Override Source | Drop List | Control not used | See Table 27 |
| Override Number | Depends on enable source | 1 | See Table 27 |
| Override Response | Drop List | Override When On | See Table 12 |
| Fault Detection is Enabled | Drop List | True | |
| Output Fault Response | Drop List | Shutoff Output | See Table 13 |
| Output in Fault Mode | Depends on Output type | 500mA | |

Table 33 – Proportional Output Setpoints

4.7. Digital Output Setpoints

The Digital Output function Block is defined in Section 0. Please refer there for detailed information about how these setpoints are used. Outputs are disabled by default. To enable an output “**Output Type**” and “**Control Source**” must be chosen.

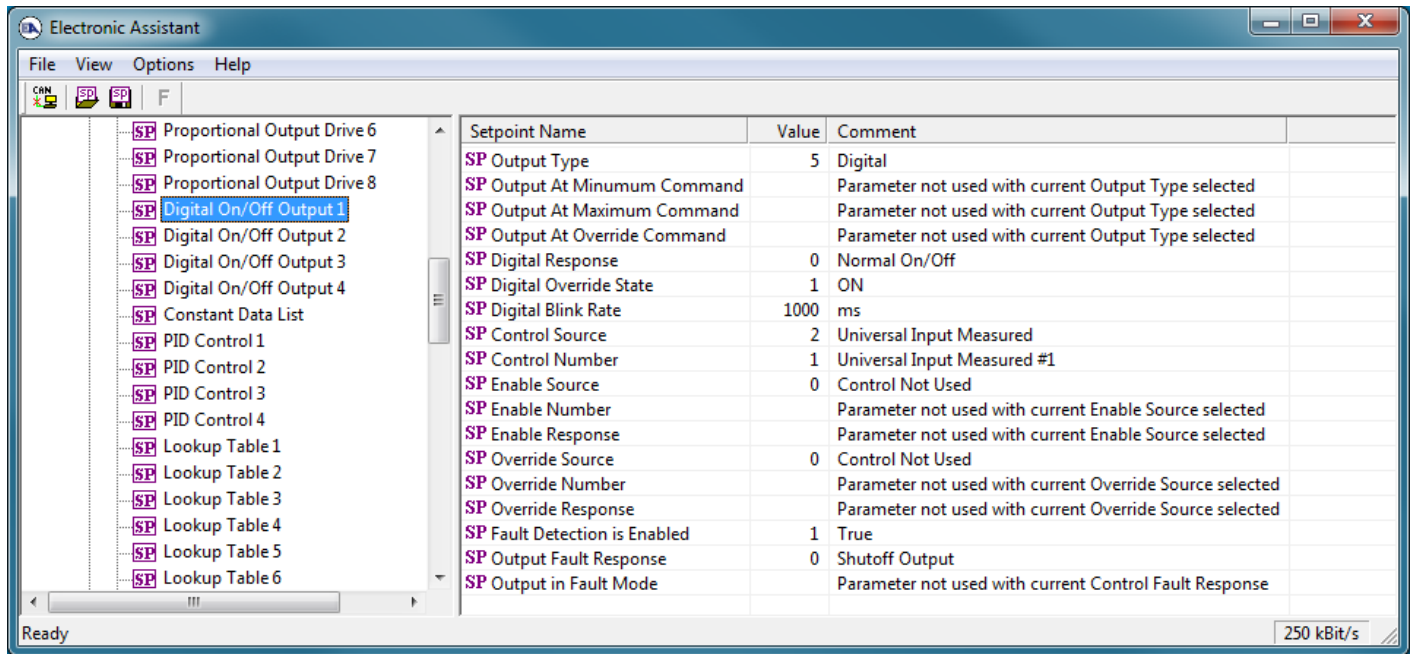


Figure 11 - Screen Capture of Digital Output Setpoints


| Name | Range | Default | Notes |
|----------------------------|---------------------------|------------------------------|--------------|
| Output Type | Drop List | Disabled | See Table 9 |
| Output At Minimum Command | 0 to Limit | 0mA | |
| Output At Maximum Command | 0 to Limit | 2500mA | |
| Output At Override Command | 0 to Limit | 750mA | |
| Digital Response | Drop List | Normal On/Off | See Table 10 |
| Digital Override State | | | |
| Digital Blink Rate | 100 to 5000 ms | 1000ms | |
| Control Source | Drop List | Universal Input Measured | See Table 27 |
| Control Number | Depends on control source | 1 | See Table 27 |
| Enable Source | Drop List | Control not used | See Table 27 |
| Enable Number | Depends on enable source | 1 | See Table 27 |
| Enable Response | Drop List | Enable When On, else Shutoff | See Table 11 |
| Override Source | Drop List | Control not used | See Table 27 |
| Override Number | Depends on enable source | 1 | See Table 27 |
| Override Response | Drop List | Override When On | See Table 12 |
| Fault Detection is Enabled | Drop List | True | |
| Output Fault Response | Drop List | Shutoff Output | See Table 13 |
| Output in Fault Mode | Depends on Output type | 500mA | |

Table 34 – Digital Output Setpoints

4.8. Constant Data List

The Constant Data List Function Block is provided to allow the user to select values as desired for various logic block functions.

The first two constants are fixed values of 0 (False) and 1 (True) for use in binary logic. The remaining 13 constants are fully user programmable to any value between +/- 1 000 000. The default values (shown in Figure 12) are arbitrary and should be configured by the user as appropriate for their application.

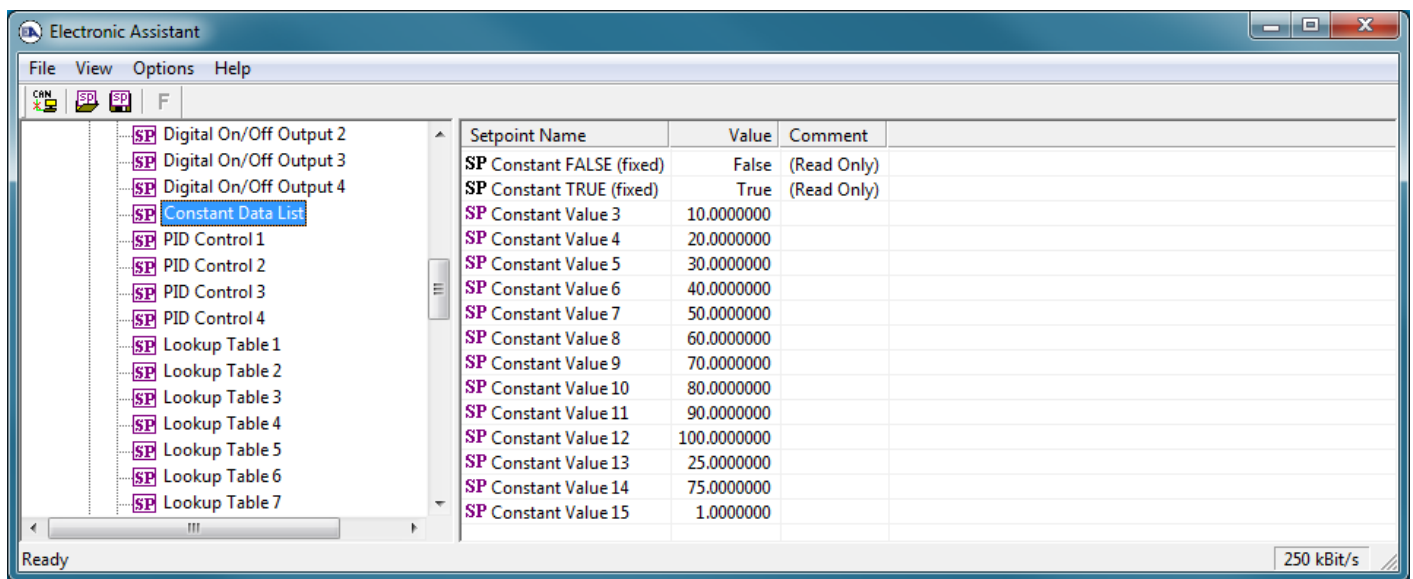

The screenshot shows the 'Electronic Assistant' software window. The left sidebar contains a tree view of function blocks, with 'Constant Data List' selected. The main area displays a table of setpoints with columns for 'Setpoint Name', 'Value', and 'Comment'.

| Setpoint Name | Value | Comment |
|---------------------------|-------------|-------------|
| SP Constant FALSE (fixed) | False | (Read Only) |
| SP Constant TRUE (fixed) | True | (Read Only) |
| SP Constant Value 3 | 10.0000000 | |
| SP Constant Value 4 | 20.0000000 | |
| SP Constant Value 5 | 30.0000000 | |
| SP Constant Value 6 | 40.0000000 | |
| SP Constant Value 7 | 50.0000000 | |
| SP Constant Value 8 | 60.0000000 | |
| SP Constant Value 9 | 70.0000000 | |
| SP Constant Value 10 | 80.0000000 | |
| SP Constant Value 11 | 90.0000000 | |
| SP Constant Value 12 | 100.0000000 | |
| SP Constant Value 13 | 25.0000000 | |
| SP Constant Value 14 | 75.0000000 | |
| SP Constant Value 15 | 1.0000000 | |

Figure 12 - Screen Capture of Constant Data List Setpoints

4.9. Variable Data List Setpoints

The Variable Data List Function Block is provided to allow the user to select values as desired for various logic block functions and defining rule for updating this data at run time. This functionality is explained in more detail in section 1.9.

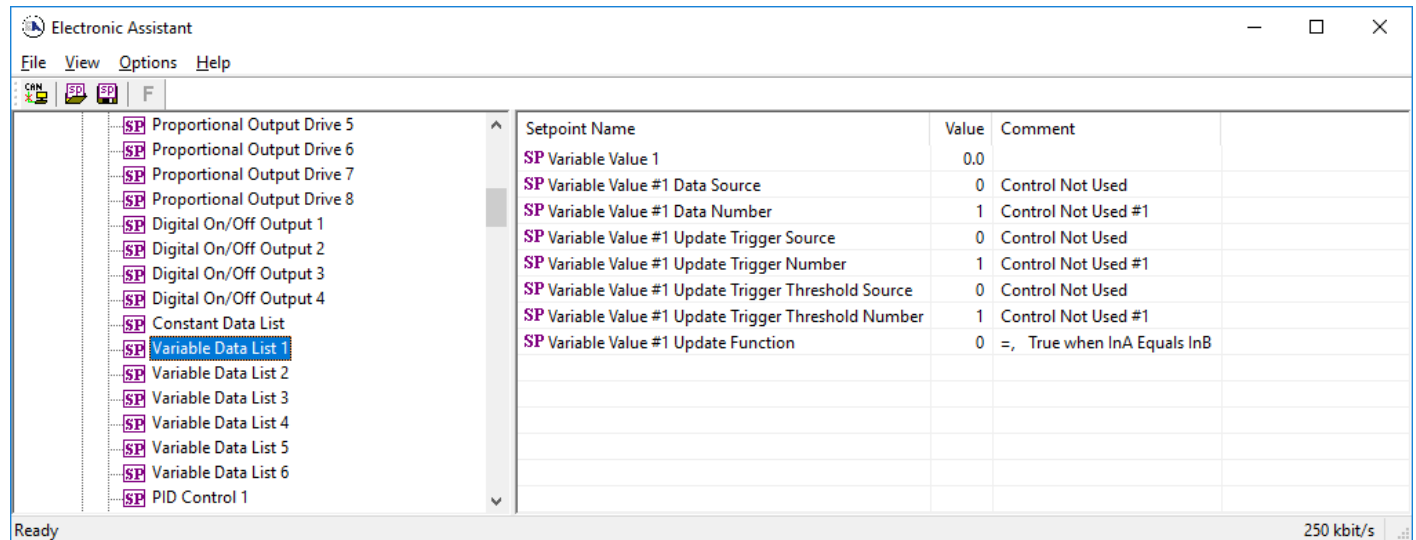


Figure 13 – Screen Capture of Variable Data List Setpoints

| Name | Range | Default | Notes |
|--|---------------------------|------------------|--------------|
| Variable Value | | 0 | |
| Variable Value Data Source | Drop List | Control Not Used | See Table 27 |
| Variable Value Data Number | Depends on control source | 1 | See Table 27 |
| Variable Value Update Trigger Source | Drop List | Control Not Used | See Table 27 |
| Variable Value Update Trigger Number | Depends on control source | 1 | See Table 27 |
| Variable Value Update Trigger Threshold Source | Drop List | Control Not Used | See Table 27 |
| Variable Value Update Trigger Threshold Number | Depends on control source | 1 | See Table 27 |
| Variable Value Update Function | 0...17 | 0 | See Table 22 |

Table 35 – Variable Data Setpoints

4.10. PID Control

The PID Control Function Block is defined in Section 0. Please refer there for detailed information about how all these setpoints are used.

Command Source is set to 'Control Not Used' by default. To enable a PID Control, select appropriate "PID Target Command Source" and "PID Feedback Input Source".

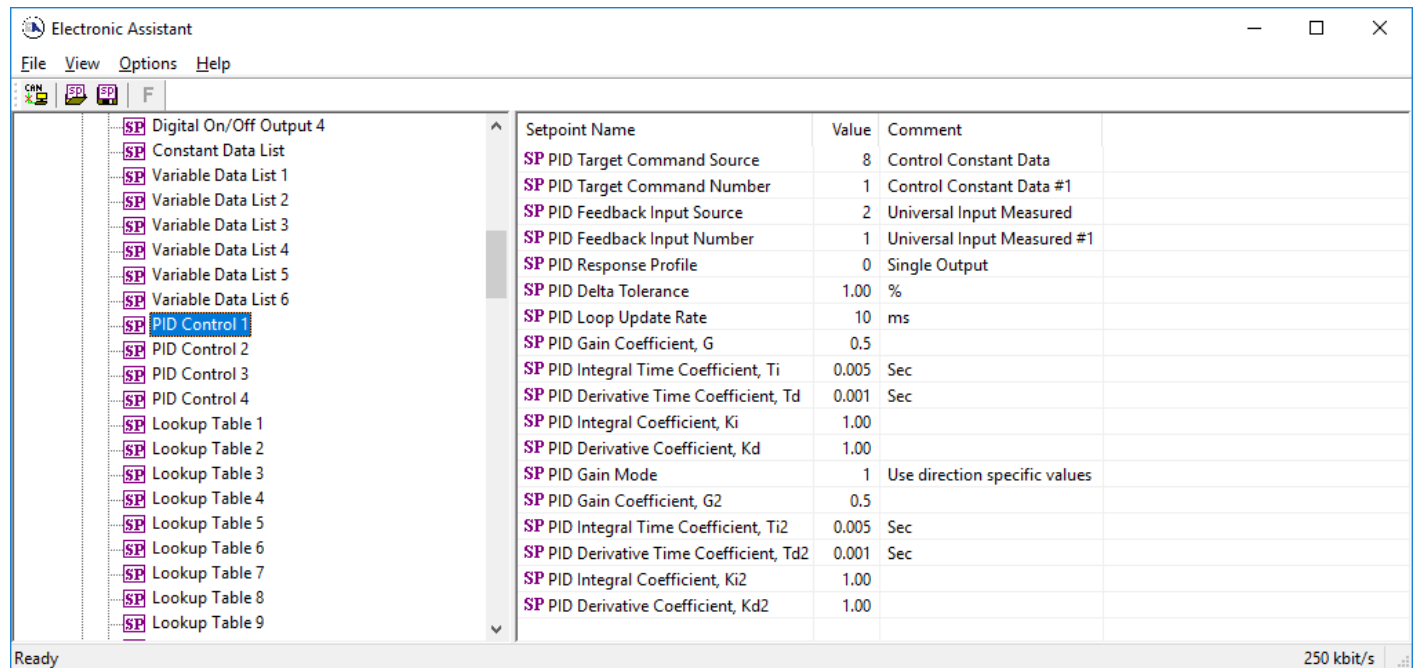



Figure 14 - Screen Capture of PID Control Setpoints

| Name | Range | Default | Notes |
|--------------------------------------|---------------------------|------------------|--------------------------------|
| PID Target Command Source | Drop List | Control Not Used | See Table 27 |
| PID Target Command Number | Depends on control source | 1 | See Table 27 |
| PID Feedback Input Source | Drop List | Control Not Used | See Table 27 |
| PID Feedback Input Number | Depends on control source | 1 | See Table 27 |
| PID Response Profile | Drop List | Single Output | See Table 17 |
| PID Delta Tolerance | 0 to 100 | 1.00 % | % |
| PID Loop Update Rate | 1 to 60 000 ms | 10ms | 1 ms resolution |
| PID Gain Coefficient, G | 0.1 to 10 | 0.5 | See Equation 4 |
| PID Integral Time Coefficient, Ti | 0.001 to 10 Sec | 0.005 Sec | 0.001 Sec (1ms) resolution |
| PID Derivative Time Coefficient, Td | 0.001 to 10 Sec | 0.001 Sec | 0.001 Sec (1ms) resolution |
| PID Integral Coefficient, Ki | 0 to 10 | 1.00 | 0 disables integral, PD ctrl |
| PID Derivative Coefficient, Kd | 0 to 10 | 1.00 | 0 disables derivative, PI ctrl |
| PID Gain Mode | Drop List | 1 | Direction specific values |
| PID Gain Coefficient, G2 | 0.1 to 10 | 0.5 | See Equation 4 |
| PID Integral Time Coefficient, Ti2 | 0.001 to 10 Sec | 0.005 Sec | 0.001 Sec (1ms) resolution |
| PID Derivative Time Coefficient, Td2 | 0.001 to 10 Sec | 0.001 Sec | 0.001 Sec (1ms) resolution |
| PID Integral Coefficient, Ki2 | 0 to 10 | 1.00 | 0 disables integral, PD ctrl |
| PID Derivative Coefficient, Kd2 | 0 to 10 | 1.00 | 0 disables derivative, PI ctrl |

Table 36 – PID Control Setpoints

4.11. Lookup Table

The Lookup Table Function Block is defined in Section 1.6 Please refer there for detailed information about how all these setpoints are used. “**X-Axis Source**” is set to ‘*Control Not Used*’ by default. To enable a Lookup Table select appropriate “**X-Axis Source**”.

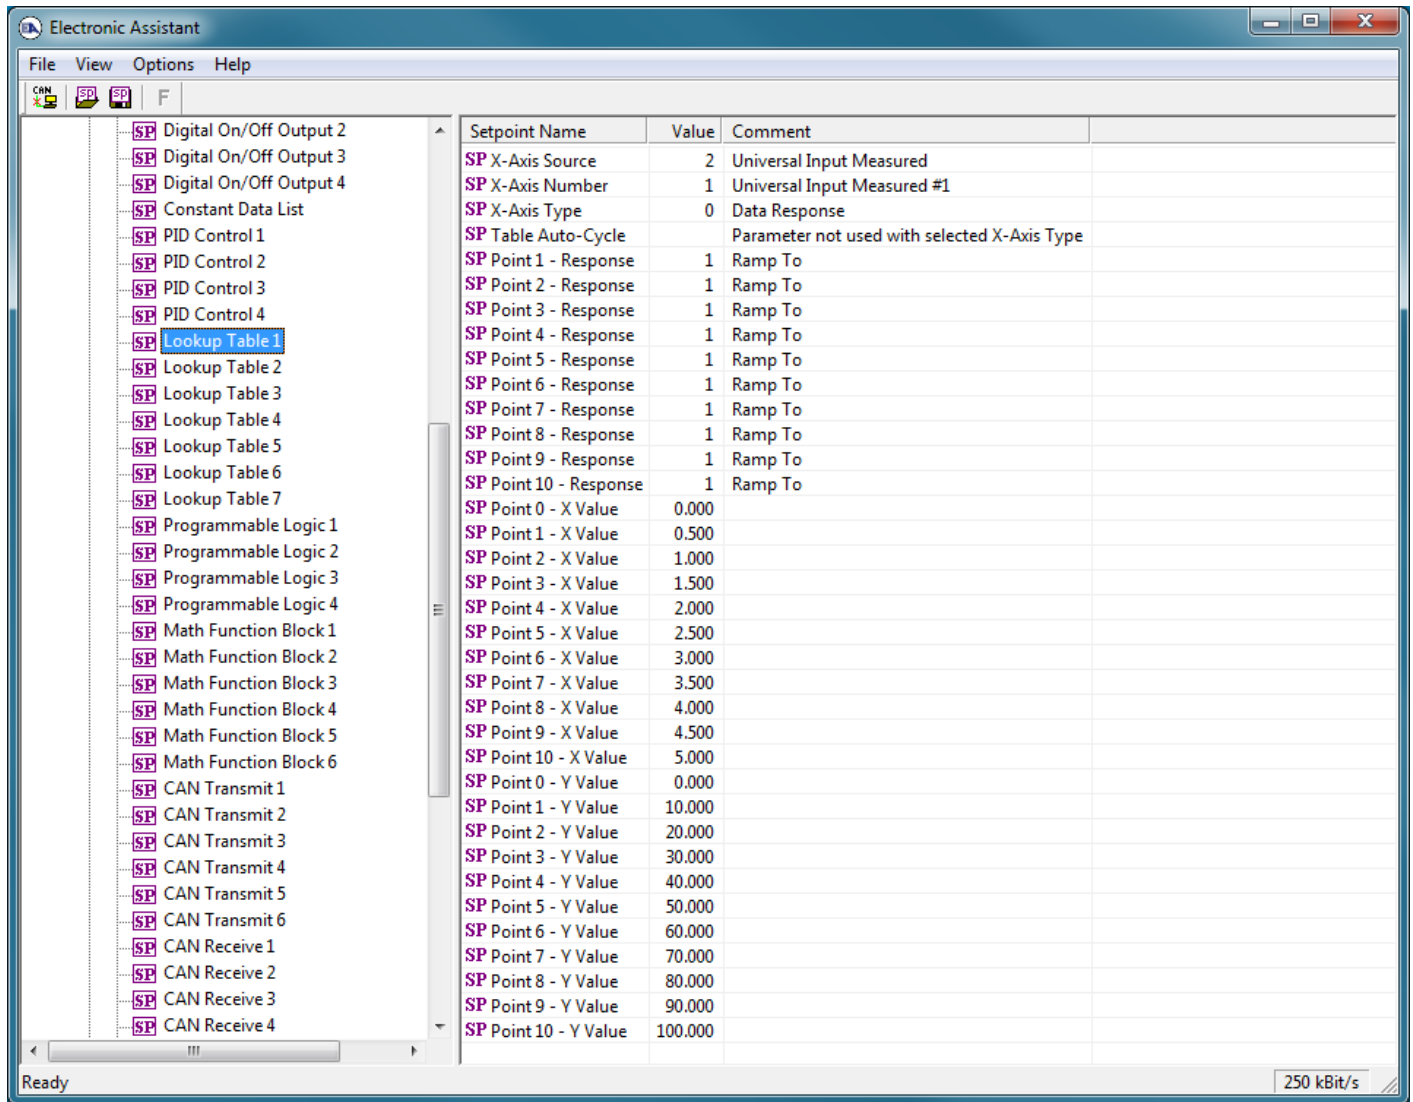

The screenshot shows the 'Electronic Assistant' software window. The left-hand pane contains a tree view of function blocks, with 'Lookup Table 1' highlighted. The right-hand pane displays a table of setpoints for the selected block. The table has three columns: 'Setpoint Name', 'Value', and 'Comment'. The setpoints are organized into X-axis and Y-axis values, with ramp-to points for each.

| Setpoint Name | Value | Comment |
|------------------------|---------|--|
| SP X-Axis Source | 2 | Universal Input Measured |
| SP X-Axis Number | 1 | Universal Input Measured #1 |
| SP X-Axis Type | 0 | Data Response |
| SP Table Auto-Cycle | | Parameter not used with selected X-Axis Type |
| SP Point 1 - Response | 1 | Ramp To |
| SP Point 2 - Response | 1 | Ramp To |
| SP Point 3 - Response | 1 | Ramp To |
| SP Point 4 - Response | 1 | Ramp To |
| SP Point 5 - Response | 1 | Ramp To |
| SP Point 6 - Response | 1 | Ramp To |
| SP Point 7 - Response | 1 | Ramp To |
| SP Point 8 - Response | 1 | Ramp To |
| SP Point 9 - Response | 1 | Ramp To |
| SP Point 10 - Response | 1 | Ramp To |
| SP Point 0 - X Value | 0.000 | |
| SP Point 1 - X Value | 0.500 | |
| SP Point 2 - X Value | 1.000 | |
| SP Point 3 - X Value | 1.500 | |
| SP Point 4 - X Value | 2.000 | |
| SP Point 5 - X Value | 2.500 | |
| SP Point 6 - X Value | 3.000 | |
| SP Point 7 - X Value | 3.500 | |
| SP Point 8 - X Value | 4.000 | |
| SP Point 9 - X Value | 4.500 | |
| SP Point 10 - X Value | 5.000 | |
| SP Point 0 - Y Value | 0.000 | |
| SP Point 1 - Y Value | 10.000 | |
| SP Point 2 - Y Value | 20.000 | |
| SP Point 3 - Y Value | 30.000 | |
| SP Point 4 - Y Value | 40.000 | |
| SP Point 5 - Y Value | 50.000 | |
| SP Point 6 - Y Value | 60.000 | |
| SP Point 7 - Y Value | 70.000 | |
| SP Point 8 - Y Value | 80.000 | |
| SP Point 9 - Y Value | 90.000 | |
| SP Point 10 - Y Value | 100.000 | |

Figure 15 - Screen Capture of Lookup table Setpoints

| Name | Range | Default | Notes |
|---------------------|--|--------------------------------|-----------------|
| X-Axis Source | Drop List | Control Not Used | See Table 27 |
| X-Axis Number | Depends on control source | 1 | See Table 27 |
| X-Axis Type | Drop List | Data Response | See Table 18 |
| Table Auto-Cycle | Drop List | 0 | |
| Point 1 - Response | Drop List | Ramp To | See Table 19 |
| Point 2 - Response | Drop List | Ramp To | See Table 19 |
| Point 3 - Response | Drop List | Ramp To | See Table 19 |
| Point 4 - Response | Drop List | Ramp To | See Table 19 |
| Point 5 - Response | Drop List | Ramp To | See Table 19 |
| Point 6 - Response | Drop List | Ramp To | See Table 19 |
| Point 7 - Response | Drop List | Ramp To | See Table 19 |
| Point 8 - Response | Drop List | Ramp To | See Table 19 |
| Point 9 - Response | Drop List | Ramp To | See Table 19 |
| Point 10 - Response | Drop List | Ramp To | See Table 19 |
| Point 0 - X Value | From X-Axis source minimum to Point 1 - X Value | X-Axis source minimum 0.000 | See Section 1.6 |
| Point 1 - X Value | From Point 0 - X Value to Point 2 - X Value | 0.500 | See Section 1.6 |
| Point 2 - X Value | From Point 1 - X Value to Point 3 - X Value | 1.000 | See Section 1.6 |
| Point 3 - X Value | From Point 2 - X Value to Point 4 - X Value | 1.500 | See Section 1.6 |
| Point 4 - X Value | From Point 3 - X Value to Point 5 - X Value source | 2.000 | See Section 1.6 |
| Point 5 - X Value | From Point 4 - X Value to Point 6 - X Value | 2.500 | See Section 1.6 |
| Point 6 - X Value | From Point 5 - X Value to Point 7 - X Value | 3.000 | See Section 1.6 |
| Point 7 - X Value | From Point 6 - X Value to Point 8 - X Value | 3.500 | See Section 1.6 |
| Point 8 - X Value | From Point 7 - X Value to Point 9 - X Value | 4.000 | See Section 1.6 |
| Point 9 - X Value | From Point 8 - X Value to Point 10 - X Value | 4.500 | See Section 1.6 |
| Point 10 - X Value | From Point 9 - X Value to X-Axis source maximum | X-Axis source maximum 5.000 | See Section 1.6 |
| Point 0 - Y Value | -10 ⁶ to 10 ⁶ | 0.000 | |
| Point 1 - Y Value | -10 ⁶ to 10 ⁶ | 10.000 | |
| Point 2 - Y Value | -10 ⁶ to 10 ⁶ | 20.000 | |
| Point 3 - Y Value | -10 ⁶ to 10 ⁶ | 30.000 | |
| Point 4 - Y Value | -10 ⁶ to 10 ⁶ | 40.000 | |
| Point 5 - Y Value | -10 ⁶ to 10 ⁶ | 50.000 | |
| Point 6 - Y Value | -10 ⁶ to 10 ⁶ | 60.000 | |
| Point 7 - Y Value | -10 ⁶ to 10 ⁶ | 70.000 | |
| Point 8 - Y Value | -10 ⁶ to 10 ⁶ | 80.000 | |
| Point 9 - Y Value | -10 ⁶ to 10 ⁶ | 90.000 | |
| Point 10 - Value | -10 ⁶ to 10 ⁶ | 100.000 | |

Table 37 – Lookup Table Setpoints

4.12. Programmable Logic

The Programmable Logic function block is defined in Section 1.7. Please refer there for detailed information about how all these setpoints are used. **“Programmable Logic Enabled”** is *‘False’* by default. To enable Logic set **“Programmable Logic Enabled”** to *‘True’* and select appropriate **“Argument Source”**.

| Setpoint Name | Value | Comment |
|---|-------|---|
| SP Programmable Logic Enabled | 1 | True |
| SP Table 1 - Lookup Table Block Number | 1 | Lookup Table 1 |
| SP Table 1 - Conditions Logical Operator | 1 | Cnd1 And Cnd2 And Cnd3 |
| SP Table 1 - Condition 1, Argument 1 Source | 2 | Universal Input Measured |
| SP Table 1 - Condition 1, Argument 1 Number | 1 | Universal Input Measured #1 |
| SP Table 1 - Condition 1, Operator | 0 | =, Equal |
| SP Table 1 - Condition 1, Argument 2 Source | 2 | Universal Input Measured |
| SP Table 1 - Condition 1, Argument 2 Number | 2 | Universal Input Measured #2 |
| SP Table 1 - Condition 2, Argument 1 Source | 3 | Digital Input |
| SP Table 1 - Condition 2, Argument 1 Number | 1 | Digital Input #1 |
| SP Table 1 - Condition 2, Operator | 0 | =, Equal |
| SP Table 1 - Condition 2, Argument 2 Source | 3 | Digital Input |
| SP Table 1 - Condition 2, Argument 2 Number | 2 | Digital Input #2 |
| SP Table 1 - Condition 3, Argument 1 Source | 0 | Control Not Used |
| SP Table 1 - Condition 3, Argument 1 Number | | Parameter not used with current Control Source selected |
| SP Table 1 - Condition 3, Operator | | Parameter not used with current Control Source selected |
| SP Table 1 - Condition 3, Argument 2 Source | 0 | Control Not Used |
| SP Table 1 - Condition 3, Argument 2 Number | | Parameter not used with current Control Source selected |
| SP Table 2 - Lookup Table Block Number | 2 | Lookup Table 2 |
| SP Table 2 - Conditions Logical Operator | 1 | Cnd1 And Cnd2 And Cnd3 |
| SP Table 2 - Condition 1, Argument 1 Source | 0 | Control Not Used |
| SP Table 2 - Condition 1, Argument 1 Number | | Parameter not used with current Control Source selected |
| SP Table 2 - Condition 1, Operator | | Parameter not used with current Control Source selected |
| SP Table 2 - Condition 1, Argument 2 Source | 0 | Control Not Used |
| SP Table 2 - Condition 1, Argument 2 Number | | Parameter not used with current Control Source selected |
| SP Table 2 - Condition 2, Argument 1 Source | 0 | Control Not Used |
| SP Table 2 - Condition 2, Argument 1 Number | | Parameter not used with current Control Source selected |
| SP Table 2 - Condition 2, Operator | | Parameter not used with current Control Source selected |
| SP Table 2 - Condition 2, Argument 2 Source | 0 | Control Not Used |
| SP Table 2 - Condition 2, Argument 2 Number | | Parameter not used with current Control Source selected |
| SP Table 2 - Condition 3, Argument 1 Source | 0 | Control Not Used |
| SP Table 2 - Condition 3, Argument 1 Number | | Parameter not used with current Control Source selected |
| SP Table 2 - Condition 3, Operator | | Parameter not used with current Control Source selected |
| SP Table 2 - Condition 3, Argument 2 Source | 0 | Control Not Used |
| SP Table 2 - Condition 3, Argument 2 Number | | Parameter not used with current Control Source selected |
| SP Table 3 - Lookup Table Block Number | 3 | Lookup Table 3 |
| SP Table 3 - Conditions Logical Operator | 1 | Cnd1 And Cnd2 And Cnd3 |
| SP Table 3 - Condition 1, Argument 1 Source | 0 | Control Not Used |
| SP Table 3 - Condition 1, Argument 1 Number | | Parameter not used with current Control Source selected |
| SP Table 3 - Condition 1, Operator | | Parameter not used with current Control Source selected |
| SP Table 3 - Condition 1, Argument 2 Source | 0 | Control Not Used |
| SP Table 3 - Condition 1, Argument 2 Number | | Parameter not used with current Control Source selected |
| SP Table 3 - Condition 2, Argument 1 Source | 0 | Control Not Used |
| SP Table 3 - Condition 2, Argument 1 Number | | Parameter not used with current Control Source selected |
| SP Table 3 - Condition 2, Operator | | Parameter not used with current Control Source selected |
| SP Table 3 - Condition 2, Argument 2 Source | 0 | Control Not Used |
| SP Table 3 - Condition 2, Argument 2 Number | | Parameter not used with current Control Source selected |
| SP Table 3 - Condition 3, Argument 1 Source | 0 | Control Not Used |
| SP Table 3 - Condition 3, Argument 1 Number | | Parameter not used with current Control Source selected |
| SP Table 3 - Condition 3, Operator | | Parameter not used with current Control Source selected |
| SP Table 3 - Condition 3, Argument 2 Source | 0 | Control Not Used |
| SP Table 3 - Condition 3, Argument 2 Number | | Parameter not used with current Control Source selected |

Figure 16 - Screen Capture of Programmable Logic Setpoints

Setpoint ranges and default values for Programmable Logic Blocs are listed in Table 38. Only “**Table1**” setpoint are listed, because other “**TableX**” setpoints are similar, except for the default value of the “**Lookup Table Block Number**” setpoint, which is X for “**TableX**”.

| Name | Range | Default | Notes |
|--|---------------------------|------------------|--------------|
| Programmable Logic Enabled | Drop List | False | |
| Table1 - Lookup Table Block Number | 1 to 8 | Look up Table 1 | |
| Table1 - Conditions Logical Operation | Drop List | Default Table | See Table 21 |
| Table1 - Condition1, Argument 1 Source | Drop List | Control Not Used | See Table 27 |
| Table1 - Condition1, Argument 1 Number | Depends on control source | 1 | See Table 27 |
| Table1 - Condition1, Operator | Drop List | =, Equal | See Table 20 |
| Table1 - Condition1, Argument 2 Source | Drop List | Control Not Used | See Table 27 |
| Table1 - Condition1, Argument 2 Number | Depends on control source | 1 | See Table 27 |
| Table1 - Condition2, Argument 1 Source | Drop List | Control Not Used | See Table 27 |
| Table1 - Condition2, Argument 1 Number | Depends on control source | 1 | See Table 27 |
| Table1 - Condition2, Operator | Drop List | =, Equal | See Table 20 |
| Table1 - Condition2, Argument 2 Source | Drop List | Control Not Used | See Table 27 |
| Table1 - Condition2, Argument 2 Number | Depends on control source | 1 | See Table 27 |
| Table1 - Condition3, Argument 1 Source | Drop List | Control Not Used | See Table 27 |
| Table1 - Condition3, Argument 1 Number | Depends on control source | 1 | See Table 27 |
| Table1 - Condition3, Operator | Drop List | =, Equal | See Table 20 |
| Table1 - Condition3, Argument 2 Source | Drop List | Control Not Used | See Table 27 |
| Table1 - Condition3, Argument 2 Number | Depends on control source | 1 | See Table 27 |

Table 38 – Programmable Logic Setpoints

4.13. Math Function Block

The Math Function Block is defined in Section 0. Please refer there for detailed information about how all these setpoints are used. “**Math Function Enabled**” is ‘False’ by default. To enable a Math function Block, set “**Math Function Enabled**” to ‘True’ and select appropriate “**Input Source**”.

| Setpoint Name | Value | Comment |
|---|--------|--|
| SP Math Function Enabled | 1 | True |
| SP Function 1 Input A Source | 2 | Universal Input Measured |
| SP Function 1 Input A Number | 1 | Universal Input Measured #1 |
| SP Function 1 Input A Minimum | 0.00 | |
| SP Function 1 Input A Maximum | 100.00 | |
| SP Function 1 Input A Scaler | 1.00 | |
| SP Function 1 Input B Source | 2 | Universal Input Measured |
| SP Function 1 Input B Number | 2 | Universal Input Measured #2 |
| SP Function 1 Input B Minimum | 0.00 | |
| SP Function 1 Input B Maximum | 100.00 | |
| SP Function 1 Input B Scaler | 1.00 | |
| SP Math Function 1 Operation | 0 | =, True when InA Equals InB |
| SP Function 2 Input B Source | 0 | Control Not Used |
| SP Function 2 Input B Number | | Parameter not used with current Control Source |
| SP Function 2 Input B Minimum | | Parameter not used with current Control Source |
| SP Function 2 Input B Maximum | | Parameter not used with current Control Source |
| SP Function 2 Input B Scaler | | Parameter not used with current Control Source |
| SP Math Function 2 Operation (Input A = Result of Function 1) | | Parameter not used with current Control Source |
| SP Function 3 Input B Source | 0 | Control Not Used |
| SP Function 3 Input B Number | | Parameter not used with current Control Source |
| SP Function 3 Input B Minimum | | Parameter not used with current Control Source |
| SP Function 3 Input B Maximum | | Parameter not used with current Control Source |
| SP Function 3 Input B Scaler | | Parameter not used with current Control Source |
| SP Math Function 3 Operation (Input A = Result of Function 2) | | Parameter not used with current Control Source |
| SP Function 4 Input B Source | 0 | Control Not Used |
| SP Function 4 Input B Number | | Parameter not used with current Control Source |
| SP Function 4 Input B Minimum | | Parameter not used with current Control Source |
| SP Function 4 Input B Maximum | | Parameter not used with current Control Source |
| SP Function 4 Input B Scaler | | Parameter not used with current Control Source |
| SP Math Function 4 Operation (Input A = Result of Function 3) | | Parameter not used with current Control Source |
| SP Math Output Minimum Range | 0.00 | |
| SP Math Output Maximum Range | 100.00 | |

Figure 17 - Screen Capture of Math Function Block Setpoints

| Name | Range | Default | Notes |
|----------------------------|---------------------------|-----------------------------|--------------|
| Math Function Enabled | Drop List | False | |
| Function 1 Input A Source | Drop List | Control not used | See Table 27 |
| Function 1 Input A Number | Depends on control source | 1 | See Table 27 |
| Function 1 Input A Minimum | -10^6 to 10^6 | 0.0 | |
| Function 1 Input A Maximum | -10^6 to 10^6 | 100.0 | |
| Function 1 Input A Scaler | -1.00 to 1.00 | 1.00 | |
| Function 1 Input B Source | Drop List | Control not used | See Table 27 |
| Function 1 Input B Number | Depends on control source | 1 | See Table 27 |
| Function 1 Input B Minimum | -10^6 to 10^6 | 0.0 | |
| Function 1 Input B Maximum | -10^6 to 10^6 | 100.0 | |
| Function 1 Input B Scaler | -1.00 to 1.00 | 1.00 | |
| Math Function 1 Operation | Drop List | =, True when InA Equals InB | See Table 22 |
| Function 2 Input B Source | Drop List | Control not used | See Table 27 |
| Function 2 Input B Number | Depends on control source | 1 | See Table 27 |
| Function 2 Input B Minimum | -10^6 to 10^6 | 0.0 | |
| Function 2 Input B Maximum | -10^6 to 10^6 | 100.0 | |
| Function 2 Input B Scaler | -1.00 to 1.00 | 1.00 | |
| Math Function 3 Operation | Drop List | =, True when InA Equals InB | See Table 22 |
| Function 3 Input B Source | Drop List | Control not used | See Table 27 |
| Function 3 Input B Number | Depends on control source | 1 | See Table 27 |
| Function 3 Input B Minimum | -10^6 to 10^6 | 0.0 | |
| Function 3 Input B Maximum | -10^6 to 10^6 | 100.0 | |
| Function 3 Input B Scaler | -1.00 to 1.00 | 1.00 | |
| Math Function 3 Operation | Drop List | =, True when InA Equals InB | See Table 22 |
| Function 4 Input B Source | Drop List | Control not used | See Table 27 |
| Function 4 Input B Number | Depends on control source | 1 | See Table 27 |
| Function 4 Input B Minimum | -10^6 to 10^6 | 0.0 | |
| Function 4 Input B Maximum | -10^6 to 10^6 | 100.0 | |
| Function 4 Input B Scaler | -1.00 to 1.00 | 1.00 | |
| Math Function 4 Operation | Drop List | =, True when InA Equals InB | See Table 22 |
| Math Output Minimum Range | -10^6 to 10^6 | 0.0 | |
| Math Output Maximum Range | -10^6 to 10^6 | 100.0 | |

Table 39 – Math Function Setpoints

4.14. CAN Transmit Setpoints

CAN Transmit Message Function Block is presented in Section 0. Please refer there for detailed information how these setpoints are used. **“Transmit Repetition Rate”** is 0ms by default, thus no message will be sent.

| Setpoint Name | Value | Comment |
|--|-----------|---|
| SP Transmit PGN | 0xFF00 | Transmit PGN: 65280 |
| SP Transmit Repetition Rate | 0 | ms |
| SP Transmit Message Priority | 6 | |
| SP Destination Address (PDU1) | 0 | Destination ECU Address: 0x0 |
| SP Signal 1 Data Source | 1 | Received CAN Message |
| SP Signal 1 Data Number | 1 | Received CAN Message #1 |
| SP Signal 1 Transmit Data Type | 2 | CAN signal continuous |
| SP Signal 1 Transmit Data Width | 4 | |
| SP Signal 1 Transmit Data Index in Array (LSB) | 0 | 1st Byte Position |
| SP Signal 1 Transmit Bit Index in Byte (LSB) | 0 | 1st Bit Position |
| SP Signal 1 Transmit Data Resolution | 1.0000000 | |
| SP Signal 1 Transmit Data Offset | 0.0000000 | |
| SP Signal 1 Transmit Data Minimum | 0.0000000 | |
| SP Signal 1 Transmit Data Maximum | 2.5000000 | |
| SP Signal 2 Data Source | 0 | Control Not Used |
| SP Signal 2 Data Number | | Parameter not used with current Data Source |
| SP Signal 2 Transmit Data Type | | Parameter not used with current Data Source |
| SP Signal 2 Transmit Data Width | | Parameter not used with current Data Source |
| SP Signal 2 Transmit Data Index in Array (LSB) | | Parameter not used with current Data Source |
| SP Signal 2 Transmit Bit Index in Byte (LSB) | | Parameter not used with current Data Source |
| SP Signal 2 Transmit Data Resolution | | Parameter not used with current Data Source |
| SP Signal 2 Transmit Data Offset | | Parameter not used with current Data Source |
| SP Signal 2 Transmit Data Minimum | | Parameter not used with current Data Source |
| SP Signal 2 Transmit Data Maximum | | Parameter not used with current Data Source |
| SP Signal 3 Data Source | 0 | Control Not Used |
| SP Signal 3 Data Number | | Parameter not used with current Data Source |
| SP Signal 3 Transmit Data Type | | Parameter not used with current Data Source |
| SP Signal 3 Transmit Data Width | | Parameter not used with current Data Source |
| SP Signal 3 Transmit Data Index in Array (LSB) | | Parameter not used with current Data Source |
| SP Signal 3 Transmit Bit Index in Byte (LSB) | | Parameter not used with current Data Source |
| SP Signal 3 Transmit Data Resolution | | Parameter not used with current Data Source |
| SP Signal 3 Transmit Data Offset | | Parameter not used with current Data Source |
| SP Signal 3 Transmit Data Minimum | | Parameter not used with current Data Source |
| SP Signal 3 Transmit Data Maximum | | Parameter not used with current Data Source |
| SP Signal 4 Data Source | 0 | Control Not Used |
| SP Signal 4 Data Number | | Parameter not used with current Data Source |
| SP Signal 4 Transmit Data Type | | Parameter not used with current Data Source |
| SP Signal 4 Transmit Data Width | | Parameter not used with current Data Source |
| SP Signal 4 Transmit Data Index in Array (LSB) | | Parameter not used with current Data Source |
| SP Signal 4 Transmit Bit Index in Byte (LSB) | | Parameter not used with current Data Source |
| SP Signal 4 Transmit Data Resolution | | Parameter not used with current Data Source |
| SP Signal 4 Transmit Data Offset | | Parameter not used with current Data Source |
| SP Signal 4 Transmit Data Minimum | | Parameter not used with current Data Source |

Figure 18 - Screen Capture of CAN Transmit Message Setpoints

| Name | Range | Default | Notes |
|---------------------------------------|---------------------|-----------------------|------------------------|
| Transmit PGN | 0xffff ... 0xffff | Different for each | See Section 1.13.1 |
| Transmit Repetition Rate | 0 ... 65000 ms | 0ms | 0ms disables transmit |
| Transmit Message Priority | 0...7 | 6 | Proprietary B Priority |
| Destination Address | 0...255 | 255 | Not used by default |
| Signal 1 Control Source | Drop List | Signal undefined | See Table 27 |
| Signal 1 Control Number | Drop List | Signal undefined | See 1.14 |
| Signal 1 Transmit Data Type | Drop List | CAN signal continuous | |
| Signal 1 Transmit Data Width | 0-8 | 4 | |
| Signal 1 Transmit Data Index in Array | 0-7 | 0 | |
| Signal 1 Transmit Bit Index In Byte | 0-7 | 0 | |
| Signal 1 Transmit Data Resolution | -100000.0 to 100000 | 0.001 | |
| Signal 1 Transmit Data Offset | -10000 to 10000 | 0.0 | |
| Signal 1 Transmit Data Minimum | -1000000 to Max | 0.0 | |
| Signal 1 Transmit Data Maximum | Min to 100000 | 2.5 | |
| Signal 2 Control Source | Drop List | Signal undefined | See Table 27 |
| Signal 2 Control Number | Drop List | Signal undefined | See 1.14 |
| Signal 2 Transmit Data Type | Drop List | CAN signal continuous | |
| Signal 2 Transmit Data Width | 0-8 | 4 | |
| Signal 2 Transmit Data Index in Array | 0-7 | 1 | |
| Signal 2 Transmit Bit Index In Byte | 0-7 | 0 | |
| Signal 2 Transmit Data Resolution | -100000.0 to 100000 | 0.001 | |
| Signal 2 Transmit Data Offset | -10000 to 10000 | 0.0 | |
| Signal 2 Transmit Data Minimum | -1000000 to Max | 0.0 | |
| Signal 2 Transmit Data Maximum | Min to 100000 | 2.5 | |
| Signal 3 Control Source | Drop List | Signal undefined | See Table 27 |
| Signal 3 Control Number | Drop List | Signal undefined | See 1.14 |
| Signal 3 Transmit Data Type | Drop List | CAN signal continuous | |
| Signal 3 Transmit Data Width | 0-8 | 4 | |
| Signal 3 Transmit Data Index in Array | 0-7 | 2 | |
| Signal 3 Transmit Bit Index In Byte | 0-7 | 0 | |
| Signal 3 Transmit Data Resolution | -100000.0 to 100000 | 0.001 | |
| Signal 3 Transmit Data Offset | -10000 to 10000 | 0.0 | |
| Signal 3 Transmit Data Minimum | -1000000 to Max | 0.0 | |
| Signal 3 Transmit Data Maximum | Min to 100000 | 2.5 | |
| Signal 4 Control Source | Drop List | Signal undefined | See Table 27 |
| Signal 4 Control Number | Drop List | Signal undefined | See 1.14 |
| Signal 4 Transmit Data Type | Drop List | CAN signal continuous | |
| Signal 4 Transmit Data Width | 0-8 | 4 | |
| Signal 4 Transmit Data Index in Array | 0-7 | 3 | |
| Signal 4 Transmit Bit Index In Byte | 0-7 | 0 | |
| Signal 4 Transmit Data Resolution | -100000.0 to 100000 | 0.001 | |
| Signal 4 Transmit Data Offset | -10000 to 10000 | 0.0 | |
| Signal 4 Transmit Data Minimum | -1000000 to Max | 0.0 | |
| Signal 4 Transmit Data Maximum | Min to 100000 | 2.5 | |
| Signal 5 Control Source | Drop List | Signal undefined | See Table 27 |
| Signal 5 Control Number | Drop List | Signal undefined | See 1.14 |
| Signal 5 Transmit Data Type | Drop List | CAN signal continuous | |
| Signal 5 Transmit Data Width | 0-8 | 4 | |
| Signal 5 Transmit Data Index in Array | 0-7 | 4 | |
| Signal 5 Transmit Bit Index In Byte | 0-7 | 0 | |
| Signal 5 Transmit Data Resolution | -100000.0 to 100000 | 0.001 | |
| Signal 5 Transmit Data Offset | -10000 to 10000 | 0.0 | |

| | | | |
|---------------------------------------|---------------------|-----------------------|--------------|
| Signal 5 Transmit Data Minimum | -1000000 to Max | 0.0 | |
| Signal 5 Transmit Data Maximum | Min to 100000 | 2.5 | |
| Signal 6 Control Source | Drop List | Signal undefined | See Table 27 |
| Signal 6 Control Number | Drop List | Signal undefined | See 1.14 |
| Signal 6 Transmit Data Type | Drop List | CAN signal continuous | |
| Signal 6 Transmit Data Width | 0-8 | 4 | |
| Signal 6 Transmit Data Index in Array | 0-7 | 5 | |
| Signal 6 Transmit Bit Index In Byte | 0-7 | 0 | |
| Signal 6 Transmit Data Resolution | -100000.0 to 100000 | 0.001 | |
| Signal 6 Transmit Data Offset | -10000 to 10000 | 0.0 | |
| Signal 6 Transmit Data Minimum | -1000000 to Max | 0.0 | |
| Signal 6 Transmit Data Maximum | Min to 100000 | 2.5 | |

Table 40 – CAN Transmit Message Setpoints

4.15. CAN Receive Setpoints

The Math Function Block is defined in Section 1.15. Please refer there for detailed information about how these setpoints are used. “**Receive Message Timeout**” is set to 0ms by default. To enable Receive message set “**Receive Message Timeout**” that differs from zero.

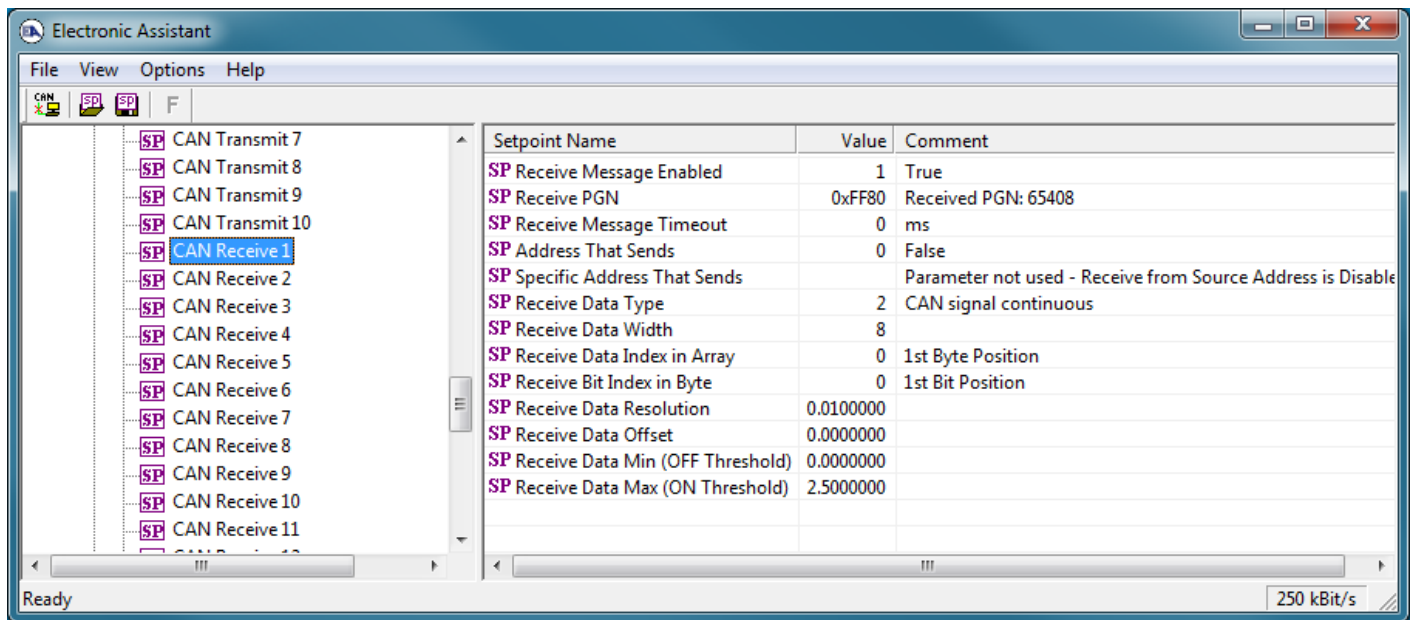


Figure 19 - Screen Capture of CAN Receive Message Setpoints

| Name | Range | Default | Notes |
|----------------------------------|---------------------|-----------------------|-------|
| Received Message Enabled | Drop List | False | |
| Received PGN | 0 to 65536 | Different for each | |
| Received Message Timeout | 0 to 60 000 ms | 0ms | |
| Specific Address that sends PGN | Drop List | False | |
| Address That Sends | 0 to 255 | 254 (0xFE, Null Addr) | |
| Receive Data Type | Drop List | CAN signal continuous | |
| Receive Data Width | 0-8 | 8 | |
| Receive Data Index in Array | 0-7 | 0 | |
| Receive Bit Index In Byte | 0-7 | 0 | |
| Receive Data Resolution | -100000.0 to 100000 | 0.001 | |
| Receive Data Offset | -10000 to 10000 | 0.0 | |
| Receive Data Min (Off Threshold) | -1000000 to Max | 0.0 | |
| Receive Data Max (On Threshold) | -100000 to 100000 | 2.0 | |

Table 41 – CAN Receive Setpoints

4.16. DTC React

The DTC React Function Block is defined in Section 0. Please refer there for detailed information about how these setpoints are used.

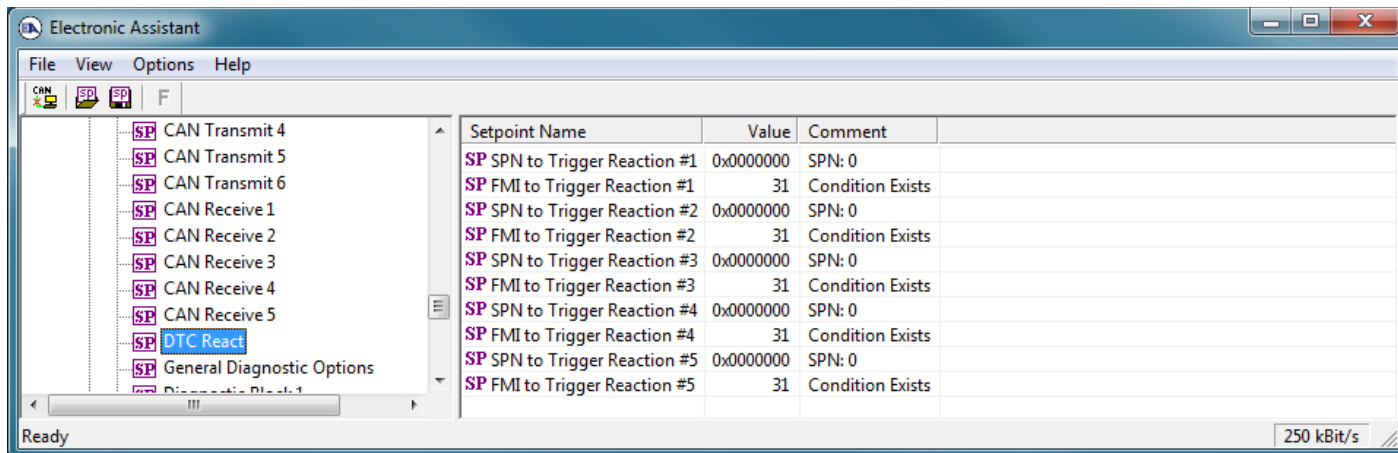


Figure 20 - Screen Capture of DTC React Setpoints

| Name | Range | Default | Notes |
|----------------------------|-------------|----------------------|---|
| SPN to Trigger Reaction #1 | 0 to 524287 | 0 | 0 is an illegal value, and disables the DTC |
| FMI to Trigger Reaction #X | Drop List | 31, Condition Exists | Supports all FMIs in the J1939 standard |

Table 42 – DTC React Setpoints

4.17. General Diagnostics Options

These setpoints control the shutdown of the ECU in case of a power supply or CPU temperature related errors. Refer to section 1.4 for more info.

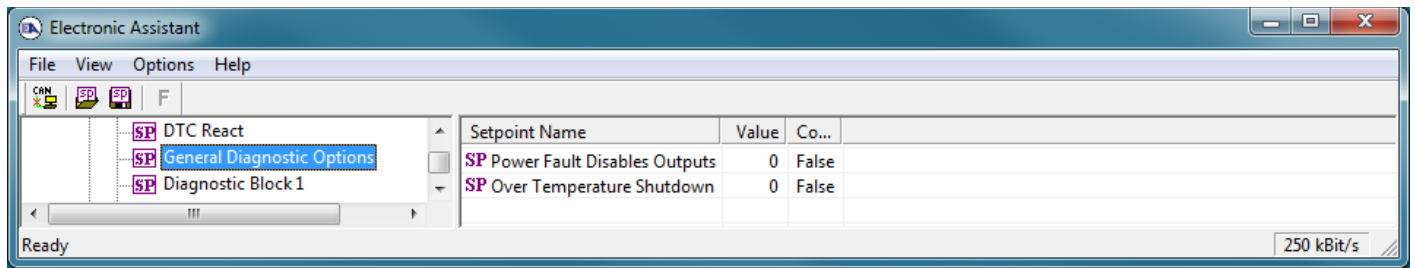


Figure 21 - Screen Capture of General Diagnostics Options Setpoints

| Name | Range | Default | Notes |
|------------------------------|-----------|---------|-------|
| Power Fault Disables Outputs | Drop List | 0 | |
| Over Temperature Shutdown | Drop List | 0 | |

Table 43 – General Diagnostics Options Setpoints

4.18. Diagnostics Blocks

There are 16 Diagnostics blocks that can be configured to monitor various parameters of the Controller. The Diagnostic Function Block is defined in section 1.4. Please refer there for detailed information how these setpoints are used.

| Setpoint Name | Value | Comment |
|--|-----------|--|
| SP Fault Detection is Enabled | 1 | True |
| SP Function Type to Monitor | 12 | Power Supply Measured |
| SP Function Parameter to Monitor | 1 | Power Supply Measured |
| SP Enable Source | 0 | Control Not Used |
| SP Enable Number | | Parameter not used with current Enable Source |
| SP Enable Response | | Parameter not used with current Enable Source |
| SP Fault Detection Type | 1 | Min and Max Error |
| SP Maximum Value for Diagnostic Data | 45.00 | |
| SP Minimum Value for Diagnostic Data | 0.00 | |
| SP Use Hysteresis When Defining Thresholds | 1 | True |
| SP Hysteresis | 2.00 | |
| SP Event Cleared Only by DM11 | 0 | False |
| SP Set Limit for MAXIMUM SHUTDOWN | 30.00 | |
| SP Clear Limit for MAXIMUM SHUTDOWN | | Parameter not used - Hysteresis used when defi |
| SP Set Limit for MAXIMUM WARNING | | Parameter not used with current Fault Detector |
| SP Clear Limit for MAXIMUM WARNING | | Parameter not used with current Fault Detector |
| SP Set Limit for MINIMUM WARNING | | Parameter not used with current Fault Detector |
| SP Clear Limit for MINIMUM WARNING | | Parameter not used with current Fault Detector |
| SP Set Limit for MINIMUM SHUTDOWN | 9.00 | |
| SP Clear Limit for MINIMUM SHUTDOWN | | Parameter not used - Hysteresis used when defi |
| SP MAXIMUM SHUTDOWN, Event Generates a DTC in DM1 | 1 | True |
| SP MAXIMUM SHUTDOWN, Lamp Set by Event | 1 | Amber,Warning |
| SP MAXIMUM SHUTDOWN, SPN for Event | 0x007F300 | SPN: 520960 |
| SP MAXIMUM SHUTDOWN, FMI for Event | 3 | Voltage Above Normal, Or Shorted To High Sou |
| SP MAXIMUM SHUTDOWN, Delay Before Event is Flagged | 1000 | ms |
| SP MAXIMUM WARNING, Event Generates a DTC in DM1 | | Parameter not used with current Fault Detector |
| SP MAXIMUM WARNING, Lamp Set by Event | | Parameter not used with current Fault Detector |
| SP MAXIMUM WARNING, SPN for Event | | Parameter not used with current Fault Detector |
| SP MAXIMUM WARNING, FMI for Event | | Parameter not used with current Fault Detector |
| SP MAXIMUM WARNING, Delay Before Event is Flagged | | Parameter not used with current Fault Detector |
| SP MINIMUM WARNING, Event Generates a DTC in DM1 | | Parameter not used with current Fault Detector |
| SP MINIMUM WARNING, Lamp Set by Event | | Parameter not used with current Fault Detector |
| SP MINIMUM WARNING, SPN for Event | | Parameter not used with current Fault Detector |
| SP MINIMUM WARNING, FMI for Event | | Parameter not used with current Fault Detector |
| SP MINIMUM WARNING, Delay Before Event is Flagged | | Parameter not used with current Fault Detector |
| SP MINIMUM SHUTDOWN, Event Generates a DTC in DM1 | 1 | True |
| SP MINIMUM SHUTDOWN, Lamp Set by Event | 1 | Amber,Warning |
| SP MINIMUM SHUTDOWN, SPN for Event | 0x007F300 | SPN: 520960 |
| SP MINIMUM SHUTDOWN, FMI for Event | 4 | Voltage Below Normal, Or Shorted To Low Sour |
| SP MINIMUM SHUTDOWN, Delay Before Event is Flagged | 1000 | ms |

Figure 22 - Screen Capture of Diagnostic Block Setpoints

| Name | Range | Default | Notes |
|--|--|-----------------------|--|
| Fault Detection is Enabled | Drop List | False | |
| Function Type to Monitor | Drop List | 0 – Control not used | |
| Function parameter to Monitor | Drop List | 0 – No selection | |
| Fault Detection Type | Drop List | 1 – Min and Max Error | See section 1.4 |
| Maximum Value for Diagnostic Data | Minimum Value for Diagnostic Data ... 4.28e ⁹ | 5.0 | |
| Minimum Value for Diagnostic Data | 0.0 ... Maximum Value for Diagnostic Data | 0.0 | |
| Use Hysteresis When Defining Thresholds | Drop List | False | |
| Hysteresis | 0.0 ... Maximum Value for Diagnostic Data | 0.0 | |
| Event Cleared only by DM11 | Drop List | False | |
| Set Limit for MAXIMUM SHUTDOWN | Minimum Value for Diagnostic Data ... Maximum Value for Diagnostics Data | 4.8 | |
| Clear Limit for MAXIMUM SHUTDOWN | Minimum Value for Diagnostic Data ... Maximum Value for Diagnostics Data | 4.6 | |
| Set Limit for MAXIMUM WARNING | Minimum Value for Diagnostic Data ... Maximum Value for Diagnostics Data | 0.0 | |
| Clear Limit for MAXIMUM WARNING | Minimum Value for Diagnostic Data ... Maximum Value for Diagnostics Data | 0.0 | |
| Clear Limit for MINIMUM WARNING | Minimum Value for Diagnostic Data ... Maximum Value for Diagnostics Data | 0.0 | |
| Set Limit for MINIMUM WARNING | Minimum Value for Diagnostic Data ... Maximum Value for Diagnostics Data | 0.0 | |
| Clear Limit for MINIMUM SHUTDOWN | Minimum Value for Diagnostic Data ... Maximum Value for Diagnostics Data | 0.4 | |
| Set Limit for MINIMUM SHUTDOWN | Minimum Value for Diagnostic Data ... Maximum Value for Diagnostics Data | 0.2 | |
| MAXIMUM SHUTDOWN, Event Generates a DTC in DM1 | Drop List | True | |
| MAXIMUM SHUTDOWN, Lamp Set by Event | Drop List | 0 – Protect | See Table 14 |
| MAXIMUM SHUTDOWN, SPN for Event | 0...524287 | 520448 (\$7F100) | It is the user's responsibility to select an SPN that will not violate the J1939 standard. |

| | | | |
|---|--------------|-------------------------|--|
| MAXIMUM SHUTDOWN, FMI for Event | Drop List | 3, Voltage Above Normal | See Table 15 |
| MAXIMUM SHUTDOWN, Delay Before Event is Flagged | 0...60000 ms | 1000 | |
| MAXIMUM WARNING, Event Generates a DTC in DM1 | Drop List | True | |
| MAXIMUM WARNING, Lamp Set by Event | Drop List | 0 – Protect | See Table 14 |
| MAXIMUM WARNING, SPN for Event | 0...524287 | 520704 (\$7F200) | It is the user's responsibility to select an SPN that will not violate the J1939 standard. |
| MAXIMUM WARNING, FMI for Event | Drop List | 3, Voltage Above Normal | See Table 15 |
| MAXIMUM WARNING, Delay Before Event is Flagged | 0...60000 ms | 1000 | |
| MINIMUM WARNING, Event Generates a DTC in DM1 | Drop List | True | |
| MINIMUM WARNING, Lamp Set by Event | Drop List | 0 – Protect | See Table 14 |
| MAXIMUM WARNING, SPN for Event | 0...524287 | 520960 (\$7F300) | It is the user's responsibility to select an SPN that will not violate the J1939 standard. |
| MINIMUM WARNING, FMI for Event | Drop List | 4, Voltage Below Normal | See Table 15 |
| MINIMUM WARNING, Delay Before Event is Flagged | 0...60000 ms | 1000 | |
| MINIMUM SHUTDOWN, Event Generates a DTC in DM1 | Drop List | True | |
| MINIMUM SHUTDOWN, Lamp Set by Event | Drop List | Amber Warning | See Table 14 |
| MINIMUM SHUTDOWN, SPN for Event | 0...524287 | 521216 (\$7F400) | It is the user's responsibility to select an SPN that will not violate the J1939 standard. |
| MINIMUM SHUTDOWN, FMI for Event | Drop List | 4, Voltage Below Normal | See Table 15 |
| MINIMUM SHUTDOWN, Delay Before Event is Flagged | 0...60000 ms | 1000 | |


Table 44 – Diagnostic Block Setpoints

5. REFLASHING OVER CAN WITH EA BOOTLOADER

The AX020400/AX020410 can be upgraded with new application firmware using the **Bootloader Information** section. This section details the simple step-by-step instructions to upload new firmware provided by Axiomatic onto the unit via CAN, without requiring it to be disconnected from the J1939 network.

Note: To upgrade the firmware use Electronic Assistant® EA V4.5.53.0 or higher.


1. When EA first connects to the ECU, the **Bootloader Information** section will display the following information.

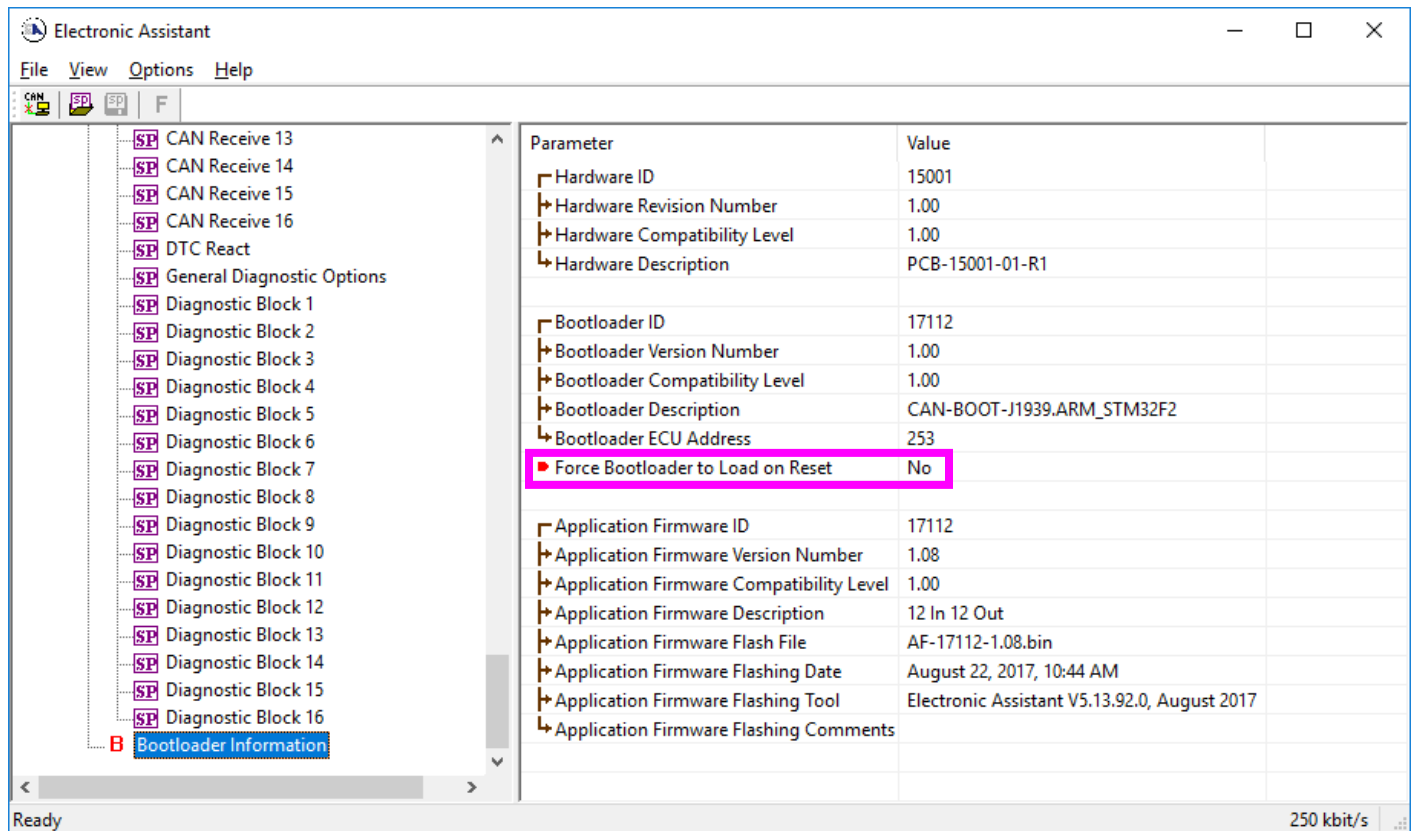

The screenshot shows the Electronic Assistant software window. The left sidebar contains a tree view with 'Bootloader Information' selected. The main area displays a table of parameters and their values.


| Parameter | Value |
|--|--|
| Hardware ID | 15001 |
| Hardware Revision Number | 1.00 |
| Hardware Compatibility Level | 1.00 |
| Hardware Description | PCB-15001-01-R1 |
| Bootloader ID | 17112 |
| Bootloader Version Number | 1.00 |
| Bootloader Compatibility Level | 1.00 |
| Bootloader Description | CAN-BOOT-J1939.ARM_STM32F2 |
| Bootloader ECU Address | 253 |
| Force Bootloader to Load on Reset | No |
| Application Firmware ID | 17112 |
| Application Firmware Version Number | 1.08 |
| Application Firmware Compatibility Level | 1.00 |
| Application Firmware Description | 12 In 12 Out |
| Application Firmware Flash File | AF-17112-1.08.bin |
| Application Firmware Flashing Date | August 22, 2017, 10:44 AM |
| Application Firmware Flashing Tool | Electronic Assistant V5.13.92.0, August 2017 |
| Application Firmware Flashing Comments | |

2. To use the bootloader to upgrade the firmware running on the ECU, change the variable “**Force Bootloader To Load on Reset**” to Yes.

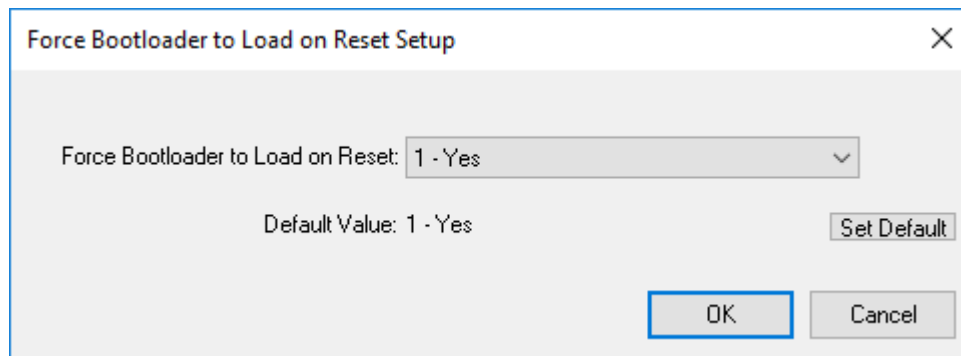



The dialog box titled 'Force Bootloader to Load on Reset Setup' contains a dropdown menu for 'Force Bootloader to Load on Reset' set to '1 - Yes'. Below the dropdown, it shows 'Default Value: 1 - Yes' and a 'Set Default' button. At the bottom are 'OK' and 'Cancel' buttons.

3. When the prompt box asks if you want to reset the ECU, select Yes.

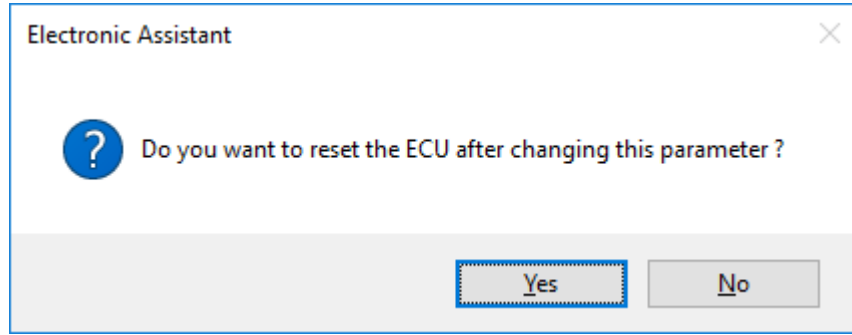


4. Upon reset, the ECU will no longer show up on the J1939 network as an AX020400 but rather as **J1939 Bootloader #1**.

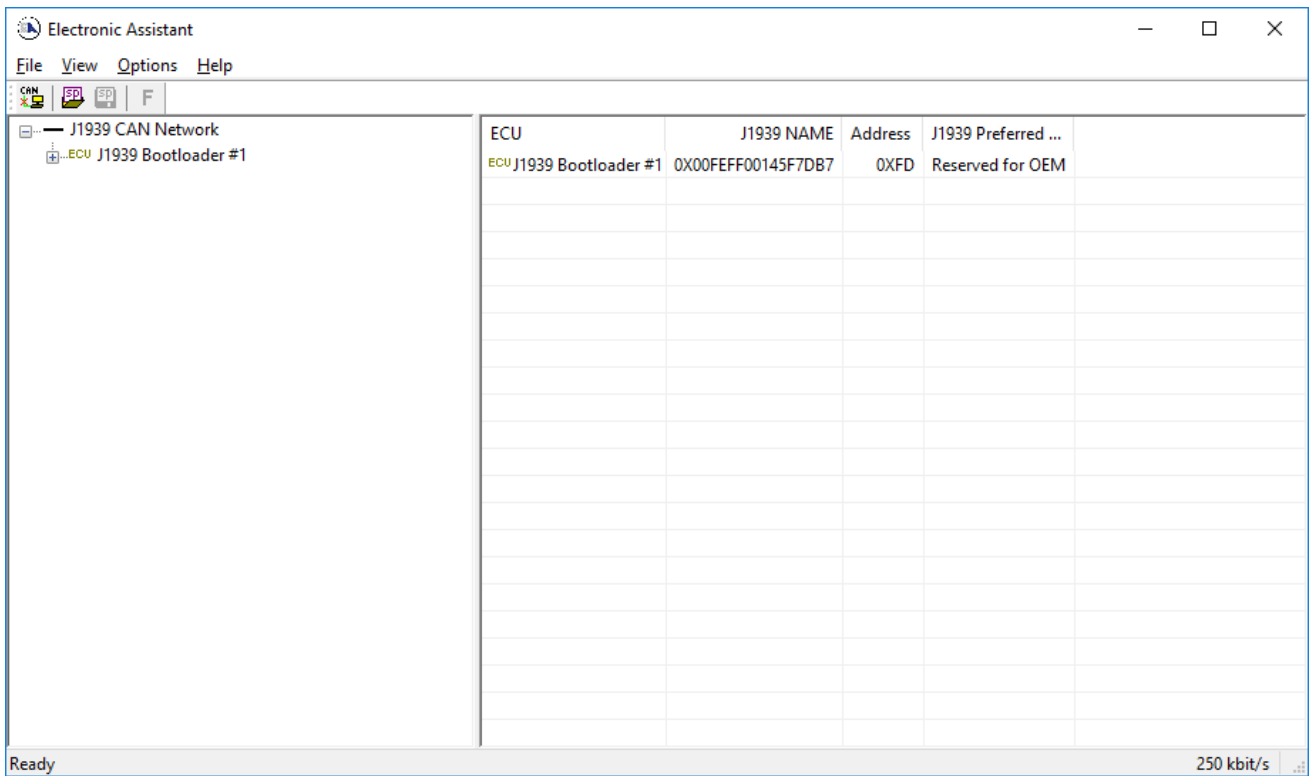

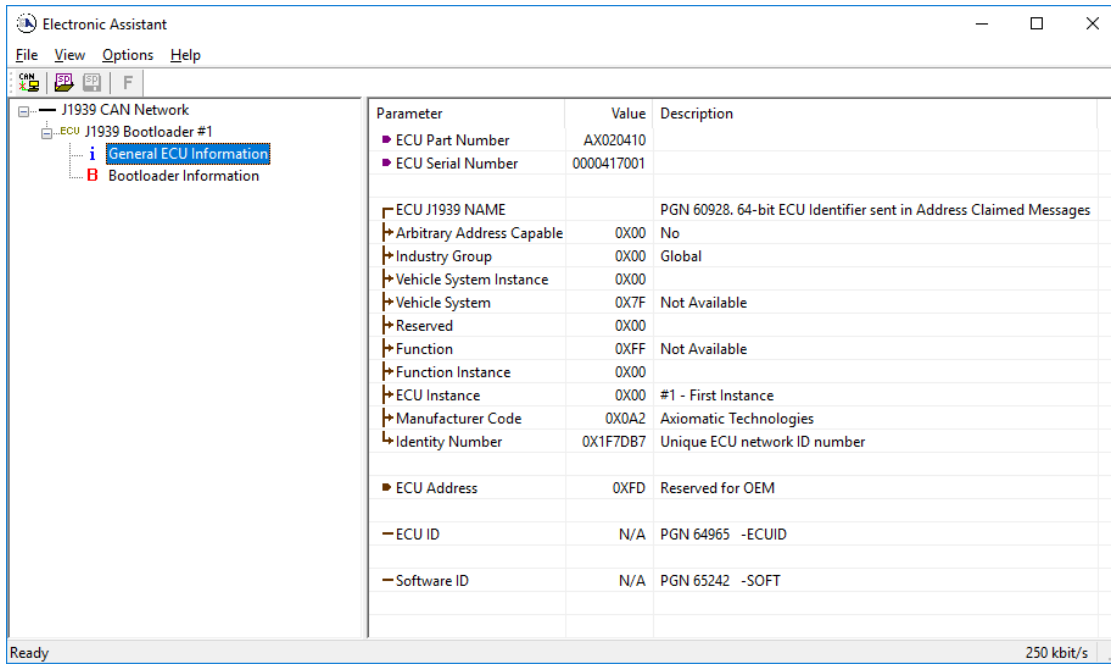

Note that the bootloader is NOT Arbitrary Address Capable. This means that if you want to have multiple bootloaders running simultaneously (not recommended) you would have to manually change the address for each one before activating the next, or there will be address conflicts. And only one ECU would show up as the bootloader. Once the 'active' bootloader returns to regular functionality, the other ECU(s) would have to be power cycled to re-activate the bootloader feature.

- When the **Bootloader Information** section is selected, the same information is shown as when it was running the AX020400/AX020410 firmware, but in this case the **F**lashing feature has been enabled.

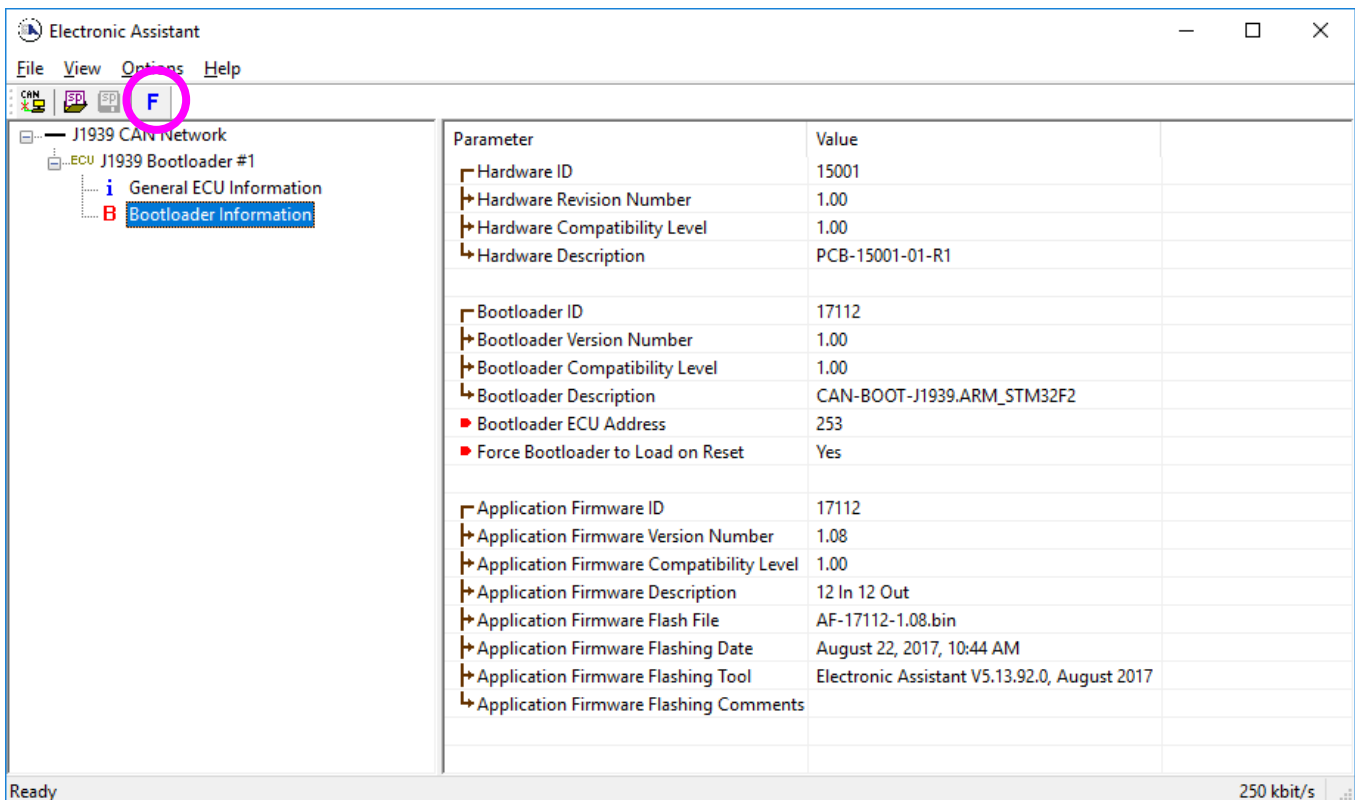

6. Select the **F**lashing button and navigate to where you had saved the **AF-15001-x.xx.bin / AF-17112-x.xx.bin** file sent from Axiomatic. (Note: only binary (.bin) files can be flashed using the EA tool.)
7. Once the Flash Application Firmware window opens, you can enter comments such as “Firmware upgraded by [Name]” if you so desire. This is not required, and you can leave the field blank if you do not want to use it.

Note: You do not have to date/time-stamp the file, as the EA tool automatically does this when you upload the new firmware.

Flash Application Firmware

Flash File Name: AF-17112-1.08.bin

Flashing Comments: |
Press CTRL+ENTER to add a new string

Erase All ECU Flash Memory


Flashing Status
Idle

Flash ECU
Cancel Flashing
Exit




NOTE: It is good practice to tick the “Erase All ECU Flash Memory” box. Please note, that selecting this option will **erase ALL data stored in non-volatile flash**. It will also erase any configuration of the setpoints that might have been done to the ECU and reset all setpoints to their factory defaults. In case the controller contains custom settings, those settings need to be saved to PC before reflashing.

A progress bar will show how much of the firmware has been sent as the upload progresses. The more traffic there is on the J1939 network, the longer the upload process will take.

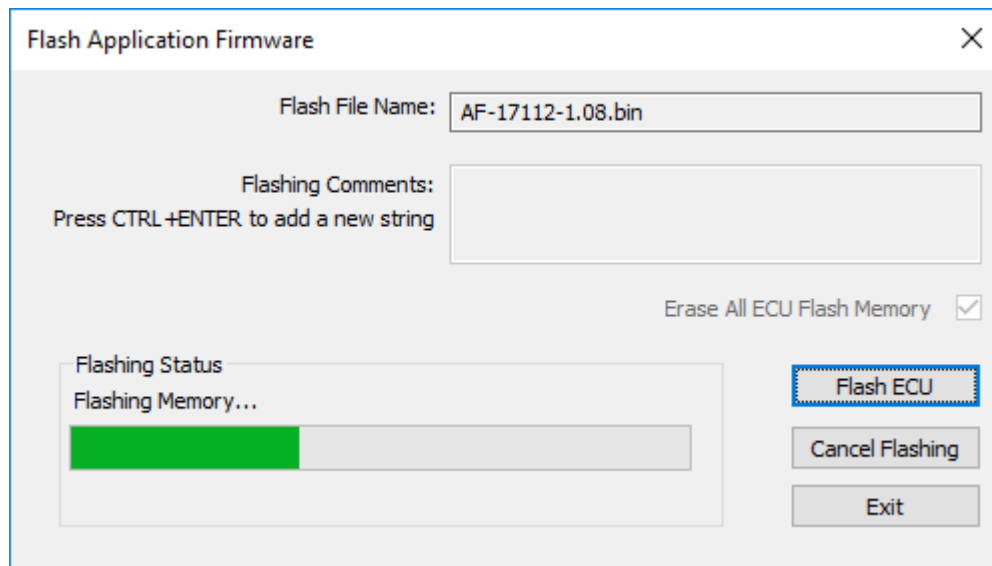

Once the firmware has finished uploading, a message will pop up indicating the successful operation. If you select to reset the ECU, the new version of the AX020400 application will start running, and the ECU will be identified as such by EA. Otherwise, the next time the ECU is power-cycled, the AX020400 application will run rather than the bootloader function.

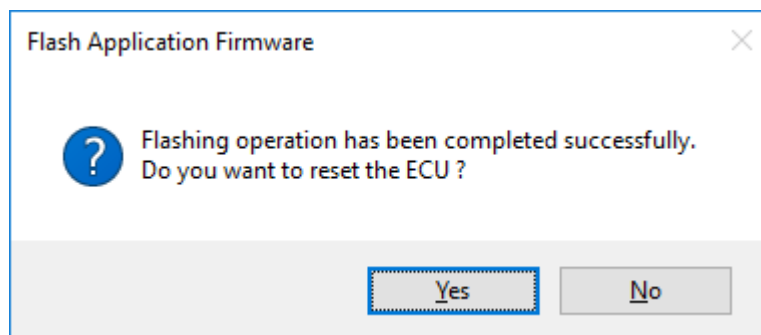

Note: If at any time during the upload the process is interrupted, the data is corrupted (bad checksum) or for any other reason the new firmware is not correct, i.e. bootloader detects that the file loaded was not designed to run on the hardware platform, the bad or corrupted application will not run. Rather, when the ECU is reset or power-cycled the **J1939 Bootloader** will continue to be the default application until valid firmware has been successfully uploaded into the unit.

APPENDIX A - TECHNICAL SPECIFICATION

Technical Specifications:

Specifications are indicative and subject to change. Actual performance will vary depending on the application and operating conditions. Users should satisfy themselves that the product is suitable for use in the intended application. All our products carry a limited warranty against defects in material and workmanship. Please refer to our Warranty, Application Approvals/Limitations and Return Materials Process as described on www.axiomatic.com/service.html.

Input Specifications

| | |
|--|---|
| Power Supply Input | 12 or 24Vdc nominal (8...36 Vdc power supply range) NB. The maximum total current draw permitted on the power supply input pins is 15 Amps @ 24Vdc, at one time. Suitable for engine cranking and load dump |
| Reverse Polarity Protection | Provided up to -80Vdc (datasheet for quad is +80V) |
| Surge and Transient Protection | Provided |
| Under-voltage Protection | Provided (hardware shutdown) |
| Overvoltage Protection | Provided (hardware shutdown) |
| All Inputs | Up to 12 inputs are selectable by the user from the following. <ul style="list-style-type: none"> • 7 Universal Inputs • 5 PWM/Digital Inputs All inputs, except for frequency and counter, are sampled every 10ms. |
| Universal Signal Input Configuration (basic operation modes) | Universal Inputs 1 through 6 are configurable as the following. <ul style="list-style-type: none"> • Disable Input • 12-bit Analog to Digital (0...5Vdc, 0...10Vdc) (4...20mA or 0...20mA, Current sense resistor 124Ω) (20Ω to 250 kΩ Resistive) • Digital input (Active High to Vps or Active Low to GND, Amplitude 3.3V to +Vps) Configurable pull up or pull down resistor |
| Universal Signal Input Configuration (additional operation modes) | In addition to the basic operation modes, the Universal Inputs 1, 3, 5 are further configurable as <ul style="list-style-type: none"> • PWM Signal (Frequency: 1-10,000 Hz, 0-100% D.C., 1MΩ impedance) • Pulse Counter |
| Signal Input 7 Configuration | Input 7 is configurable as the following. <ul style="list-style-type: none"> • Disable Input • 12-bit Analog to Digital (0...5Vdc, 0...10Vdc) (4...20mA or 0...20mA, Current sense resistor 124Ω) • PWM Signal (Frequency: 1-10,000 Hz, 0-100% D.C., 1MΩ impedance) • Pulse Counter • Digital input (Active High to Vps or Active Low to GND, Amplitude 3.3V to +Vps) Configurable pull up or pull down resistor |
| PWM/Digital Input Configuration (basic configuration) | PWM/Digital Inputs 1 through 5 are configurable as the following. <ul style="list-style-type: none"> • Disable input • Digital input (Active High to Vps or Active Low to GND, Amplitude 3.3V to +Vps) Configurable pull up or pull down resistor |
| PWM/Digital Input Configuration (additional operation modes) | In addition to the basic operation modes, the PWM/Digital Inputs 1, 3, 5 are further configurable as <ul style="list-style-type: none"> • PWM Signal (Frequency: 1-10,000 Hz, 0-100% D.C., 1MΩ impedance) • Pulse Counter |


| Minimum and Maximum Ratings | <table border="1"> <thead> <tr> <th colspan="4">Table 1.0. Absolute Maximum and Minimum Ratings</th> </tr> <tr> <th>Characteristic</th> <th>Min</th> <th>Max</th> <th>Units</th> </tr> </thead> <tbody> <tr> <td>Power Supply</td> <td>8</td> <td>36</td> <td>V dc</td> </tr> <tr> <td>Voltage Input</td> <td>0</td> <td>36</td> <td>V dc</td> </tr> <tr> <td>Current Input</td> <td>0</td> <td>21</td> <td>mA</td> </tr> <tr> <td>Current Input – Voltage Level</td> <td>0</td> <td>36</td> <td>Vdc</td> </tr> <tr> <td>Digital Type Input – Voltage Level</td> <td>0</td> <td>36</td> <td>Vdc</td> </tr> <tr> <td>PWM Duty Cycle</td> <td>0</td> <td>100</td> <td>%</td> </tr> <tr> <td>PWM Frequency</td> <td>50</td> <td>10 000</td> <td>Hz</td> </tr> <tr> <td>PWM Voltage pk - pk</td> <td>0</td> <td>36</td> <td>V dc</td> </tr> <tr> <td>RPM Frequency</td> <td>50</td> <td>10 000</td> <td>Hz</td> </tr> </tbody> </table> | Table 1.0. Absolute Maximum and Minimum Ratings | | | | Characteristic | Min | Max | Units | Power Supply | 8 | 36 | V dc | Voltage Input | 0 | 36 | V dc | Current Input | 0 | 21 | mA | Current Input – Voltage Level | 0 | 36 | Vdc | Digital Type Input – Voltage Level | 0 | 36 | Vdc | PWM Duty Cycle | 0 | 100 | % | PWM Frequency | 50 | 10 000 | Hz | PWM Voltage pk - pk | 0 | 36 | V dc | RPM Frequency | 50 | 10 000 | Hz |
|---|---|---|-------|--|------------|----------------|------------|---------|--------|--------------|---------|--------|--------|---------------|--------|----------------|------|----------------------------------|----------|----|----|-------------------------------|---|----|-----|------------------------------------|---|----|-----|----------------|---|-----|---|---------------|----|--------|----|---------------------|---|----|------|---------------|----|--------|----|
| Table 1.0. Absolute Maximum and Minimum Ratings | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Characteristic | Min | Max | Units | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Power Supply | 8 | 36 | V dc | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Voltage Input | 0 | 36 | V dc | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Current Input | 0 | 21 | mA | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Current Input – Voltage Level | 0 | 36 | Vdc | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Digital Type Input – Voltage Level | 0 | 36 | Vdc | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PWM Duty Cycle | 0 | 100 | % | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PWM Frequency | 50 | 10 000 | Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PWM Voltage pk - pk | 0 | 36 | V dc | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| RPM Frequency | 50 | 10 000 | Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input Accuracy and Resolution | <table border="1"> <thead> <tr> <th colspan="3">Table 2.0. Input Accuracy</th> </tr> <tr> <th>Input Type</th> <th>Accuracy</th> <th>Resolution</th> </tr> </thead> <tbody> <tr> <td>Voltage</td> <td>+/- 1%</td> <td>1 [mV]</td> </tr> <tr> <td>Current</td> <td>+/- 1%</td> <td>1 [uA]</td> </tr> <tr> <td>Resistive</td> <td>+/- 1%</td> <td>1 [Ω]</td> </tr> <tr> <td>PWM</td> <td>+/- 1% (<5kHz) +/- 2% (>5kHz)</td> <td>0.01 [%]</td> </tr> </tbody> </table> | Table 2.0. Input Accuracy | | | Input Type | Accuracy | Resolution | Voltage | +/- 1% | 1 [mV] | Current | +/- 1% | 1 [uA] | Resistive | +/- 1% | 1 [Ω] | PWM | +/- 1% (<5kHz) +/- 2% (>5kHz) | 0.01 [%] | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Table 2.0. Input Accuracy | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input Type | Accuracy | Resolution | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Voltage | +/- 1% | 1 [mV] | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Current | +/- 1% | 1 [uA] | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Resistive | +/- 1% | 1 [Ω] | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PWM | +/- 1% (<5kHz) +/- 2% (>5kHz) | 0.01 [%] | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Grounds | 7 universal signal input grounds 1 PWM/digital signal ground 1 +5V reference ground | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Reference Voltages | 1 +5V, 100 mA maximum Regulation at +/-0.5% accuracy is provided. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Output Specifications

| Proportional Outputs | <p>8 High side sourcing up to 2.5A Half-bridge output, current sensing, grounded load High frequency PWM (25 kHz)</p> <p>Independent outputs (0...2.5A) are user selectable as:</p> <ul style="list-style-type: none"> • Output Disable • Proportional Current (See Table 3.0.) • Hotshot Digital • PWM Duty Cycle • Proportional Voltage • On/Off Digital (Normal, Inverse, Latched, Blinking Logic are selectable.) <p>Current outputs: 1 mA resolution Voltage outputs: 0.1V resolution PWM outputs: 0.1% resolution Digital on/off: Sourcing from power supply or output off (Note: Load at supply voltage must not draw more than 2.5A.) NB. The maximum total current draw permitted on the power supply input pins is 15 Amps @ 24Vdc, at one time.</p> <table border="1"> <thead> <tr> <th colspan="2">Table 3.0: Proportional Output Adjustments</th> </tr> <tr> <th>Adjustable Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Output Current Adjustments</td> <td>0- I_{max} (2.5A) Both minimum and maximum current settings are user configurable.</td> </tr> <tr> <td>Superimposed Dither</td> <td>Dither adjustments are configurable for each channel. <u>Dither Amplitude:</u> 0 mA (factory default) Adjustable from 0-500 mA. <u>Dither Frequency:</u> 200 Hz (factory default) Adjustable from 50-400 Hz.</td> </tr> <tr> <td>Ramp Rates</td> <td>Ramp adjustments are configurable for each channel. 1,000 mSec (default) Adjustable from 0 to 10,000 mSec (10 sec.).</td> </tr> </tbody> </table> | Table 3.0: Proportional Output Adjustments | | Adjustable Parameter | Description | Output Current Adjustments | 0- I _{max} (2.5A) Both minimum and maximum current settings are user configurable. | Superimposed Dither | Dither adjustments are configurable for each channel. <u>Dither Amplitude:</u> 0 mA (factory default) Adjustable from 0-500 mA. <u>Dither Frequency:</u> 200 Hz (factory default) Adjustable from 50-400 Hz. | Ramp Rates | Ramp adjustments are configurable for each channel. 1,000 mSec (default) Adjustable from 0 to 10,000 mSec (10 sec.). |
|--|---|--|--|----------------------|-------------|----------------------------|--|---------------------|--|------------|--|
| Table 3.0: Proportional Output Adjustments | | | | | | | | | | | |
| Adjustable Parameter | Description | | | | | | | | | | |
| Output Current Adjustments | 0- I _{max} (2.5A) Both minimum and maximum current settings are user configurable. | | | | | | | | | | |
| Superimposed Dither | Dither adjustments are configurable for each channel. <u>Dither Amplitude:</u> 0 mA (factory default) Adjustable from 0-500 mA. <u>Dither Frequency:</u> 200 Hz (factory default) Adjustable from 50-400 Hz. | | | | | | | | | | |
| Ramp Rates | Ramp adjustments are configurable for each channel. 1,000 mSec (default) Adjustable from 0 to 10,000 mSec (10 sec.). | | | | | | | | | | |
| Output Accuracy | Current outputs +/-1% | | | | | | | | | | |

| | |
|------------------|---|
| | Voltage outputs +/- 5% PWM outputs +/-0.1% |
| Digital Outputs | 4 High side switching outputs up to 3A (sourcing) Load current monitoring capability Fully protected |
| Protection | Overcurrent protection is provided on all outputs. Short circuit protection is provided on all outputs. Overvoltage and undervoltage protection is provided on all outputs. |
| Error Conditions | If an error on the input is detected, the output of the controller shuts off. |

General Specifications
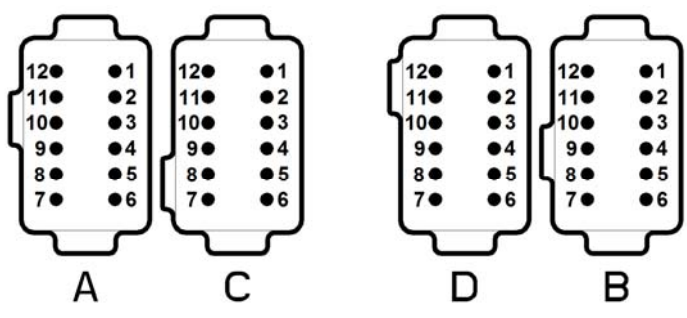
| | |
|------------------------|---|
| Operating Conditions | -40 to 85°C (-40 to 185°F) |
| Weight | 1.35 lbs. (0.612 kg) – Contact Axiomatic. |
| Protection | IP67; Unit is conformal coated within the housing. |
| Microprocessor | STM32F207ZG (AX0204x0-xx) / STM32F407ZG (AX0204x0A) |
| Quiescent Current Draw | 60 mA @ 24Vdc; 81 mA @ 12Vdc |
| CAN Interface | 1 CAN port (SAE J1939) Models: AX020400 250 kbps baud rate AX020400-01 500 kbps AX020400-02 1 Mbps AX020400A (Auto Baud Rate) |
| Control Logic | Standard embedded software is provided and is configurable using the Electronic Assistant® (EA). Any of the outputs can be configured to use any of the inputs either as a control signal or an enable signal as well as use the CAN network data. The user can configure the control logic using the Function Blocks. The EA will allow for the selection of any ECN Address from 0 to 253 (default is 128). Setpoint configuration files can be saved and used to program additional controllers. |
| User Interface | User configuration and diagnostics are provided with the Axiomatic Electronic Assistant®, p/n AX070502. The Axiomatic Service Tool is a <i>Windows</i> -based graphical user interface that allows easy configuration of the controller setpoints. |
| Simulink® | Models AX020400(A) and AX020410(A) were developed using Simulink®. Simulink® is a model-based design tool from Mathworks®. Using Simulink®, the OEM machine designer may develop their own custom firmware for the Axiomatic module. |
| Diagnostics | Diagnostics messages are provided over the CAN network for the status of inputs or outputs. Each input or output channel could be configured to send diagnostic messages to the network if the I/O goes out of range. In addition to the I/O channels, one other type of fault can be reported to the network using diagnostic messaging, which is an Over Temperature fault (of the controller processor.) The controller stores diagnostic data in a non-volatile log. |
| Electrical Connections | 48 pin Deutsch IPD connector P/N: DT13-48PABCD-R015  Refer to the Installation Section for the electrical pinout. |
| Mating Plugs | Mates with the following Deutsch IPD P/N's. DT06-12SA Plug, DT 12 Way A Key DT06-12SB Plug, DT 12 Way B Key DT06-12SC Plug, DT 12 Way C Key |

| | |
|--------------------------|--|
| | DT06-12SD Plug, DT 12 Way D Key A set of these mating plugs is available, ordering P/N: AX070123. |
| Packaging and Dimensions | High Temperature Nylon housing, Deutsch IPD P/N: EEC-5X650B 4.03 x 4.25 x 1.68 inches 102.44 x 107.96 x 42.67 mm L x W x H including integral connector |
| Installation | For mounting information, refer to the dimensional drawing in the installation section. Mounting holes sized for ¼ inch or M6 bolts. The bolt length will be determined by the end-user's mounting plate thickness. The mounting flange of the controller is 0.25 inches (6.35 mm) thick. If the module is mounted without an enclosure, it should be mounted to reduce the likelihood of moisture entry. Install the unit with appropriate space available for servicing and for adequate wire harness access (6 inches or 15 cm) and strain relief (12 inches or 30 cm). Wires should be of the appropriate gauge to meet requirements of applicable electrical codes and suit the specifications of the connector. The module must be mounted in an enclosure in hazardous locations. All field wiring should be suitable for the operating temperature range of the module. All chassis grounding should go to a single ground point designated for the machine and all related equipment. |
| Network Termination | It is necessary to terminate the network with external termination resistors. The resistors are 120 Ohm, 0.25W minimum, metal film or similar type. They should be placed between CAN_H and CAN_L terminals at both ends of the network. |
| Simulink® Block Library | Both models AX020400(A) and AX020410(A) were developed using Simulink®. Simulink® is a model-based design tool from Mathworks®. Using Simulink®, the OEM machine designer may simulate their control system with the Axiomatic module included. This permits fine tuning of the design parameters and testing of functionality prior to machine prototype installation. The Hardware Interface Library for Simulink® is available from Axiomatic. |
| Approvals | CE |
| Vibration | MIL-STD-202G, Test 204D and 214A (Sine and Random) 10 g peak (Sine), 7.68 Grms peak (Random) |
| Shock | MIL- STD-202G, Method 213B, test condition A 50g |



OUR PRODUCTS

Actuator Controls
Automotive Ethernet Converters
Battery Chargers
CAN bus Controls
CAN/Wifi, CAN/Bluetooth
Current/Voltage Converters
DC/DC Power Converters
Engine Temperature Scanners
Ethernet/CAN Converters, Switches
Fan Drive Controllers
Gateways, CAN/Modbus Protocols
Gyroscope Inclinometers
Hydraulic Valve Controllers
Inclinometers, Triaxial
I/O Controls
LVDT Simulators
Machine Controls
Modbus Controls
Motor Controls
Power Supplies
PWM Signal Converters/Isolators
Resolver Signal Conditioners
Service Tools
Signal Conditioners, Converters
Strain Gauge CAN Controls
Surge Suppressors

OUR COMPANY

Axiomatic provides electronic machine controls, components, and systems to the off-highway, commercial vehicle, electric vehicle, power generator set, material handling, renewable energy and industrial OEM markets.

We innovate with engineered and off-the-shelf machine controls that add value for our customers. We emphasize service and partnership with our customers, suppliers, and employees to build long term relationships and mutual trust.

QUALITY DESIGN AND MANUFACTURING

Axiomatic in Canada operates an ISO 9001:2015 registered design and manufacturing facility.

SERVICE

All products to be returned to Axiomatic require a Return Materials Authorization Number (RMA#). Please request an RMA# from sales@axiomatic.com.

Please provide the following information when requesting an RMA number:

- Serial number, part number
- Axiomatic invoice number and date
- Hours of operation, description of problem
- Wiring set up diagram, application
- Other comments as needed

All products should be serviced by Axiomatic. Do not open the product and perform the service yourself.

DISPOSAL

Axiomatic products are electronic waste. Please follow your local environmental waste and recycling laws, regulations and policies for safe disposal or recycling of electronic waste.

WARRANTY, APPLICATION APPROVALS/LIMITATIONS

Axiomatic Technologies Corporation reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. Users should satisfy themselves that the product is suitable for use in the intended application. All our products carry a limited warranty against defects in material and workmanship. Please refer to our Warranty, Application Approvals/Limitations and Return Materials Process as described on www.axiomatic.com/service.html.

CONTACTS

Axiomatic Technologies Corporation
5915 Wallace Street
Mississauga, ON
CANADA L4Z 1Z8
TEL: +1 905 602 9270
FAX: +1 905 602 9279
www.axiomatic.com

Axiomatic Technologies Oy
Höytämöntie 6
33880 Lempäälä
FINLAND
TEL: +358 103 375 750
FAX: +358 3 3595 660
www.axiomatic.fi